

## F.A.Q' s for TEW-610APB

**Q:** How do I configure the Access Point through the web-based configuration?

**A:** Open your web browser and type the IP address of the TEW-610APB in the address bar. The default IP address is 192.168.0.100. At the login, enter your username (admin) and password (admin).

**Q:** What is the default IP address of my Access Point?


**A:** The default IP address of the TEW-610APB is 192.168.0.100.

**Q:** How do I change the IP address of my TEW-610APB?

**A:**

1) Open your web browser and type the IP address of the TEW-610APB in the address bar. The default IP address is 192.168.0.100. At the login, enter your username (admin) and password (admin).

2) Click **Admin** on the left hand side.

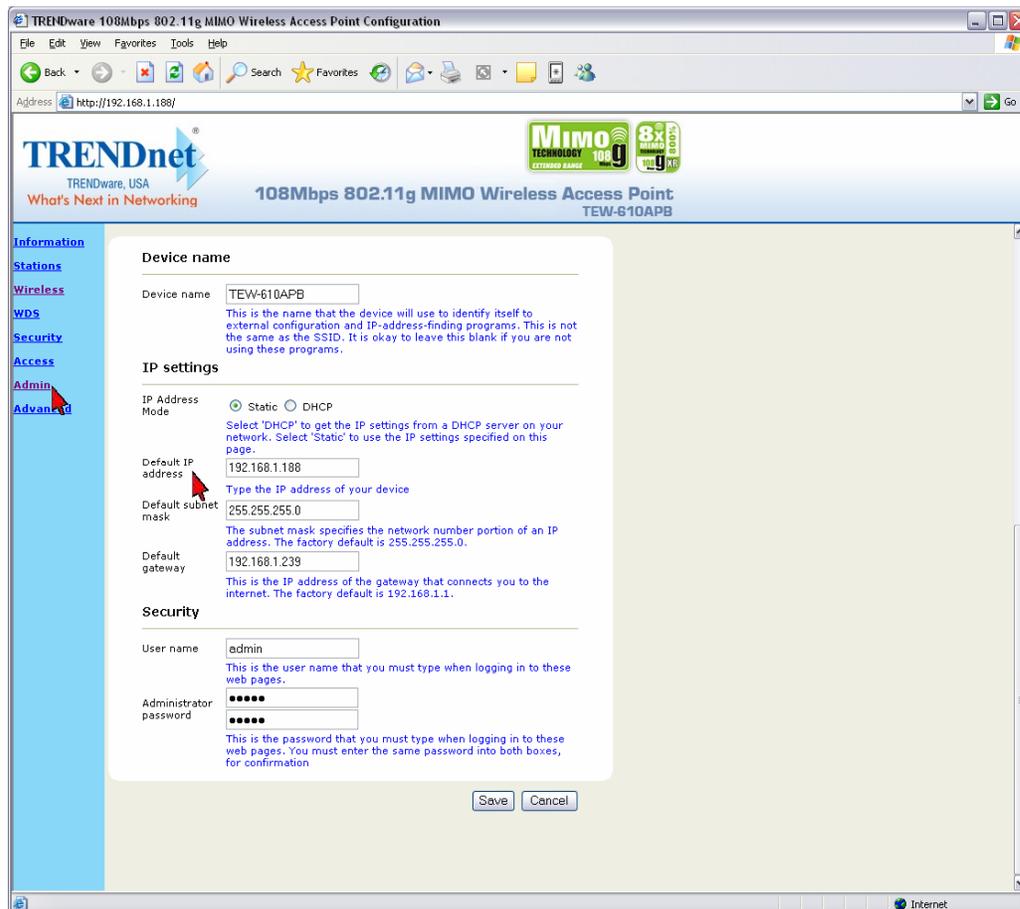

3) Change the IP address to the desired IP address and click **Save**.

**Q:** What is the default username and password for the TEW-610APB?


**A:** The default username and password are both “admin”.

**Q:** How do I change the password and username on my TEW-610APB?

**A:**

1) Open your web browser and type the IP address of the TEW-610APB in the address bar. The default IP address is 192.168.0.100. At the login, enter your username (admin) and password (admin).

2) Click **Admin** on the left hand side.

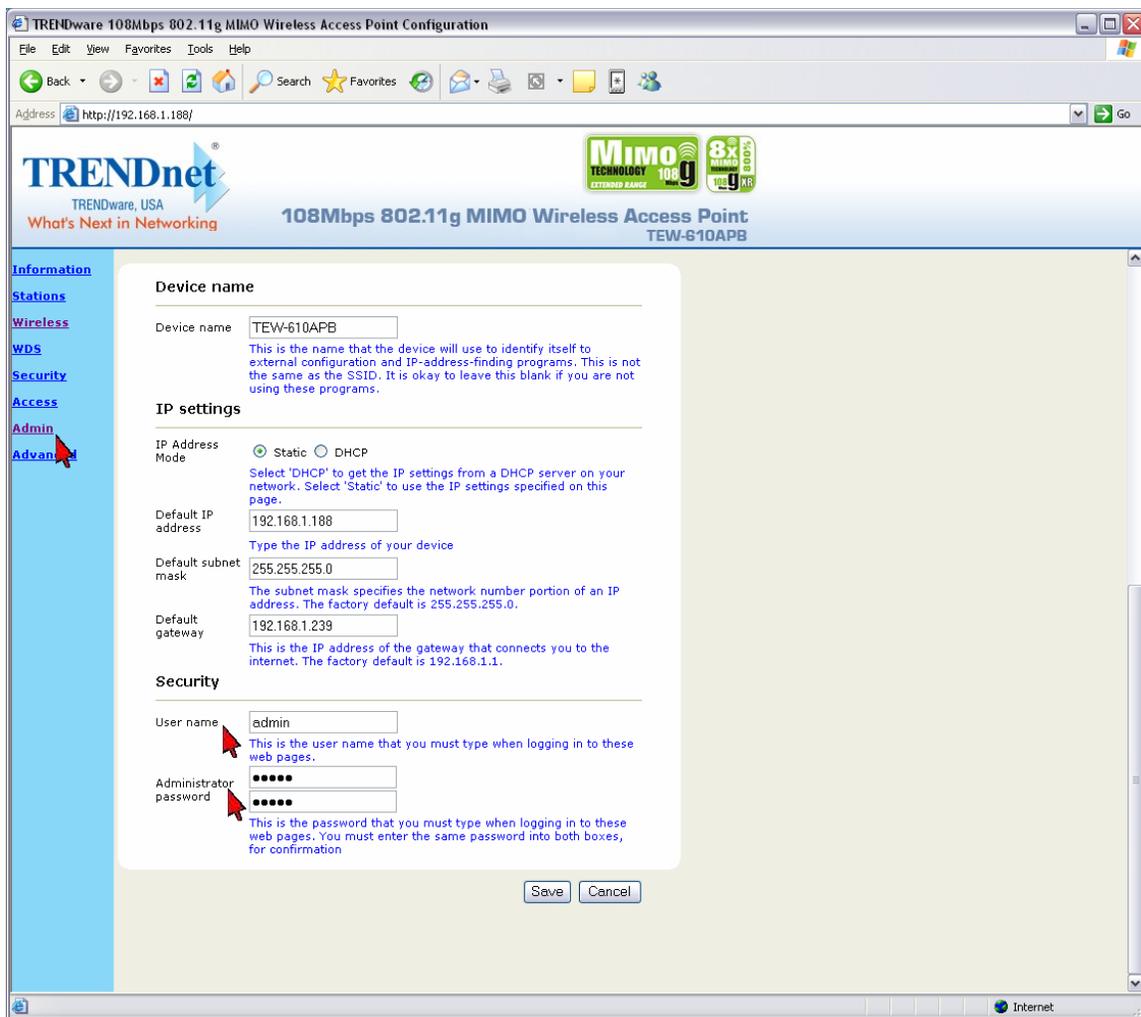

3) Enter the new Username and/or Administrator Password. Click **Save**.

**Q:** What can I do if I forgot my password or want to reset back to factory defaults.

Locate the reset button on the back of the unit. Press and hold it in for approximately 15 seconds.

**Q:** How do I upgrade the firmware on my Access Point?


**A:**

**DO NOT upgrade firmware on any TRENDnet product using a wireless connection.** Firmware upgrades over wireless connections may damage the product. Please perform firmware upgrades with "wired" network connections only.

Click [here](#) to download the firmware. Save it to your desktop and extract it.

1) Open your web browser and type the IP address of the TEW-610APB in the address bar. The default IP address is 192.168.0.100. At the login, enter your username (admin) and password (admin).

2) Click **Admin** on the left hand side.

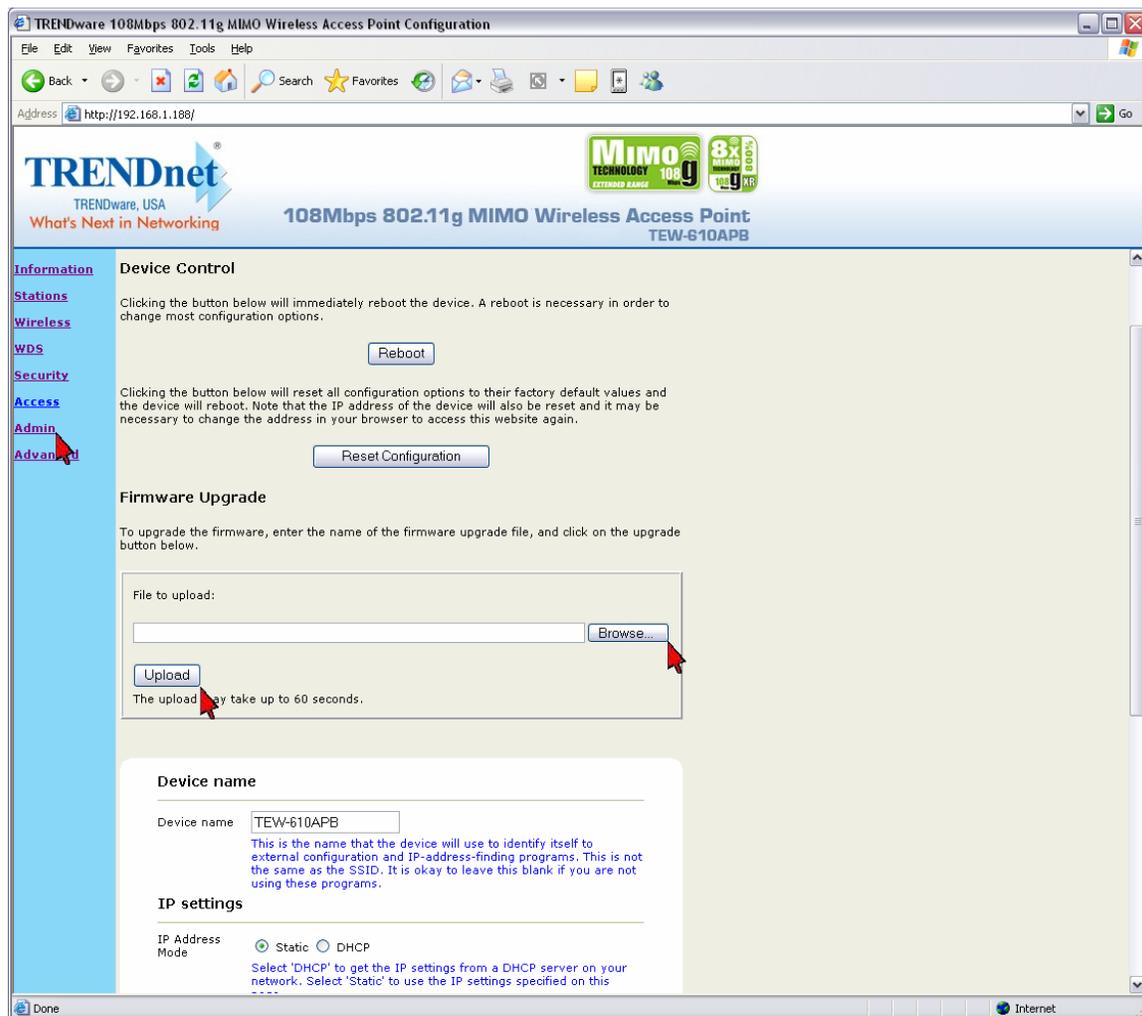

3) Click **Browse** next to the box under the **Firmware Upgrade** section. Locate and select the firmware file that you previously downloaded and extracted.


4) Click **Upgrade**. It will take approximately 30 seconds to upgrade the firmware and the access point to restart.

**Do NOT interrupt the firmware update process. Doing so may damage the product.**

**Q:** How do I enable encryption on my Access Point?

**A:**

- 1) Open your web browser and type the IP address of the TEW-610APB in the address bar. The default IP address is 192.168.0.100. At the login, enter your username (admin) and password (admin).
- 2) Click **Security** on the left hand side.

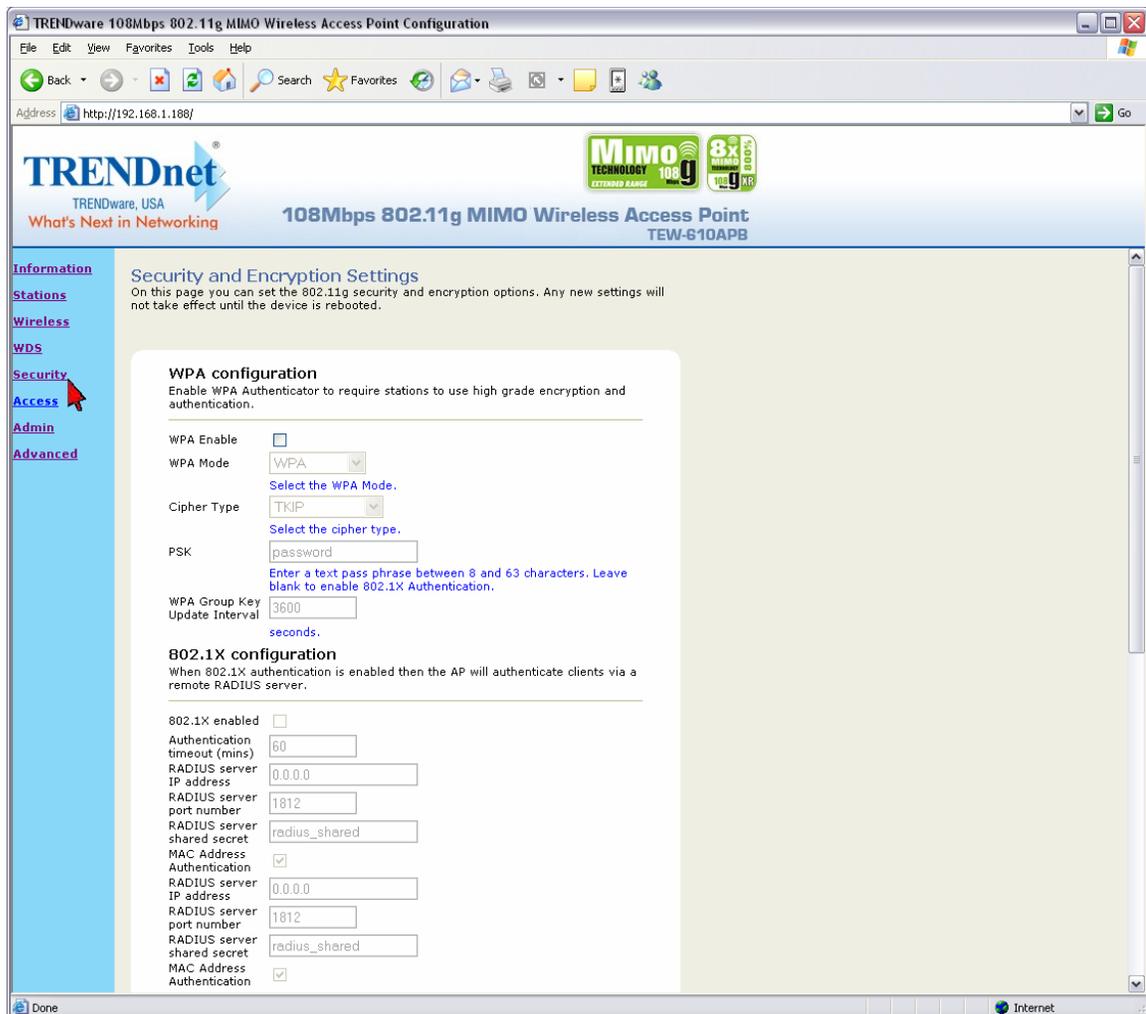


3) Choose your Authentication type and enter your key settings. Click **Save**.

**Q:** Where can I find the MAC address of my Access Point?

A:

- 1) Open your web browser and type the IP address of the TEW-610APB in the address bar. The default IP address is 192.168.0.100. At the login, enter your username (admin) and password (admin).
- 2) Click on the Status tab at the top of the page. It is located directly across from LAN MAC:

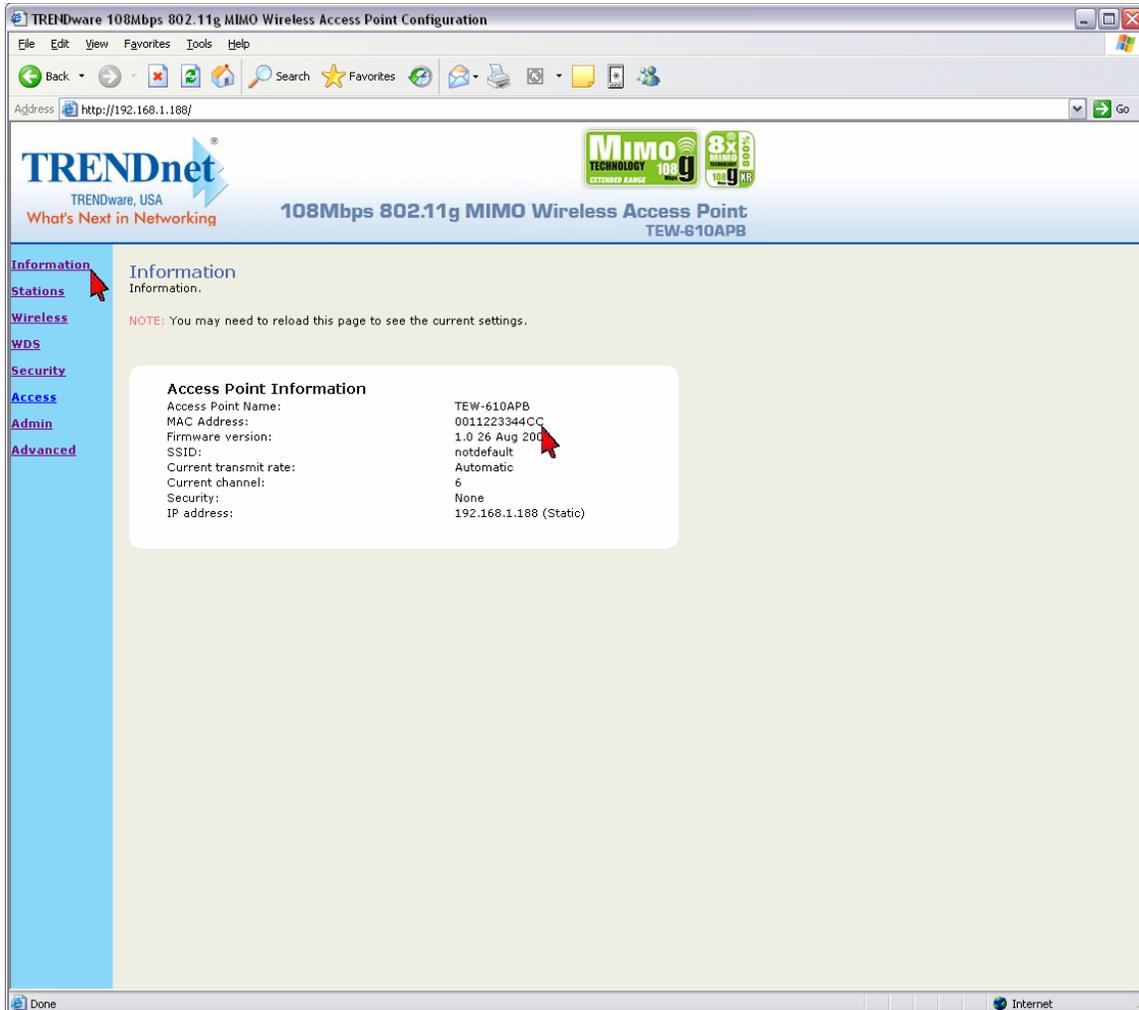


**Q:** How do I configure my TEW-610APB in WDS mode?

The TEW-610APB uses WDS (Wireless Distribution System). The channel and SSID on the remote Access Points must be the same as the TEW-610APB. The remote Access Point must also support WDS.

**Note: WPA encryption is not supported on WDS links.**

- 1) Open your web browser and type the IP address of the TEW-610APB in the address bar. The default IP address is 192.168.0.100. At the login, enter your username (admin) and password (admin).
- 2) Click **WDS** on the left hand side.

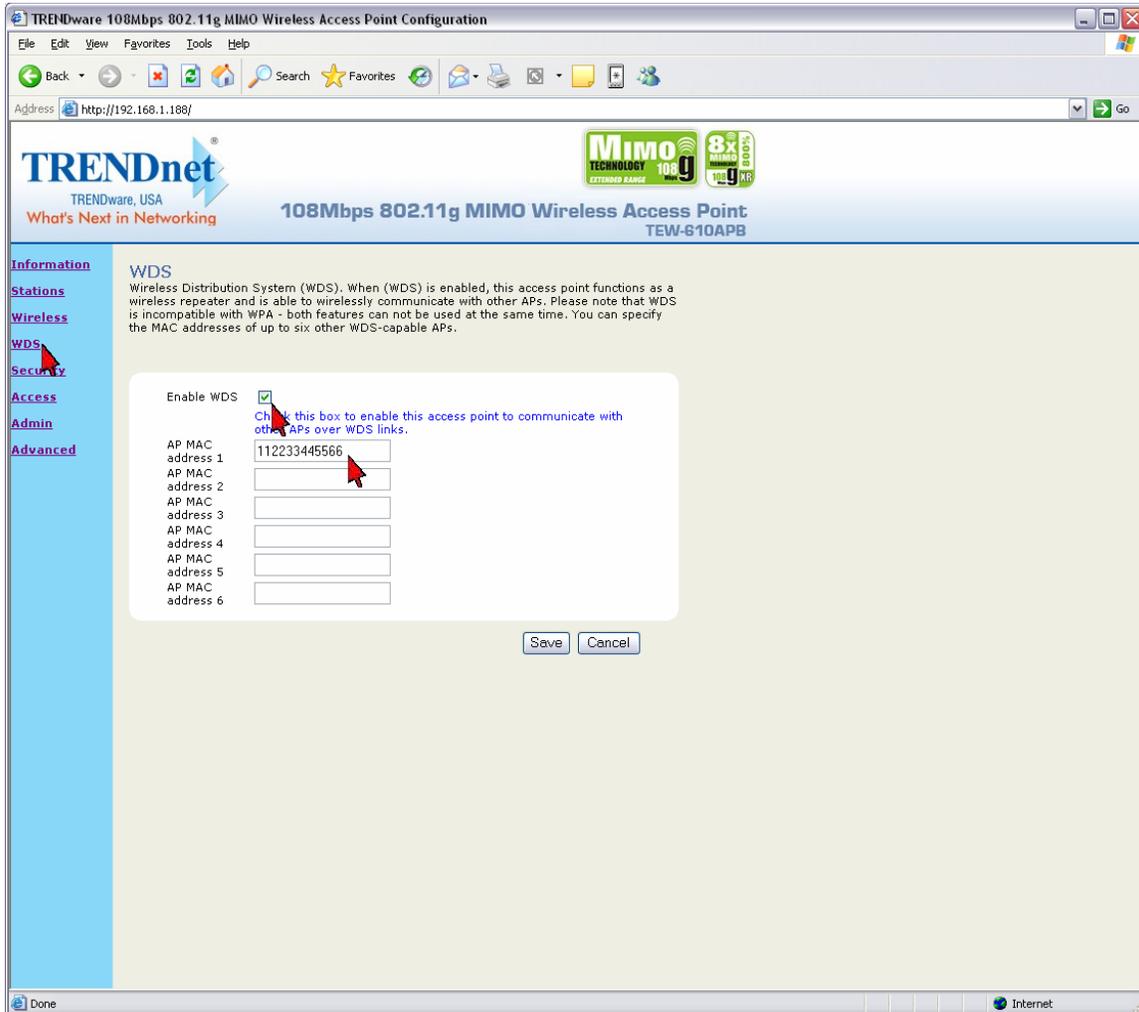


- 3) Single click the **Enable WDS** check box to enable WDS.
- 4) Enter the remote Access Point's MAC address into the **AP MAC Address** field and click **Save**.

**Q:** How do I change the channel of my Access Point?

**A:**

- 1) Open your web browser and type the IP address of the TEW-610APB in the address bar. The default IP address is 192.168.0.100. At the login, enter your username (admin) and password (admin).
- 2) Click **Wireless** on the left hand side.

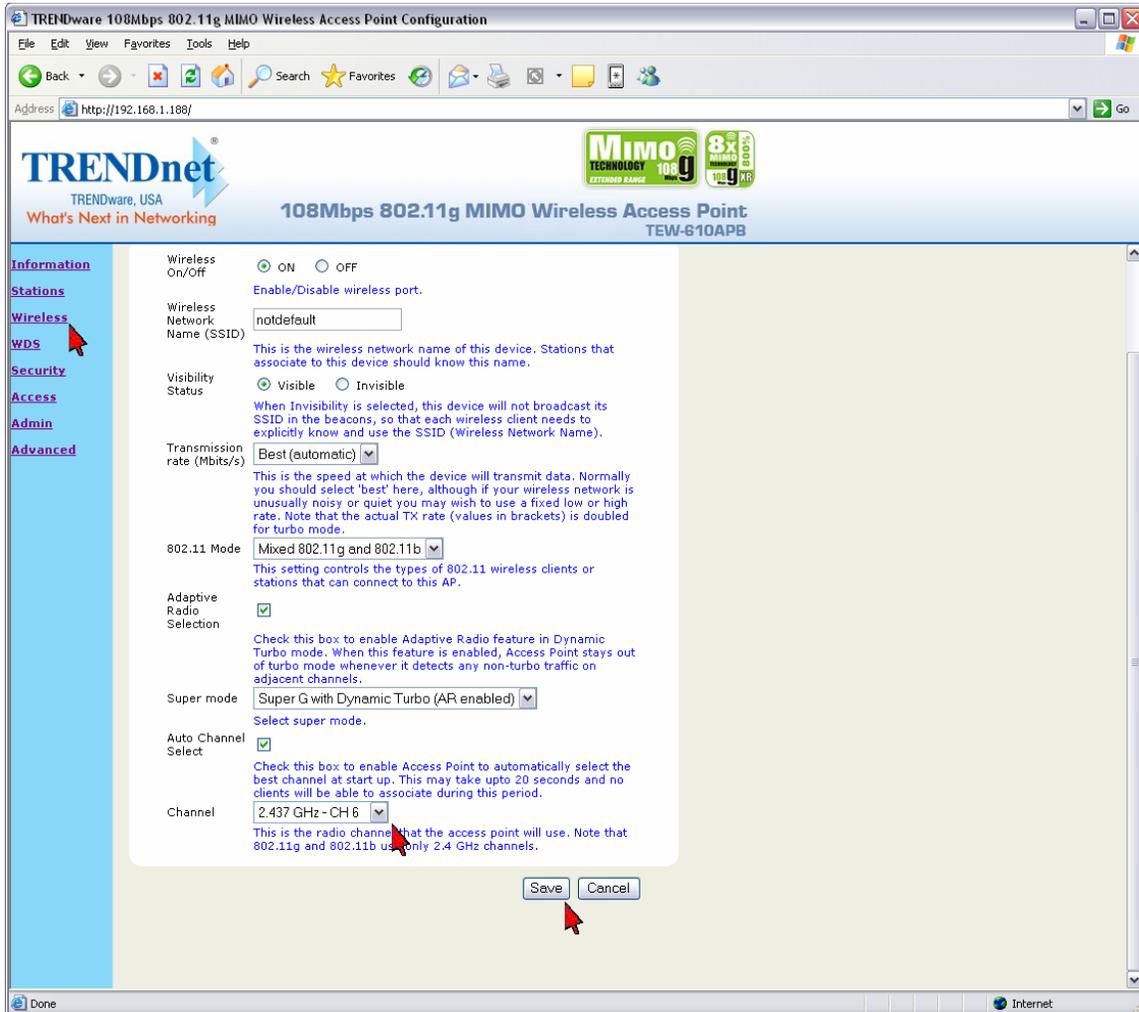


- 3) Choose a different channel from the drop down box next to the Channel field and click **Save**.

**Q:** How do I change the SSID of my Access Point?

**A:**

- 1) Open your web browser and type the IP address of the TEW-610APB in the address bar. The default IP address is 192.168.0.100. At the login, enter your username (admin) and password (admin).
- 2) Click **Wireless** on the left hand side.

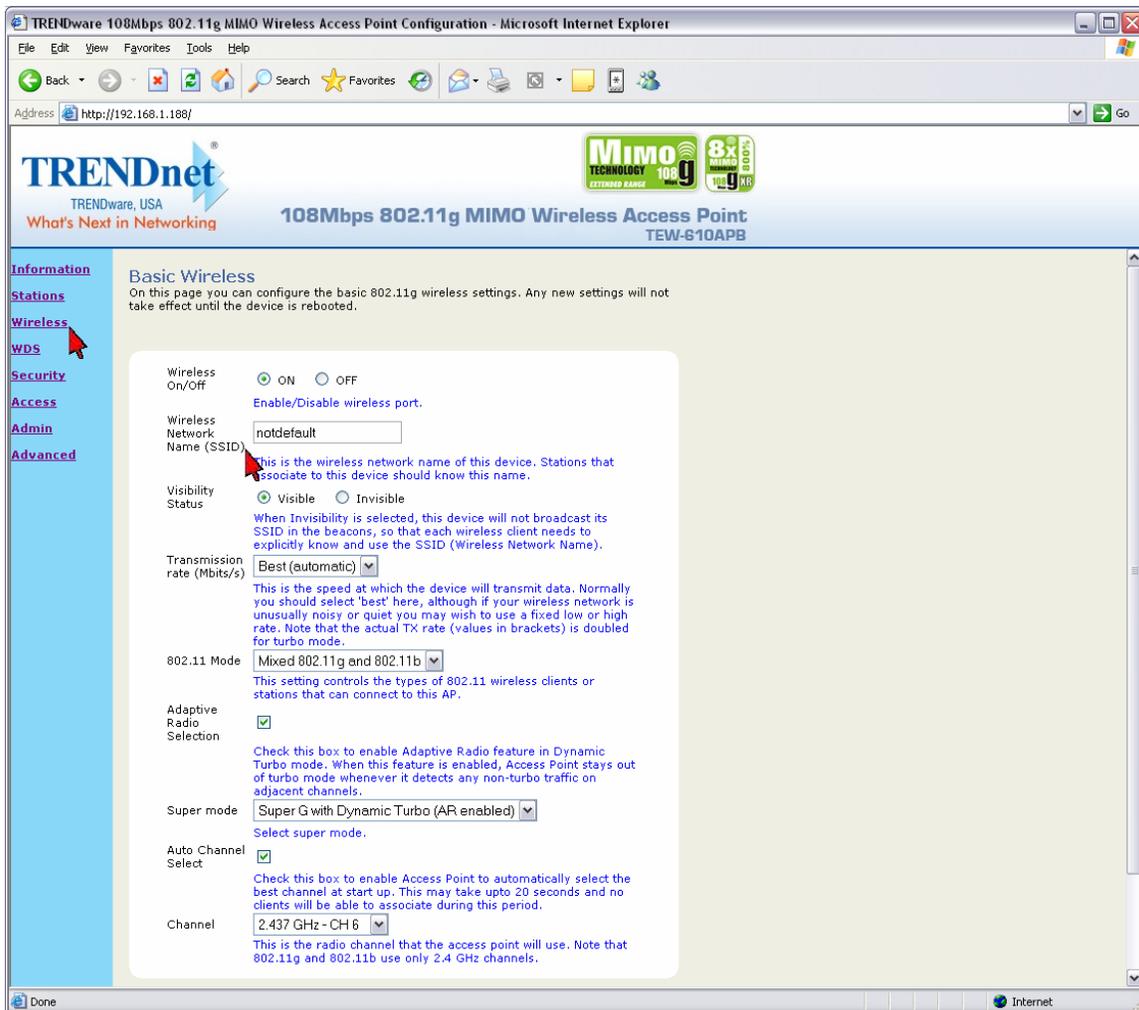


- 3) Enter in your desired SSID in the **Wireless Network Name (SSID)** field. Click **Save**.

Q: How do I enable Super G mode on my access point?

A:

- 1) Open your web browser and type the IP address of the TEW-610APB in the address bar. The default IP address is 192.168.0.100. At the login, enter your username (admin) and password (admin).
- 2) Click **Wireless** on the left hand side.

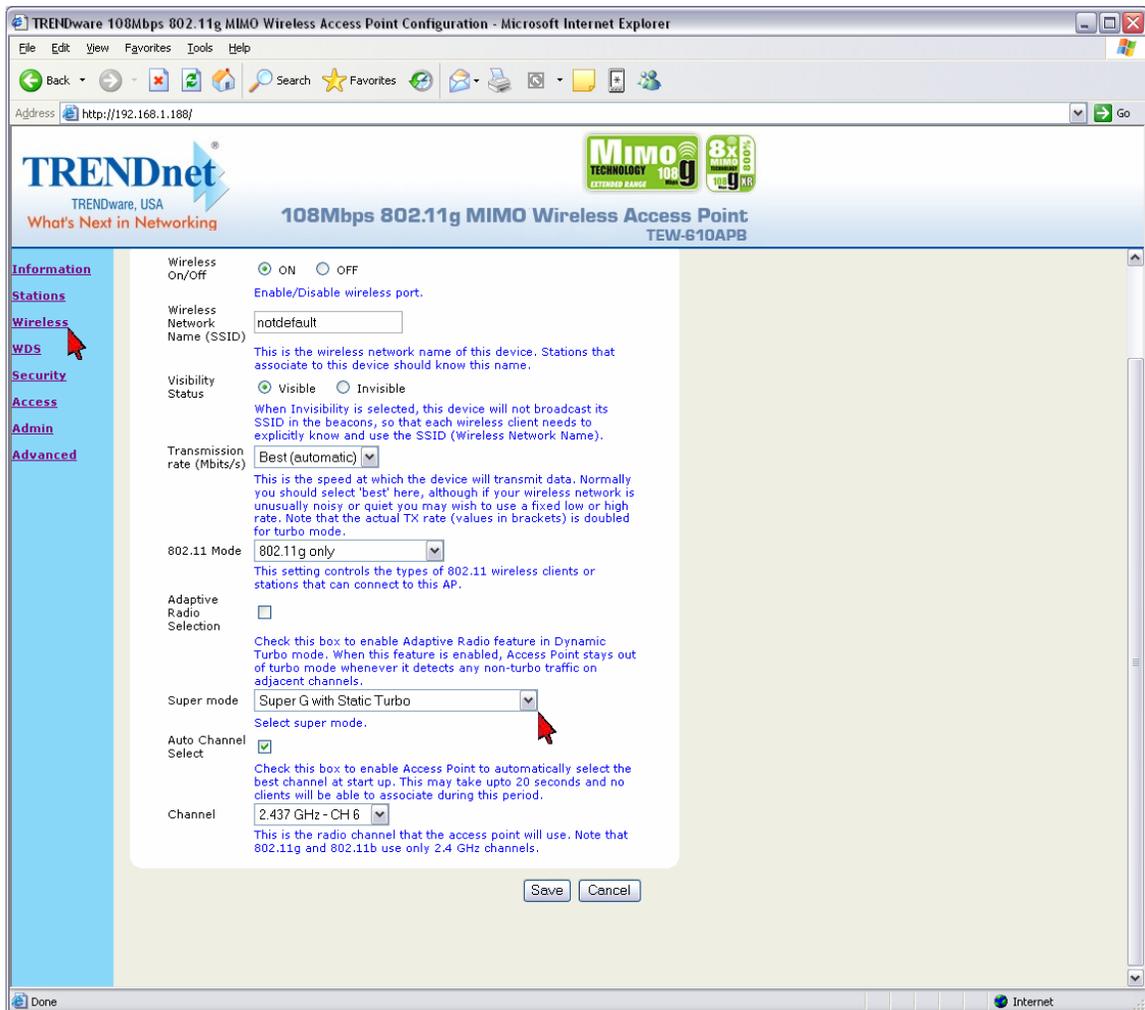

- 3) Choose the Super G mode that you want to use next to the **Super G** field. Click **Save**.

**Note: Super G mode requires that you use channel 6. Super G mode with Static Turbo requires that that the 802.11 mode is set to 802.11g only and that Adaptive Radio Selection is disabled. The Adaptive Radio Selection is used with Super G with Dynamic Turbo (AR enabled) mode.**