

TEW-624UB(B1) /TEW-644UB Microsoft Windows 7 Installation

Minimum System Requirements

- USB Port: 1.1 or 2.0
- CPU: 1GHz or above
- Memory: 1GB RAM or above

Note:

1. DO NOT install the TEW-624UB/TEW-644UB in the computer until instructed to do so.
2. You will need to uncompress the drivers after you download it.
3. These instructions are only for TEW-624UB version B1 and TEW-644UB. TEW-624UB version A1 does not support Windows 7.


1. Go to <http://www.trendnet.com/downloads>. From the Download by Product dropdown list, scroll down until you see TEW-624UB or TEW-644UB. Then click Go. Select the hardware version **B1.xR**, click the driver link and save the drivers to your computer.

2. Unzip the file and double click **autorun.exe**



3. Click on the **Install Drivers & Utility**



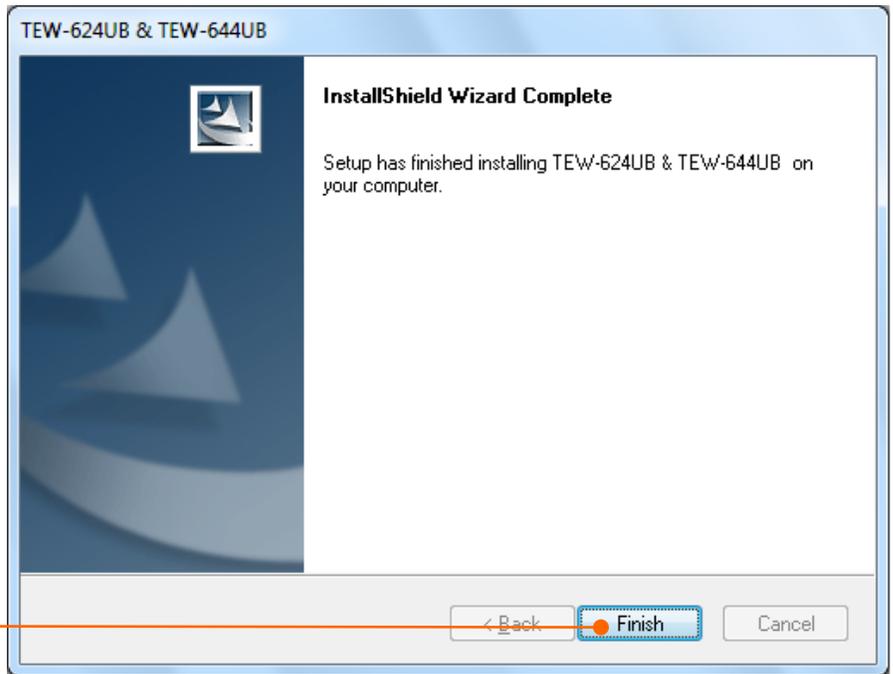

4. Follow the InstallShield Wizard and then click **Finish**.

5. Connect the wireless adapter to an available USB port on your computer.




6. Drivers will install automatically.

Your installation is now complete.


For detailed information regarding the TEW-624UB/TEW-644UB configuration and advanced settings, please refer to the User's Guide included on the Utility & Driver CD-ROM or TRENDnet's website at www.trendnet.com

Using the Wireless Adapter


1. On the bottom right-hand corner of the screen, click on the **TEW-624UB & TEW-644UB manager icon**.

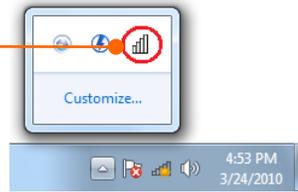

2. Click **Site Survey**, select the SSID and then click **Connect**.

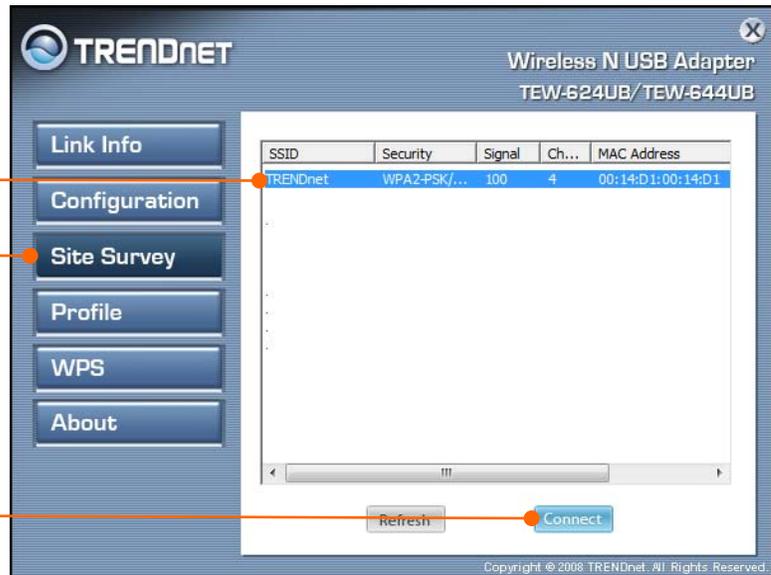

3. If Encryption is enabled on your access point, select the **Authentication** type, select the **Encryption** mode, enter the encryption key and then click **Apply**.

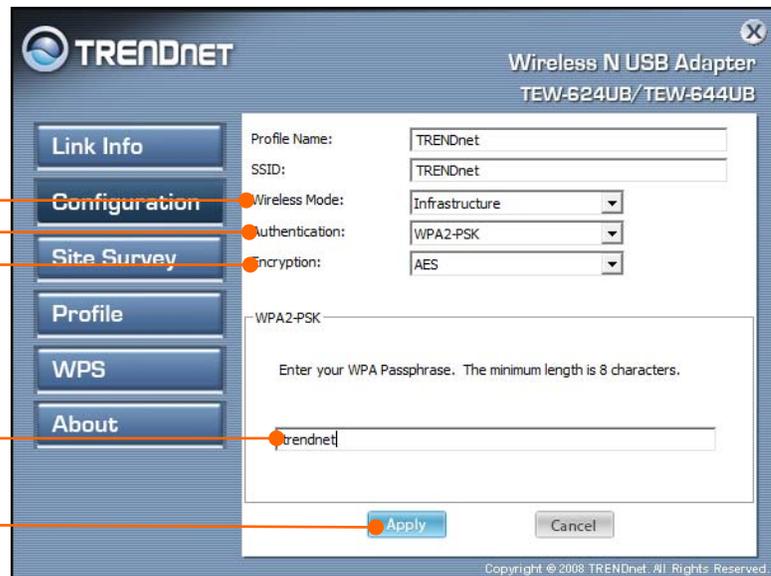

Wireless configuration is now complete.

For detailed information regarding the TEW-624UB_644UB configuration and advanced settings, please refer to the User's Guide included on the Utility & Driver CD-ROM or TRENDnet's website at www.trendnet.com