



User's Guide



TK-208K

Table of Contents

| | |
|---|---|
| Français | 1 |
| 1. Avant de commencer | 1 |
| 2. Comment effectuer les connexions | 2 |
| 3. Utilisation du Switch KVM | 4 |
| Specifications | 6 |
| Troubleshooting | 7 |


1. Avant de commencer



Configuration du système

- Moniteur compatible VGA ou r SVGA
- Clavier PS/2 avec fiche Mini-Din à 6 broches
- Souris PS/2 avec fiche Mini-Din à 6 broches
- Diffuseurs
- Micro

Application

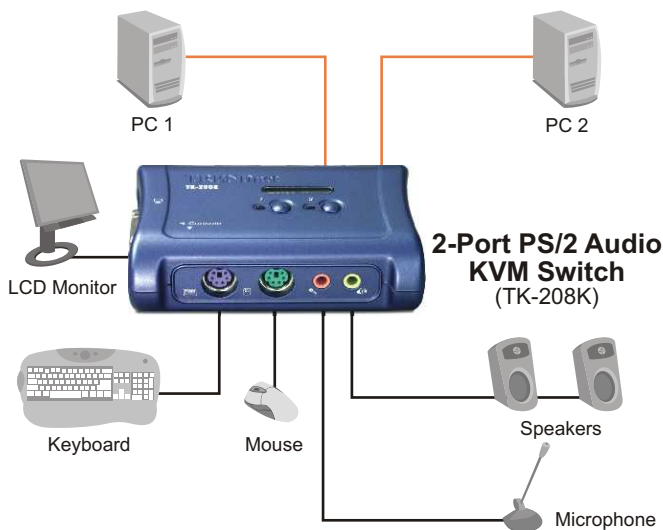

2. Comment effectuer les connexions


1. Branchez le moniteur au port console du switch.



2. Branchez le clavier, la souris, le micro et les diffuseurs au port console du switch.



3. Utilisez les câbles KVM fournis pour brancher votre PC à votre switch KVM.

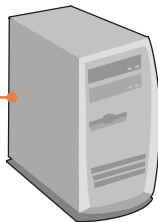

4. Branchez l'autre extrémité du câble au port PC du switch.



5. Branchez l'autre extrémité du câble Audio au port Audio du switch.



6. Allumez tous les PC connectés.

L'installation est maintenant complète.

3. Utilisation du switch KVM

Touches d'accès rapide

 
Un raccourci clavier consiste en une combinaison de trois touches :

Accès rapide = ScrLk + ScrLk + Touche(s)


Après avoir appuyé sur la touche ScrLk, vous disposez de 2 secondes pour appuyer à nouveau sur cette dernière. Vous disposez alors de 2 secondes supplémentaires pour appuyer sur une touche de commande. Si vous n'enfoncez aucune touche dans les deux secondes, le mode « accès rapide » est annulé.

Remarque

1. Les commandes de raccourci ne fonctionnent qu'avec les touches numériques de la rangée supérieure
2. Lorsque la liaison des permutations de ports PC et Audio/Micro est activée par un raccourci clavier, toutes les permutations PC et Audio/Micro sont reliées.
3. Pour les systèmes d'exploitation non PnP (Linux, Windows NT 4.0), veuillez utiliser les commandes suivantes pour réinitialiser les paramètres de la souris.

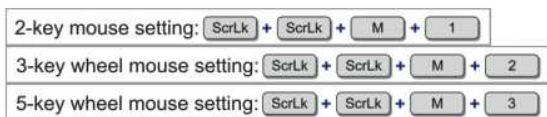

4. Remarque à l'usage des utilisateurs Mac : Pour passer d'un clavier PC standard à un clavier MAC :

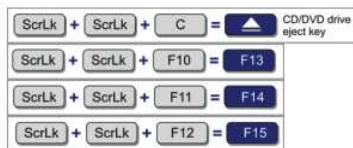

Convention concernant les touches de raccourci :

La séquence signifie que vous devez enfoncer chaque touche consécutivement et non simultanément.

| Références rapides pour le TK-208K | | |
|--|--|--|
| Commande | Combinaison de touches | Description |
| Sélection du PC | ScrLk + ScrLk + X <small>x = 1 - 2 pour le numéro du canal PC</small> | Sélectionne le canal PC actif. |
| Sélection du canal Audio/Micro | ScrLk + ScrLk + FX <small>(Fx est une touche de fonction) x = 1 - 2 pour le numéro du canal Audio/Micro</small> | Sélection du canal Audio/Micro actif |
| Lien entre la permutation PC et Audio/Micro | ScrLk + ScrLk + Q | Permet de relier la permutation des ports PC et des ports Audio/Micro |
| Suppression du lien entre la permutation PC et Audio/Micro | ScrLk + ScrLk + W | Supprime la connexion de la permutation des ports PC et des ports Audio/Micro |
| Réinitialisation des commandes souris/clavier | ScrLk + ScrLk + ↑ <small>(Flèche haut)</small> | Sélectionnez le prochain ordinateur supérieur disponible |
| Canal PC supérieur suivant | ScrLk + ScrLk + ↓ <small>(Flèche bas)</small> | Sélectionnez le prochain ordinateur inférieur disponible. |
| Réinitialisation des commandes souris/clavier | ScrLk + ScrLk + End | Réinitialise la souris et le clavier côté PC. (fonctionne exclusivement sur un système d'exploitation non PnP) |
| Recherche automatique | ScrLk + ScrLk + S | Recherche automatique parmi tous les canaux pour un aperçu rapide à l'écran de chaque canal. (chaque scan = 10 secondes) |
| Arrêt de la recherche automatique | Press any key on keyboard | Met fin à la recherche automatique. |

Specifications

| | |
|---|---|
| Computer Connections: | 2 |
| KVM Cable: | 2 Sets of 1.2M (4ft) KVM & Audio Cables |
| Cable Connectors: | <u>KVM</u> |
| | To Console: 1 x 15-pin HDB type VGA (Male) |
| | To PC: <ul style="list-style-type: none"> • 1 x PS/2 Keyboard 6-pin Mini Din (Male) • 1 x PS/2 Mouse 6-pin Mini Din (Male) • 1 X VGA HDB 15-pin (Male) |
| | <u>Audio</u> |
| | To Console: 2 x USB (Type Mini B) |
| To PC: <ul style="list-style-type: none"> • 1 x 3.5mm audio in/out jack • 1 x 3.5mm microphone in/out jack | |
| Console Port Connectors: | Keyboard: PS/2 Keyboard 6-pin Mini Din (Female) Mouse: PS/2 Keyboard 6-pin Mini Din (Female) Monitor: VGA HDB 15-pin (Female) Speaker: 3.5mm audio in/out jack Microphone: 3.5mm microphone in/out jack |
| Port Selection: | Push Button and Hot-Key Commands |
| Auto-Scan Intervals: | 10 seconds |
| Keyboard State: | Saved and Restored |
| Power Type: | PS/2 Interface Power |
| Dimensions: | 95 x 65 x 30 mm (3.7 x 2.6 x 1.2 in.) |
| Weight: | 99 g (3.5 oz) |
| Operating Temperature: | 0° ~ 40°C (32° ~104° F) |
| Storage Temperature: | -20° ~ 60°C (-4° ~ 140° F) |
| Humidity: | 0%~90%, Non-Condensing |
| Certifications: | FCC and CE |

Q1: Where is the power supply? I did not find one in the box.

A1: The TK-208K does not require a power supply. It draws power from your computer's PS/2 connections. As long as your KVM switch is connected to the PS/2 port, it will receive the necessary power to function.

Q2: I have the KVM switch connected properly, but my keyboard and mouse don't work.

A2: Please make sure your PS/2 port is working properly by testing it with your other PS/2 devices. Once you confirm that the PS/2 port is functional, please reboot your computers, and try to use the KVM switch again.

Q3: Can I connect and disconnect the PS/2 cables while the computers are turned on?

A3: Yes, you can connect or disconnect the PS/2 cables while the computers are turned on because the PS/2 interface is Plug-and-Play and Hot-Pluggable.

Q4: Will the KVM switch remember the keyboard settings between computers?

A4: Yes, the KVM switch will remember the keyboard settings when switching between your computers. (i.e.: Cap lock, Num key, etc.)

Q5: How do I switch from one computer to another with the KVM switch?

A5: You may switch between PCs by pressing the Push button on the KVM switch or by using the Hot-Key commands.

If you have further questions, please contact TRENDnet's Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received.
Including interference that may cause undesired operation.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

TK-208K - 2 Years Warranty

If a product does not operate as warranted above during the applicable warranty period, TRENDnet shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product. All products that are replaced will become the property of TRENDnet. Replacement products may be new or reconditioned.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet office within the applicable warranty period for a Return Material Authorization (RMA) number, accompanied by a copy of the dated proof of the purchase. Products returned to TRENDnet must be pre-authorized by TRENDnet with RMA number marked on the outside of the package, and sent prepaid, insured and packaged appropriately for safe shipment.

WARRANTIES EXCLUSIVE: IF THE TRENDnet PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDnet'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDnet NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDnet'S PRODUCTS.

TRENDnet SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDnet ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDnet'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

AC/DC Power Adapter, Cooling Fan, and Power Supply carry 1 Year Warranty



TRENDnet

TRENDnet Technical Support

US/Canada Support Center

Contact

Telephone: 1(888) 777-1550

Fax: 1(310) 626-6267

Email: support@trendnet.com

Tech Support Hours

7:30am - 6:00pm

Pacific Standard Time

Monday - Friday

European Support Center

Contact

Telephone:

Deutsch : +49 (0) 6331 / 268-460

Français : +49 (0) 6331 / 268-461

0800-907-161 (numéro vert)

Español : +49 (0) 6331 / 268-462

English : +49 (0) 6331 / 268-463

Italiano : +49 (0) 6331 / 268-464

Dutch : +49 (0) 6331 / 268-465

Fax: +49 (0) 6331 / 268-466

Tech Support Hours

8:00am - 6:00pm

Middle European Time

Monday - Friday

Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

TRENDnet

3135 Kashiwa Street

Torrance, CA 90505

USA