



TRENDnet



User's Guide



TK-208K

Table of Contents

Español	1
1. Antes de iniciar	1
2. Cómo conectar	2
3. Cómo utilizar el conmutador KVM	4
Specifications	6
Troubleshooting	7


1. Antes de iniciar



Requisitos del sistema

- Monitor compatible con VGA o SVGA
- Teclado PS/2 tipo Mini-Din de 6 pins
- Ratón PS/2 tipo Mini-Din de 6 pins
- Altavoces
- Micrófono

Aplicación

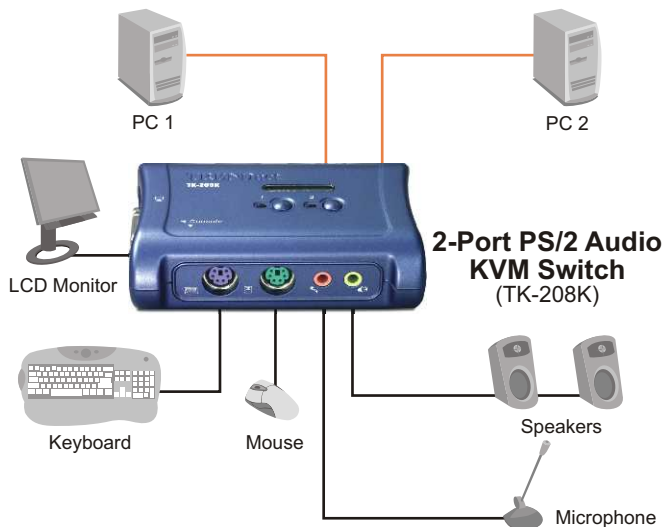

2. Cómo conectar


1. Conecte el monitor al puerto consola de su conmutador.



2. Conecte el teclado, ratón, micrófono y altavoces al puerto consola de su conmutador.



3. Utilice los cables KVM proporcionados para conectar su PC al conmutador KVM.

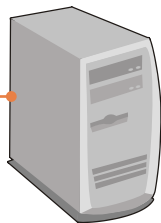

4. Conecte la otra parte del cable al puerto PC de su conmutador.



5. Conecte la otra parte del cable de audio al puerto de audio de su conmutador.



6. Encienda todos los PCs conectados.

La instalación ha sido completada

3. Cómo usar el conmutador KVM

Para alternar entre ambos PCs, debe utilizar los comandos hotkey.

Comandos Hotkey

 
Un comando hotkey del teclado consiste en pulsar tres teclas:

Comando Hotkey = ScrLk + ScrLk + Tecla(s) de comando


Después de pulsar la tecla ScrLk, dispone de 2 segundos para pulsar la tecla ScrLk otra vez. Ahora dispone de 2 segundos para presionar una tecla de comando. Si usted no pulsa una tecla en el plazo de 2 segundos, el conmutador saldrá del modo hotkey.

Nota

1. El comando Hotkey sólo funciona con las teclas numéricas de la parte superior del teclado.
2. Cuando establezca la vinculación de la conmutación entre el puerto PC y el puerto Audio se activa la secuencia hotkey, cualquier conmutación entre PC y Audio/Mic se establece de forma conjunta.
3. Para sistemas operativos no-PnP (Linux, Windows NT 4.0), utilice por favor los siguientes comandos para reiniciar la configuración del ratón.



4. Los usuarios de Mac deben tener en cuenta: la asignación del teclado estándar PC al teclado MAC:

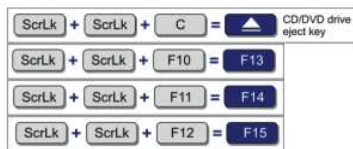

Convención Hotkey:

La pulsación de la tecla hotkey indica que debe pulsar la tecla individual consecutivamente una después de otra, no simultáneamente.

Hoja de referencia rápida para el TK-208K

Comando	Hotkeys	Descripción
Seleccione PC	ScrLk + ScrLk + X <small>x = 1 - 2 para el número de canal de la PC</small>	Seleccione el canal PC activo.
Seleccione el canal Audio/Mic	ScrLk + ScrLk + FX <small>(Fx es una tecla de función) x = 1 - 2 para el número de canal Audio mic</small>	Seleccione el canal Audio/Mic activo
Vincule la conmutación del PC y del Audio/Mic	ScrLk + ScrLk + Q	Active la vinculación de la conmutación del puerto PC y del puerto Audio/Mic.
Desvincule la conmutación del PC y del Audio/Mic	ScrLk + ScrLk + W	Active la vinculación de la conmutación del puerto PC y del puerto Audio/Mic.
Próximo canal PC superior	ScrLk + ScrLk + ↑ <small>(flecha arriba)</small>	Seleccione el siguiente PC superior disponible
Próximo canal PC inferior	ScrLk + ScrLk + ↓ <small>(flecha abajo)</small>	Seleccione el siguiente PC inferior disponible
Ratón de consola/ Reiniciación de Teclado	ScrLk + ScrLk + End	Reiniciar ratón/teclado en el lado de la consola. (funciona únicamente con sistemas operativos no-PnP)
Auto-exploración	ScrLk + ScrLk + S	Auto-exploración a través de cada canal conectado para una rápida lectura en pantalla de cada canal (duración de la exploración = 10 segundos) .
Detener Auto-exploración	Press any key on keyboard	Pulse el botón panel de mando Finalizar actividad de Auto-exploración.

Specifications

Computer Connections:	2
KVM Cable:	2 Sets of 1.2M (4ft) KVM & Audio Cables
Cable Connectors:	<u>KVM</u>
	To Console: 1 x 15-pin HDB type VGA (Male)
	To PC: <ul style="list-style-type: none"> • 1 x PS/2 Keyboard 6-pin Mini Din (Male) • 1 x PS/2 Mouse 6-pin Mini Din (Male) • 1 X VGA HDB 15-pin (Male)
	<u>Audio</u>
	To Console: 2 x USB (Type Mini B)
To PC: <ul style="list-style-type: none"> • 1 x 3.5mm audio in/out jack • 1 x 3.5mm microphone in/out jack 	
Console Port Connectors:	Keyboard: PS/2 Keyboard 6-pin Mini Din (Female) Mouse: PS/2 Keyboard 6-pin Mini Din (Female) Monitor: VGA HDB 15-pin (Female) Speaker: 3.5mm audio in/out jack Microphone: 3.5mm microphone in/out jack
Port Selection:	Push Button and Hot-Key Commands
Auto-Scan Intervals:	10 seconds
Keyboard State:	Saved and Restored
Power Type:	PS/2 Interface Power
Dimensions:	95 x 65 x 30 mm (3.7 x 2.6 x 1.2 in.)
Weight:	99 g (3.5 oz)
Operating Temperature:	0° ~ 40°C (32° ~ 104° F)
Storage Temperature:	-20° ~ 60°C (-4° ~ 140° F)
Humidity:	0%~90%, Non-Condensing
Certifications:	FCC and CE

Q1: Where is the power supply? I did not find one in the box.

A1: The TK-208K does not require a power supply. It draws power from your computer's PS/2 connections. As long as your KVM switch is connected to the PS/2 port, it will receive the necessary power to function.

Q2: I have the KVM switch connected properly, but my keyboard and mouse don't work.

A2: Please make sure your PS/2 port is working properly by testing it with your other PS/2 devices. Once you confirm that the PS/2 port is functional, please reboot your computers, and try to use the KVM switch again.

Q3: Can I connect and disconnect the PS/2 cables while the computers are turned on?

A3: Yes, you can connect or disconnect the PS/2 cables while the computers are turned on because the PS/2 interface is Plug-and-Play and Hot-Pluggable.

Q4: Will the KVM switch remember the keyboard settings between computers?

A4: Yes, the KVM switch will remember the keyboard settings when switching between your computers. (i.e.: Cap lock, Num key, etc.)

Q5: How do I switch from one computer to another with the KVM switch?

A5: You may switch between PCs by pressing the Push button on the KVM switch or by using the Hot-Key commands.

If you have further questions, please contact TRENDnet's Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received.
Including interference that may cause undesired operation.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

TK-208K - 2 Years Warranty

If a product does not operate as warranted above during the applicable warranty period, TRENDnet shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product. All products that are replaced will become the property of TRENDnet. Replacement products may be new or reconditioned.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet office within the applicable warranty period for a Return Material Authorization (RMA) number, accompanied by a copy of the dated proof of the purchase. Products returned to TRENDnet must be pre-authorized by TRENDnet with RMA number marked on the outside of the package, and sent prepaid, insured and packaged appropriately for safe shipment.

WARRANTIES EXCLUSIVE: IF THE TRENDnet PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDnet'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDnet NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDnet'S PRODUCTS.

TRENDnet SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDnet ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATE, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDnet'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

AC/DC Power Adapter, Cooling Fan, and Power Supply carry 1 Year Warranty



TRENDnet

TRENDnet Technical Support

US/Canada Support Center

Contact

Telephone: 1(888) 777-1550

Fax: 1(310) 626-6267

Email: support@trendnet.com

Tech Support Hours

7:30am - 6:00pm

Pacific Standard Time

Monday - Friday

European Support Center

Contact

Telephone:

Deutsch : +49 (0) 6331 / 268-460

Français : +49 (0) 6331 / 268-461

0800-907-161 (numéro vert)

Español : +49 (0) 6331 / 268-462

English : +49 (0) 6331 / 268-463

Italiano : +49 (0) 6331 / 268-464

Dutch : +49 (0) 6331 / 268-465

Fax: +49 (0) 6331 / 268-466

Tech Support Hours

8:00am - 6:00pm

Middle European Time

Monday - Friday

Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

TRENDnet

3135 Kashiwa Street

Torrance, CA 90505

USA