


TU2-DVIV Windows 7 Installation Instructions

Hardware Installation


Note: Do not connect the TU2-DVIV until instructed to do so.

1. Go to <http://www.displaylink.com/support/windows7.html> to download the latest Windows 7 Drivers (DisplayLink USB Graphics Windows Driver 5.3 M2). Save the file to your desktop.
Note: This link is subject to change without further notice.

2. Double click on DisplayLink-5.3.25010.exe

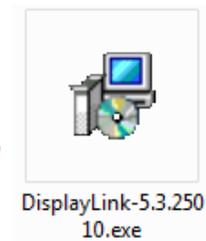


3. Click I Accept.

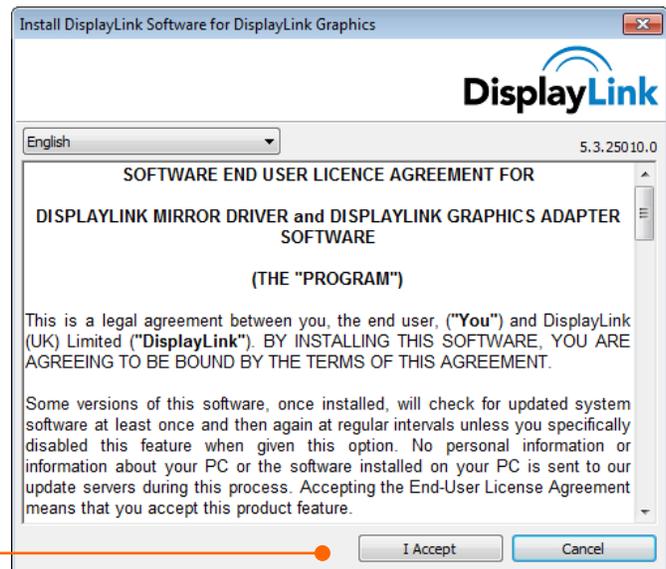


4. Connect the Mini-USB end of the USB cable to the TU2-DVIV.



5. Click OK.

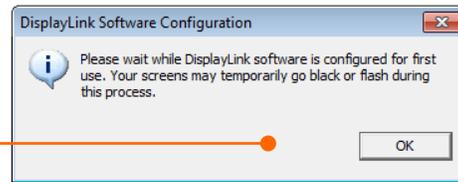


6. Connect the Type A end of the USB cable to an available USB port on your computer.

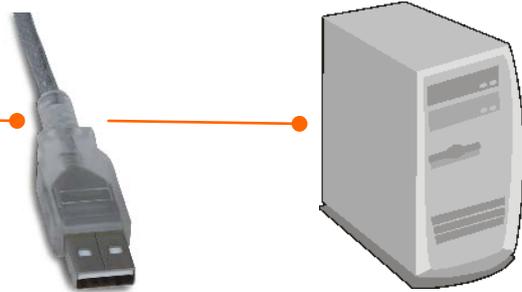

7. Repeat steps 4-6 for each additional Adapter. Maximum of 6 adapters can be connected.

Connecting to a DVI monitor


1. Connect the DVI monitor cable to directly to the DVI port on the TU2-DVIV.

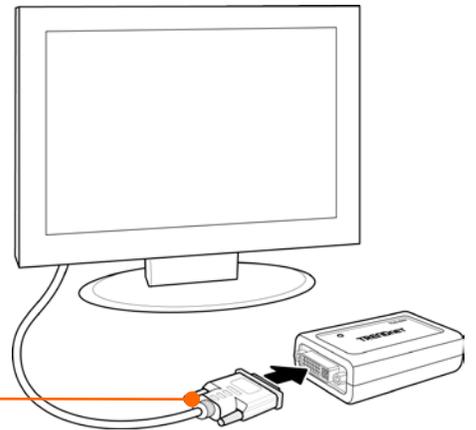

Connecting to a VGA monitor

1. Connect the VGA monitor cable to the VGA to DVI adapter.


2. Connect the VGA to DVI adapter to the TU2-DVIV.

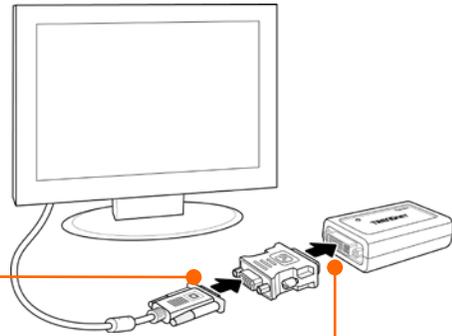

Configure Display Settings


1. In the system tray, click on the arrow to show hidden icons.

2. Right click on the displaylink adapter icon.

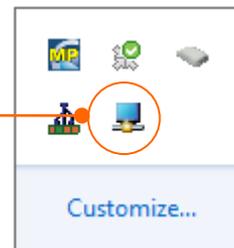


3. Configure the desired settings.

4. Click **Apply**.

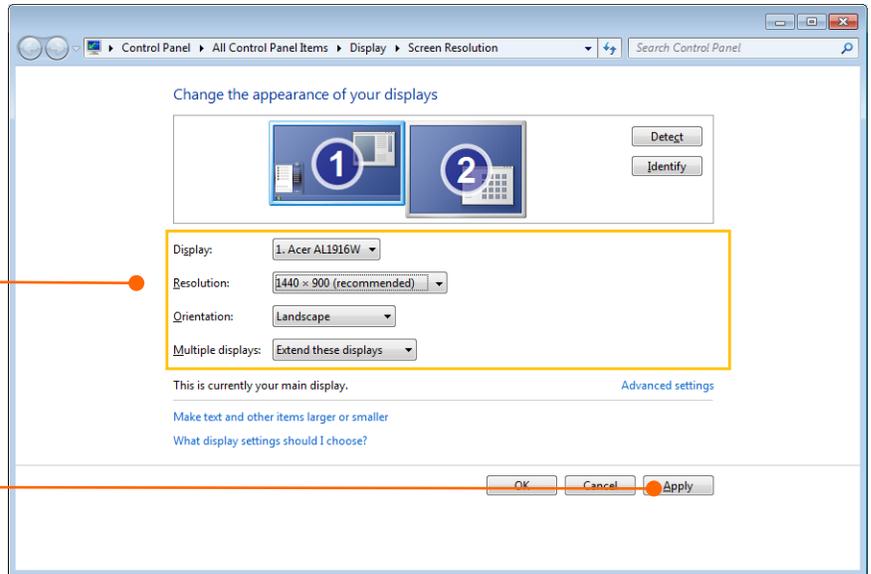

5. Click **OK**.

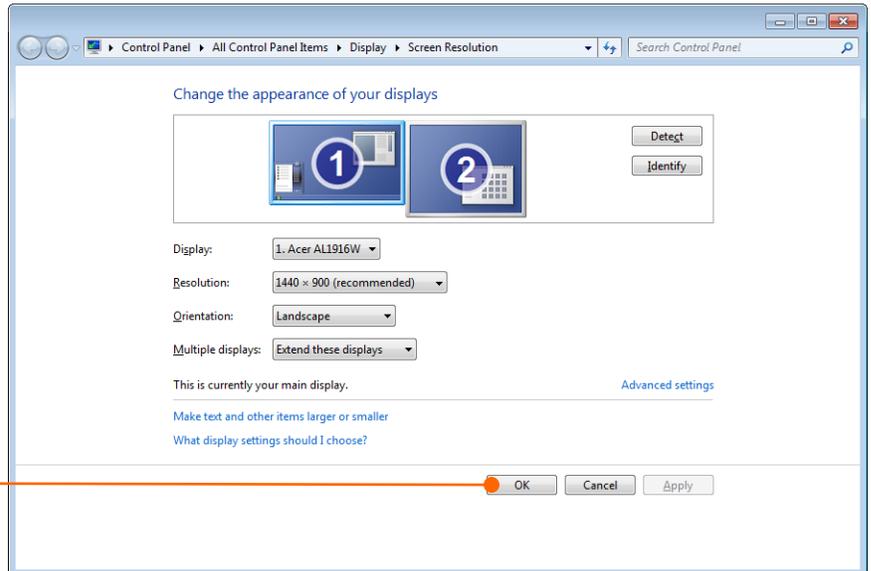

Your installation is now complete.

For detailed information regarding the TU2-DVIV configuration and advanced settings, please refer to User Guide on the Driver CD-ROM.

Troubleshooting

1. Can I connect or disconnect TU2-DVIV while the computer is on?

Yes, you can connect or disconnect TU2-DVIV while the computer is on because the USB interface is Plug-and-Play compliant and hot-pluggable

2. Windows is unable to recognize my hardware. What should I do?

1. Make sure your computer meets the minimum requirements as specified in Section 1 of this Quick Installation Guide.
2. Try plugging the TU2-DVIV into a different USB port.