

## TV-IR500 Hardware Installation

### Note:

1. The IR filter ring, spacer, screws and washers are only necessary if you plan on mounting the TV-IP512P/TV-IP512WN into the TV-H500/TV-H510.
2. If you are using the TV-IP512P/TV-IP512WN, please verify the hardware version. The hardware version of the TV-IP512P/TV-IP512WN must be V1.1R or V1.3R in order to work properly with the IR lens (TV-IR500).

### IR Filter Ring



1. Attached the IR filter ring to the TV-IR500.

2. Insert the TV-IR500 into the IP camera. Turn the TV-IR500 clockwise to secure the lens.




3. Insert the male power plug to the IP camera.



### Spacer & Screw

1. Get the following items ready: spacer, screw, washer and TV-H500/TV-H510 black plastic mounting bracket.

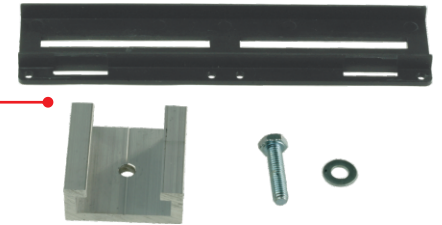

2. Insert the screw from the bottom of the black mounting bracket. Then insert the washer and the spacer on the other side of the black plastic mounting bracket.



3. Inset the screw on the bottom of the IP camera. Use pliers to secure the screw to the IP camera.



4. Follow the instructions in the TV-H500/TV-H510 to complete the installation of the TV-IP512P/TV-IP512WN into the camera enclosure.