



## Quick Installation Guide



**TVP-SP3**

# Table of Contents

Deutsch .....	1
1. Bevor Sie anfangen .....	1
2. Installation .....	2
3. Schnellübersicht .....	4
Troubleshooting .....	5

# 1. Bevor Sie anfangen



## Packungsinhalt

- TVP-SP3
- Anleitung zur Schnellinstallation
- Dienstprogramm-CD
- USB-Kabel (Mini-USB/A-Anschluss)

## Systemanforderungen

- CD-ROM-Laufwerk
- Skype™ ist installiert
- Computer mit freiem USB-1.1- oder -2.0-Port
- Prozessor: 300 MHz oder schneller
- Speicher: 256 MB oder mehr
- Freier Speicherplatz auf Festplatte: 50 MB oder mehr
- Windows 2000/XP

Hinweis: Bevor Sie mit der Installation beginnen können, muss Skype installiert sein. Installieren Sie es bitte von der beiliegenden Treiber- & Dienstprogramm-CD oder gehen Sie zu [www.Skype.com](http://www.Skype.com).

 


## 2. Installation

1. Legen Sie die **Dienstprogramm-CD** in das CD-ROM-Laufwerk ein und klicken Sie auf **Install Utility** (Programm installieren).




2. Klicken Sie auf **Next (Weiter)**.

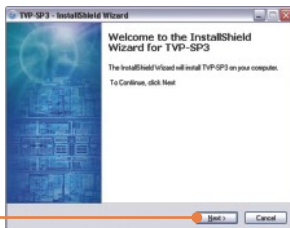

3. Folgen Sie den Anweisungen des **Installationsassistenten** und klicken Sie dann auf **Finish** (Fertigstellen).



 4. Markieren Sie **Allow this program to use Skype™** (Verwendung von Skype™ zulassen). Klicken Sie auf **OK**.

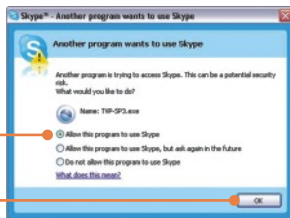

5. Stecken Sie das mitgelieferte USB-Kabel in das Telefon und in einen freien USB-Port Ihres Computers.



6. Die Treiber werden automatisch installiert.

7. Klicken Sie auf **Yes (Ja)**, um Ihren Computer neu zu starten.




 







8. Öffnen Sie die Skype™-Anwendung und melden Sie sich in Ihrem Skype™-Konto an.

## Ihre Installation ist beendet!

Zusätzliche Informationen zu den erweiterten Einstellungen des TVP-SP3 finden Sie in der Bedienungsanleitung auf der beiliegenden CD-ROM oder auf der Webseite von Trendnet unter [www.trendnet.com](http://www.trendnet.com).

### 3. Schnellübersicht


Symbol	Funktion	Beschreibung
	Skype ein/aus Navigation zwischen Registerkarten	<ul style="list-style-type: none"><li>• Öffnet das Skype-Fenster.</li><li>• Wenn Sie die Taste 5 Sekunden lang gedrückt halten, wird das Skype-Fenster geschlossen</li><li>• Wechselt zwischen Skype-Registerkarten</li></ul>
<b>Hold</b>	Warten	<ul style="list-style-type: none"><li>• Setzt Anrufer in Wartestellung</li><li>• Wechselt zwischen zwei Anrufen</li></ul>
	Wählen Anrufannahme	<ul style="list-style-type: none"><li>• Wählen/Wahlwiederholung</li><li>• Nimmt einen Anruf entgegen</li></ul>
	Auflegen/Ablehnen Rufnummer löschen	<ul style="list-style-type: none"><li>• Legt auf / lehnt Anruf ab</li><li>• Löscht eine Ziffer</li><li>• Wenn Sie die Taste 5 Sekunden lang gedrückt halten, wird die gesamte Nummer gelöscht</li></ul>
 	Nach oben Nach unten	<ul style="list-style-type: none"><li>• Auswahl eines bestimmten Kontakts</li></ul>
	Kontakte	<ul style="list-style-type: none"><li>• Zeigt Liste aller Kontakte an</li></ul>
	Anrufe	<ul style="list-style-type: none"><li>• Zeigt Liste aller Anrufe an</li></ul>
<b>0~9, +, #, *</b>	Wähltastatur	<ul style="list-style-type: none"><li>• Wähltastatur</li><li>• Öffnet Skype-Fenster</li><li>• Für „+“ müssen Sie die „0“-Taste 5 Sekunden lang gedrückt halten</li></ul>
<b>Vol +/-</b>	Lauter/leiser	<ul style="list-style-type: none"><li>• Erhöht/verringert die Lautstärke des Lautsprechers</li></ul>
	Stumm	<ul style="list-style-type: none"><li>• Schaltet das Mikrofon stumm.</li></ul>
	Klingelton	<ul style="list-style-type: none"><li>• Wahl des Klingeltons</li></ul>

# Troubleshooting


## Q1: My computer does not detect the TVP-SP3. What should I do?

**A1:** First, make sure your computer meets the minimum requirements as specified in Section 1 of this Quick Installation Guide. Second, make sure the USB cable is physically plugged in as described in Section 2. Third, try installing the TVP-SP3 to a different USB port of your computer.


## Q2: I am unable to make a call. What should I do?

**A2:** First, make sure that you have Internet connectivity. Second, make sure that you have signed into your Skype™ account. Third, make sure that you see the **TVP-SP3** software icon located on the system tray . If you do not see this icon, go to **Start -> Program Files -> TRENDnet -> TVP-SP3**. Fourth, make sure that you have followed the exact steps in section 3 of this Quick Installation Guide.

## Q3: The speaker/microphone function does not work. What should I do?

**A3:** First, make sure that you have installed the TVP-SP3 **VoIP USB Phone** software program as described in Section 2. Second, right click on the **TVP-SP3** software icon located on the system tray  and select **Audio Device Settings**. Make sure speaker and microphone are set to **USB Phone**. Third, right click on the **TVP-SP3** software icon and select **Volume Settings**. Make sure the volume is set appropriately for the microphone and speaker.

## Q4: How do I switch back to my computer's original audio settings?

**A4:** Right click on the **TVP-SP3** software icon located on the system tray  and select **Audio DeviceSettings**. Select the desired **Windows Default Audio Device** for the speaker and microphone. Then click **OK**.

## Q5: After I finish installing the TVP-SP3, the Skylook installation window appears. What should I do?

**A5:** Skylook is an optional bonus program which integrates with Microsoft® Outlook® (required). It allows you to manage your Skype™ contacts from Outlook®. To install the program, select **Install Skylook (recommended)** and click **Next**. Then follow the **Install Wizard** directions to complete the installation. If you do not want to install the program, select **Don't Install**.

If you still encounter problems or have any questions regarding the TVP-SP3, please refer to the User's Guide included on the Utility & Driver CD-ROM or contact TRENDnet's Technical Support Department.

### Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



**NOTE:** THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



## TRENDnet Technical Support

### US • Canada

**Toll Free Telephone:** 1(866) 845-3673

24/7 Tech Support



### Europe (Germany • France • Italy • Spain • Switzerland • UK)

**Toll Free Telephone:** +00800 60 76 76 67

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

### Worldwide

**Telephone:** +{(31) (0) 20 504 05 35

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

## Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

**TRENDnet**  
3135 Kashiwa Street  
Torrance, CA 90505  
USA