Quick Installation Guide



10/100Mbps Print Server with 2 USB & 1 Parallel Printer Port



Copyright® TRENDware International, Inc. 2003. All Rights Reserved.

Quick Installation Guide

1. Print Server Layout



Before you start the installation, you will need

- Parallel or USB printer(s).
- One computer with Windows Operating System and connected to your network.

2. Hardware Installation

- Power off the Print Server and Printers.
- Connect the Print Server's printer port to the printers.
- Connect the RJ45 cable to the LAN port and to your network hub or switch.
- Plug the AC power adapter into the power connector on the back of the Print Server.
- Power on the printer.
- Installation Completed.

3. Software Installation (For Win95/98/ME/NT/2000/XP)

- 1. Insert the Utility CD into your CD-ROM.
- The Autorun program starts and the following window appears. If the setup program does not start automatically, run Autorun.exe in the root folder from the CD-Rom
- 3. Choose Install Setup Utility, the program will automatically install Setup Wizard into your computer.



4. After the installation completes, the Setup Wizard window would appear, Click on **Network Print Server Setup Wizard** to configure Print Server settings and add Printer to the PC.



In the future, you can go to Start \rightarrow Program \rightarrow Network Print Server \rightarrow SetupWizard to run the program again

5. Click **NEXT**, the wizard will automatically discover the print server, if it can not be found, try **Refresh**.



Page 3

6. The Print Server will appear in the list, select the print server you want to configure and click **NEXT**.

Network Print Server Setup Wi	izard	×
Ц.	Select A Print Server	
ΞN.	This Wizard has found the following print servers on the metwork. Select a print server that you want to set up from the list.	
Welcome	Detected print servers on your local network :	
Select A Print Server	Device Name If Address max Address F Status USB_FS2160A4 192.168.1.47 00:40:01:21: 1 Off Line USB_FS2160A4 192.168.1.47 00:40:01:21: 2 Off Line USB_FS2160A4 192.168.1.47 00:40:01:21: 2 Off Line	
Configure Settings	USB_FS216DM4 192.168.1.47 UU:4U:U1:21: 3 UTT Line	
Select A Printer		
Summary	۲	
Save Settings	If the print server you want to set up is not displayed, check the connection and click Refresh.	
Complete	Note : If your print server has just been turned on, it may take a few minutes for the print server to initialize before it can be detected and displayed by the wizard.	
	< <u>B</u> ack <u>N</u> ext > Cancel	

The printer name will display 3 times with different port number. Select Port 1 to configure the printer on **Parallel** port, select Port 2 to configure the printer on **USB 1** port, select Port 3 to configure the printer on **USB 2** port.

7. Select **YES** if you want to change the configuration and press **NEXT** to continue.

Wireless Setup Wizard	
	Change Wireless Settings
	In the following steps, this Wizard allows you to configure some basic wireless settings of the print server. If you are not familiar with these settings, do not change them. Wrong settings may cause the print server not to function properly.
Welcome	
Select A Print Server Configure Wireless	 Yes, I want to change settings. Password:
Settings Configure TCP/IP Settings	C No, I don't want to change settings.
Save Settings Complete	
	To change settings, you may have to enter a password. A brand-new network print server has no any password.
······································	
	< BACK NEXT > EXIT

8. Configure **TCP/IP** settings. If you have a DHCP server on the network, select "Obtain an IP address automatically", or click "Specify and IP address" and input the IP, Mask, and Gateway IP addresses. Click "Next".

Π		
ñ	TCP/IP Settings	5
HT.	Specify TCP/IP settings fo server can be set up eithe server on the network or t	r the print server. The print r to obtain IP address from a DHCP o use a static IP address.
Welcome		
elect A Print Server	Obtain an IP addre	ss automatically (use DHCP)
Configure Settings	C Specify an IP addr	ess
~~	IP Address	192 .168 . 1 . 47
Select A Printer	Mask IP Address	255 .255 .255 . 0
Summary	Getway IP Address	192 .168 . 1 .254
Save Settings		
Complete	It's highly recommended t use a static IP address. correctly entered for the	hat you set up the print server to Make sure the IP address is print server to work properly.

9. TCP/IP settings are saved, click Next to start install the printer for your PC.

ē	Save TCP/IP se	ttings	
Welcome Select A Print Server Configure Settings Select A Printer	Print Server status : Print Server Name : MAC Address : DHCP : IP address : Subnet Mask : Gateway :	Modifed USB_PS216DA4 00:40:01:21:6D:A4 Dynamic 192.168.1.47 255.255.255.0 192.168.1.254	
Summary Save Settings Complete	Saving the settings to the	print server	

10. Click **Next** and choose the printer you want to install. You can also add a new printer in this step.

	Select A Printer	
	The Wizard now helps you set up the print print server. You can either select a printer installed on this computer or add a new pr	er that is connected to the that has already been inter.
Welcome	Select a printer from the following list	Add New Printer
elect A Print Server	Printer Name	Port
Configure Settings	Kyocera Mita FS-1010 KX (Copy 2) Kyocera Mita FS-1010 KX	LPT1: LPT:PS5B04-1
Select A Printer		
Summary		
Save Settings		
Complete	To add a new printer, you need a printer i the driver file that you've downloaded from	nstallation CD/diskette or n the Internet.
	d	

Page 6

If the printer is not listed under Printer Name, click on Add New Printer and follow the below instruction.

Help For Adding A New Printer You have chosen to add a new printer. Windows Add Printer Wizard has been brought up to help you add a new printer. Follow the instructions in this Help to add a new printer on this computer. Please note though these steps might vary slightly, depending on which Windows version is used, the functionality of these procedures is exactly the same. After Windows Add Print Wizard finishes, you must return to Network Print Server Setup Wizard. 1. When Windows Add Printer Wizard starts, click Next. 2. Click Local printer, and then click Next. 3. Select LPT1: (Recommended Printer Port), and then click Next. 4. Follow the instructions on the screen to finish setting up the printer by selecting the

- setting up the printer by selecting the manufacturer and model of your printer and typing a name for your printer.
- 5. Do not print a test page to the printer.
- 6. Click Finish to complete the Windows Add Printer Wizard.
- Now return to the Network Print Server Setup Wizard and continue setting up the network print server.

After new printer is added the printer will be listed under the Print Name section, select the printer and click **NEXT.**

11. Click **Next** and setup program will display the summary of your printer's configuration.

ă	Summary	
	The Wizard is about to of the settings.	finish the installation. Following is the summary
Welcome	Printer Name :	Kyocera Mita FS-1010 KX (Copy 2)
elect A Print Server	IP Address :	192.168.1.12
Configure Settings		
Select A Printer		
Summary	Duintes Cetting	
	Frinter Setting	as the default printer
Save Settings		
Complete	Verify all information.	

12. Click **Finish** to complete the printer installation

ŭ 👘	Installation Complete !
TZ I	The Wizard has successfully installed the network print server and the printer on your system.
Welcome	
elect A Print Server	
Configure Settings	
Select A Printer	
Summary	
Save Settings	
Complete	

- **13.** Please repeat the steps to configure each Printer.
- **14.** Installation Completed.





TRENDware International Inc.

Torrance, CA U.S.A. www.trendware.com