



# Quick Installation Guide



## Table of Contents

Deutsch	1
1. Bevor Sie anfangen	1
2. Installation der Software (nur TDM-C400)	3
3. Konfiguration des Modems	4
4. Konfiguration des ADSL-Modems über die Ethernet- oder USB-	
Verbindung	8
Troubleshooting	11

## 1. Bevor Sie anfangen



## Voraussetzungen für die Installation

- Telefonleitung mit ADSL/ADSL2/ADSL2+-Service
- Einen oder mehrere Computer mit Ethernet 10Base-T/100Base-T Netzwerkkarten und/oder einen Computer mit einem USB-Anschluss
- Einen Ethernet-Hub oder -Switch, wenn Sie das Gerät in einem Ethernet-Netzwerk mit mehreren Computern verbinden wollen
- Webbrowser: Internet Explorer 5.0 (oder später) oder Netscape 6.1 (oder später)

## Anwendung





## Holen Sie von Ihrem ADSL2+-Service-Provider bitte die folgenden Informationen ein

VPI-Wert:
Art der Kapselung: □LLC/SNAP oder □VC/MUX
Und außerdem:
Für PPPoA (RFC2364) oder PPPoE (RFC2516) Benutzername: Kennwort: Authentifizierungsmethode: PAP oder CHAP Host -oder IP Adresse :
Für statische oder feste IP-Verbindung (RFC1483 oder RFC1577) Host: Domäne: Gateway: IP-Adresse:
Subnetz-Maske:
IP-Adresse des DHCP-Servers:
IP-Adresse des primären DNS-Servers:
IP-Adresse des sekundären DNS-Servers:



## 2. Installation der Hardware



4. Warten Sie 60 Sekunden, damit das Gerät hochfahren kann. Überprüfen Sie, dass die LEDs WAN und LAN leuchten.





## 3. Installation der Software (nur TDM-C400)

<u>Hinweis:</u> Wenn Sie Windows 98/98SE verwenden, benötigen Sie für die Installation eventuell die Windows-98/98SE-CD.

Schließen Sie alle offenen Windows-Anwendungen, bevor Sie mit der Installation der Software beginnen.

1. Sobald Sie das USB-Kabel mit Ihrem PC verbinden, erkennt das System die neue Hardwarekomponente automatisch. Klicken Sie auf **Cancel** (Abbrechen).

### (Windows 98/98SE)



### (Windows ME)



### (Windows 2000)



## (Windows XP)





2. Legen Sie die Installations-CD in Ihr CD-ROM-Laufwerk ein und klicken Sie im Untermenü "USB Utility" (USB-Dienstprogramm) auf "TDM-C400". Der Installationsvorgang sollte jetzt beginnen.



 Das Begrüßungsfenster erscheint. Schließen Sie alle Windows-Anwendungen. Klicken Sie dann auf Next (Weiter).

DSL Modern Setup Wizard				
Welcome!				
TRENDNET DSL MODEM	Welcome to the DSL Modem Setup Wizard This visual will install the down and the related software by your OSL modem on your computer Press Next to move on to the next step!			
	Next > Cancel			

 Lesen Sie den Lizenzvertrag und klicken Sie dann auf Accept (Akzeptieren).



🗇 DSL Nedern Setup W	lizard 🔀
Installing	
TRENDNET DSL MODEM	The DBL Modern Seriep Waterd in new motifiely the driver needed by Whitewa to speech the modern. Preparing system for installation
	Cancel

 Der Setup-Assistent des USB-Modems beginnt jetzt mit der Installation der Software und zeigt den Installationsstatus an.

6. Der Installationsassistent fordert Sie auf, das ADSL-Modem an den USB-Port anzuschließen, falls dies noch nicht geschehen ist.



7. Sie werden jetzt aufgefordert, das System neu zu starten. Markieren Sie "Yes, reboot the computer now" (Ja, ich möchte den Computer jetzt neu starten) und klicken Sie dann auf Close (Schließen).





 Nach dem Neustart ist das Gerät installiert. Klicken Sie auf Finish (Fertigstellen).

9. Klicken Sie auf Programs (Programme), TRENDnet DSL Modem und dann auf DSL Status.



10. Im Fenster "TRENDnet DSL Modem" können Sie in der Registerkarte "Physical Link" (Physikalische Verbindung) den aktuellen Verbindungsstatus des DSL-Modems von TRENDnet überprüfen. Im Statusfeld erscheint die Anzeige, dass der TDM-C400 "Connected" (verbunden) ist.





## 4. Konfiguration des ADSL-Modems über die Ethernet- oder USB-Verbindung

Hinweis: Der DHCP-Server des ADSL2+ Modem-Routers ist standardmäßig aktiviert. Konfigurieren Sie Ihren Computer bitte so, dass er vom DHCP-Server des ADSL2+ Modem-Routers automatisch eine IP-Adresse bezieht.

- 1. Öffnen Sie einen Webbrowser und geben Sie in die Adressleiste http://192.168.1.254 ein. Drücken Sie dann auf die Eingabetaste (Enter).
- 2. Geben Sie User name (Benutzername) und Password (Kennwort) ein und klicken Sie auf OK. User name: admin Password: admin



 Wenn Sie sich in der Webkonfiguration anmelden, erscheint die Seite System View (Systemübersicht). Klicken Sie auf Quick Configuration (Schnellkonfiguration).

	ever .		994		_
model	108-8400	C(pre	reduced Status:	3 and	-
A/W Parsian	404000		East States	dept	
5/W Persient	5-Cull*N*0.46204_3.5.000520mpt		disc persient	16.07.6.00	
Serial Muniler-	\$354%Childrede		Annes Pyper	404.2	
Made	Routing And Bridging	Standard		ADG.2+ Auto	
de Finer	444-60	Connected Standards		dialog .	
Finer	The Jan 14, 50-10-52 2200	Junio descati		Disable	
New June 1	GWT	Analia		Arasi	
deplight Louise Times	LOAN .	-		64	
		Record.	1 strengt	dame.	1.00
dame.					

4. Daraufhin wird die Konfigurationstabelle angezeigt, in der Sie die Informationen Ihres Service Providers in die entsprechenden Felder eingeben können.

Quick Co	onfiguration			
Use this page to quic	kiy compute the system.			
ATTAInterfacer	1.0			
Operation Mode:	Enabled M			
Encapsulation:	PPPot LLC			
VPI:	0			
VCI:	35			
Bridge:	Disabled 🛩			
IGMP:	Enabled M			
IP Address:	0 0 0 0			
Subnet Mask:	0 0 0 0			
Use DHCP:	<ul> <li>○ Enable</li> <li>④ Disable</li> </ul>			
Default Route:	Disabled M			
Gateway IP Address:	0 0 0 0			
PPP				
Username:	guest			
Password:	••••			
Use DNS:	Enable     Disable			
DNS				
Primary DNS Server:	0 0 0 0			
Secondary DNS Server:	0 0 0 0			
Submit Delete	Cancel Help			

- 5. Klicken Sie dann auf Submit (Senden).
- 6. Klicken Sie im Fenster der Web-Konfiguration auf die Registerkarte Admin.
- 7. Klicken Sie dann auf Commit & Reboot (Übertragen & Neu starten).



8. Klicken Sie dann auf Schaltfläche Commit (Übertragen).



**9.** Daraufhin erscheint die Anzeige, dass Ihre Änderungen erfolgreich übertragen wurden.



10. Der Reboot Mode (Neustartmodus) steht standardmäßig auf Reboot (Neu starten).



11. Klicken Sie auf die Schaltfläche Reboot (Neu starten).



 Schalten Sie die Stromversorgung w\u00e4hrend des Neustarts des ADSL2+ Modem-Routers bitte nicht aus.

## Ihre Installation ist beendet!

Weitere Informationen zu den Konfigurations- und erweiterten Einstellungen des TDM-E400/TDM-C400 finden Sie im Abschnitt "Problembehandlung" der Bedienungsanleitung auf der beiliegenden CD-ROM oder auf der Website von TRENDnet unter http://www.trendnet.com.



### Q1: POWER LED does not illuminate after the product is turned on. What should I do?

A1: Verify that you are using the power cable provided with the device and that it is securely connected to the ADSL2+ modem and a wall socket/power strip.

## Q2: I am not sure what type of Internet broadband connection I have for my DSL connection. How do I find out?

A2: You can contact your Internet Service Provider's (ISP) Customer Service or Technical Support Department for the correct information.

## Q3: I specified the IP address 192.168.1.254 in my Web browser, but an error messages says, "The page cannot be displayed. How can I get into the TDM-E400 / TDM-C400 web configuration page?

A3: Please check your hardware and TCP/IP settings again by following the instructions in the QIG. Make sure the Power, WAN and the LAN LEDs are on. Then try to access the configuration page using your Web Browser again.

### Q4: INTERNET LED does not illuminate after phone cable is attached.

A4: Verify that a standard telephone cable (called an RJ 11 cable) like the one provided is securely connected to the ADSL port and your wall phone jack. Allow about 30 seconds for the device to negotiate a connection with your ISP.

Verify that you are using a straight-through type Ethernet cable to the uplink port on a hub or a cross-over type cable to a stand-alone PC. If you connected the device to an ordinary hub port (not Uplink), you must use a straight-through cable. (To check: hold the connectors at each end of the cable side-by-side with the plastic spring facing down. Looking at the wires from left to right, if the first, second, third, and sixth wires are the same color on the two connectors, then it is a straight-through type. On a cross-over type, wire 1 on one connector should be the same color as wire 3 on the other. The same is true of wires 2 and 6.)

### Q5: Ethernet LED does not illuminate after Ethernet cable is attached.

A5: Verify that the Ethernet cable is securely connected to your LAN hub or PC and to the ADSL2+ mdoem. Make sure the PC and/or hub is turned on.

Verify that your cable is sufficient for your network requirements. A 100 Mbps network (10BaseTx) should use cables labeled CAT 5. A 10Mbps network may tolerate lower quality cables.

### Q6. My LAN PCs cannot display web pages on the Internet.

A6: Verify that the DNS server IP address specified on the PCs is correct for your ISP, as discussed in the item above. If you specified that the DNS server be assigned dynamically from a server, then verify with your ISP that the address configured on the ADSL2+ modem is correct, then you can use the ping utility, described on page 174 of the user guide, to test connectivity with your ISP's DNS server.

### Q7. My PC cannot access the Internet.

A7: Use the ping utility, described on page 174 of the UG, check whether your PC can communicate with the ADSL2+ Modem Router 's LAN IP address (by default 192.168.1.254). If it cannot, check the Ethernet cabling.

If you statically assigned a private IP address to the computer, (not a registered public address), verify the following:

1. Check that the gateway IP address on the computer is your public IP address. If it is not, correct the address or configure the PC to receive IP information automatically.

2. Verify with your ISP that the DNS server specified for the PC is valid. Correct the address or configure the PC to receive this information automatically.

3. Verify that a Network Address Translation rule has been defined on the ADSL2+ Ethernet Router to translate the private address to your public IP address. The assigned IP address must be within the range specified in the NAT rules (see User Guide, Chapter 4). Or, configure the PC to accept an address assigned by another device (see "Quick Start Part 2 Configuring Your Computers"). The default configuration includes a NAT rule for all dynamically assigned addresses within a predefined pool (see the instructions in Chapter 8 to view the address pool).

### Q8: I forgot/lost my Web Configuration user ID or password.

A8: If you have not changed the password from the default, try using "admin" as both the user ID and password. Otherwise, you can reset the device to the default configuration by pressing the Reset button on the back panel of the device three times (using a pointed object such as a pen tip). Then, type the default User ID and password shown above. WARNING: Resetting the device removes any custom settings and returns all settings to their default values.

### Q9. My changes to Web Configuration are not being retained.

**A9.** Be sure to use the Commit function after any changes. This function is described on page 47 of the User Guide.

### Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

### ADVERTENCIA

En todos nuestros equipos se mencionan claramente las caracteristicas del adaptador de alimentacón necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños fisicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energia electrica domiciliaria existente en el pais o zona de instalación.



## **TRENDnet Technical Support**

### US · Canada

**Toll Free Telephone:** 1(866) 845-3673 24/7 Tech Support

Europe (Germany • France • Italy • Spain • Switzerland • UK)

Toll Free Telephone: +00800 60 76 76 67

English/Espanol - 24/7 Francais/Deutsch - 11am-8pm, Monday - Friday MET

### Worldwide

Telephone: +(31) (0) 20 504 05 35

English/Espanol - 24/7 Francais/Deutsch - 11am-8pm, Monday - Friday MET

## **Product Warranty Registration**

Please take a moment to register your product online. Go to TRENDnet's website at http://www.trendnet.com

## TRENDNET

20675 Manhattan Place Torrance, CA 90501 USA

