

WIN_XP.TXT

1. In XP, enable TCP/IP protocol and make sure the workstation is receiving an IP address.
2. In Network Properties, add IPX/SPX protocol and Client for Netware Network.
3. From the win95/WINNT Support diskette, run setup.exe. Follow the wizard and install both the "driver" and "setbox". It is possible that the installation will stop at 95%, wait for a couple of minutes, if there is no progress, click "Cancel". If a window pops up and ask you to enter device name, click "Cancel".
4. Go to "Start", "Program", "Print Server", and open "Setbox".
5. Enter "Device name" (SC#####, you can find this number on the serial number label), IP address, subnet mask, and then click "Save".
6. Go to "Start", select "Settings", and select "Printer and Fax".
7. Click on "Add printer". Select to add "local printer".
8. XP will search for PNP printers and it finds none, click "Next".
9. Click on "Create a new port".
10. At "Port" click on "Browse", XP will find the print server name with assigned IP address; select the print server and then follow the instructions on the screen to finish adding the printer.