



Quick Installation Guide  

TE100-P21
V2

Table of Contents

English	1
1. Before You Start	1
2. How to Install	2
3. Configure the Printer Server	3
4. Add the Printer to your computer	5
Troubleshooting	8



Package Contents

- TE100-P21
- Utility CD-ROM
- Multi-Language Quick Installation Guide
- AC Power Adapter (5V DC, 2.5A)

System Requirements

- CD-ROM Drive
- Router
- An available DHCP Server – routers usually have a built-in DHCP server

Supported Operating Systems	CPU	Memory
Windows 7 (32/64-bit)	1GHz or above	1GB RAM or above
Windows Vista (32/64-bit)	800MHz or above	512MB RAM or above
Windows 2003 Server / XP (32/64-bit) / 2000 / ME / 98SE	300MHz or above	256MB RAM or above
Mac OS X (10.6)	Intel Processor	1GB RAM or above
Mac OS X (10.5)	867MHz or above	512MB RAM or above
Mac OS X (10.4)	333MHz or above	256MB RAM or above
Mac OS X (10.1-10.3)	300MHz or above	

2. Hardware to Install

Note: Please power off all printers before connecting them to the print server. Then turn on each printer after you make your hardware connections.

1. Connect a RJ-45 network cable from a Switch/Router to the LAN port of the Print Server.

2. Connect a Parallel or USB Printer to the print server.

3. Connect the AC Power Adapter to the Print Server and then to a power outlet.

4. Power ON the printer.



ENGLISH

FRANÇAIS

DEUTSCH

ESPAÑOL

РУССКИЙ

3. Configure the Print Server

Note: The Print Server can be managed using the PS-Utility or a web browser. For Mac users, change your computer's IP address to 192.168.0.X (where X is an available number from 2-254). Since the Print Server's default IP address is 192.168.0.1, make sure no other network devices are assigned an IP address of 192.168.0.1. Then enter <http://192.168.0.1> in your web browser to access the Print Server's Web Utility.


For Windows Users

1. Insert the Utility CD-ROM into your computer's CD-ROM Drive.

2. Click Run Autorun.exe (Windows 7/Vista only).




3. Click Utility -> PS Utility.

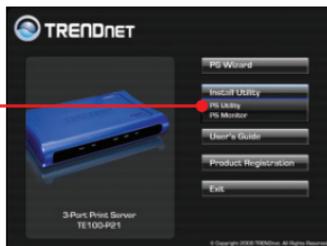


4. Follow the InstallShield Wizard instructions. Click Finish.




5. Click the Print Server and click Change IP Address. Manually assign the IP Address of the Print Server and then click OK.
Note: The IP Address must match the network segment of your network.

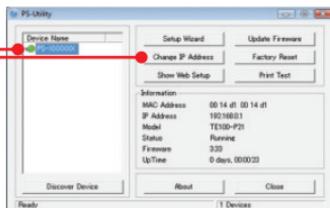

6. Click OK.

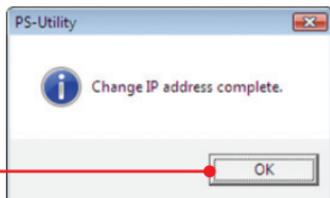

7. Click Show Web Setup.

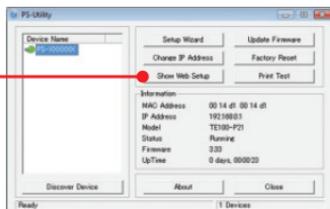

Print Server configuration is now complete.

4. Add the Printer to your computer

Note: For printing instructions for Windows ME, 98SE and Mac OS X, please consult the User's Guide included on the Utility CD-ROM.

Windows 7/Vista/2003 Server/XP/2000

1. Click PS Wizard and then click Windows 7/Vista/2003 Server/XP/2000.




2. Select the print server, select the desired port and then click Add Printer.

Note:


1. If your printer is connect to USB1, select PS-XXXXXX-U1. If your printer is connected to USB2, select PS-XXXXXX-U2. If your printer is connected to LPT, select PS-XXXXXX-P3.
2. PS-XXXXXX represents the Server Name of your print server. Your print server will have a different Server Name.




3. Select the appropriate driver for your printer and then click Next.

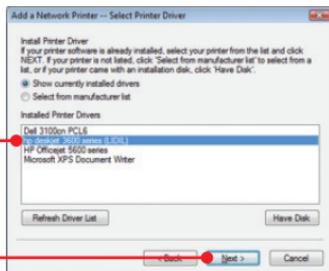


4. Click Next.

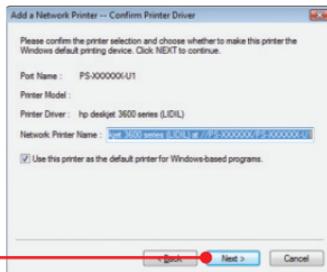

5. Click Print Test Page.

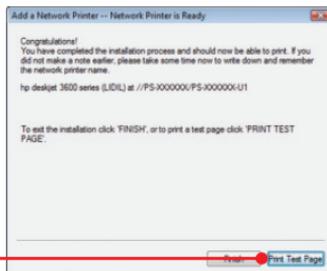

6. Click OK.

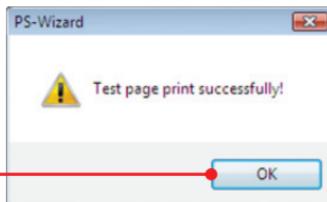

7. Click Finish.

8. Repeat steps 1 to 7 to add the printer to other computers on the network and to add additional printers.

Add Printer is now complete

For detailed information regarding the TE100-P21 configuration and advanced settings, please refer to User's Guide on the Utility CD-ROM, or TRENDnet's website at <http://www.trendnet.com>.

Register Your Product

To ensure the highest level of customer service and support, please take a moment to register your product Online at: www.trendnet.com/register
Thank you for choosing TRENDnet

1. I inserted the Utility CD-ROM into my computer's CD-ROM Drive but the installation menu does not appear automatically. What should I do?

1. For Windows 2000/2003 Server/XP, if the window does not appear automatically, click Start, click Run and type D:\autorun.exe where "D" in "D:\autorun.exe" is the letter assigned to your CD-ROM Drive, and then press the ENTER key on your keyboard.
2. For Windows Vista, if the installation menu does not appear automatically, click on the Windows Icon on the bottom left hand corner of the screen, click on the "Start Search" box, and type D:\autorun.exe, where "D" in "D:\autorun.exe" is the letter assigned to your CD-ROM Drive, and then press the ENTER key on your keyboard.
3. For Windows 7, if the installation menu does not appear automatically, click on the Windows Icon on the bottom left hand corner of the screen,, click the "Search programs and files" box, and type D:\autorun.exe, where "D" in "D:\autorun.exe" is the letter assigned to your CD-ROM Drive, and then press the ENTER key on your keyboard

2. The PS Wizard / PS Utility is unable to see my printer server. What should I do?

1. Double check your hardware connections; make sure that the print server and printer are powered ON and are properly connected.
2. Click Discover.
3. Disable any software firewall programs (e.g. ZoneAlarm). If your computer is running Windows XP or Vista, disable the built in firewall program.

3. My printer does not print the entire document. What should I do?

Windows 7

1. Click on the Windows icon on the bottom left-hand corner of the screen.
2. Click Devices and Printers.
3. Right click on the printer and select Printer Properties.
4. Click the Advanced tab.
5. Uncheck Enable advanced printing features.
6. Click Apply.
7. Click OK.

Windows Vista

1. Click on the Windows icon on the bottom left-hand corner of the screen.
2. Click Control Panel.
3. Click Classic View.
4. Click Printers.
5. Right click on the printer and select Properties.
6. Click the Advanced tab.
7. Uncheck Enable advanced printing features.
8. Click Apply.
9. Click OK.

4. I successfully added a printer to my computer and I can print a test page, but I cannot print anything from Microsoft Word or other applications.

Make sure the printer is set as your default printer. On Windows 7, click the Windows icon -> Devices and Printers and verify that your printer icon has a check on it. On Windows Vista, click the Start Icon-> Control Panel -> Classic View -> Printers and verify that your printer icon has a check on it. On Windows XP/2003 Server, click Start and then click Printers & Faxes and verify that your printer icon has a check on it.

5. I configured my print server to automatically receive an IP Address from a DHCP server, and now I cannot go into the Print Server's web utility.

1. Open PS Wizard (See 4. Add the Printer to your PC) to locate your print server's IP Address.
2. For MAC users, press the Reset button at the back of the TE100-P21, hold the button for 15 seconds, release the button, and enter <http://192.168.0.1> in a web browser to access the web utility feature.

6. How do I setup the TE100-P21 on a Mac?

Type in <http://192.168.0.1> in your browser to logon to the built-in web configuration.

If you still encounter problems or have any questions regarding the TE100-P21, please refer to the User's Guide included on the Utility CD-ROM or contact TRENDnet's Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ADVERTENCIA

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.



Product Warranty Registration

Please take a moment to register your product online.
Go to TRENDnet's website at <http://www.trendnet.com/register>