







Table of Contents

Русский	1
1. Что нужно сделать в самом начале 2. Чорядок подключения 3. Работа с принтером печати	1 2 3
Troubleshooting	7

1. Что нужно сделать в самом начале



Системные требования

- 1. Pentium с процессором 100 МГц или выше
- 2. 8 МБ ОЗУ или более
- 3. Windows, Linux, Mac OS X или другая OC.





2. Порядок подключения

<u>Примечание</u>: Отключите питание всех принтеров перед их подключением к серверу печати. Затем после подключения оборудования соответственно включите каждый принтер.





3. Работа с принтером печати

Примечание: Пользователи МАС должны изменить IP-адрес своих компьютеров на 192.168.0.Х (где Х имеющееся число от 2 до 254) и ввести 192.168.0.1 в своем браузере для получения доступа к утилите сервера печати в Интернете.

Пользователям Windows

1. Установив установочный компакт-диск, щелкните по Install Utility.





- 2. Пройдите все этапы установки и щелкните по кнопке Finish.
- **3.** Двойным щелчком выберите значок PS-Utility.





Device Name	Setup Wicard Change IP Address Show Web Setup		Update Firmware Factory Report	
				Print Test
				Mornation
	MAC Address	00 00 1	b 55 77 9e	
	IP Address	19216	RIL1	
	Hadel	TEIOD	121	
	Status	PLANIN .	•	
	UpTine	0 days	000000	
Discover Device	1 Annt	1	Circu	

5. Выберите Manually Assign и введите IP Address, соответствующий вашему текущему сетевому сегменту. Щелкните по кнопке ОК. Для подтверж-дения изменения появится еще одно окно. Щелкните по кнопке ОК.

4. Выберите Change IP Address.



6. В PS-Utility выберите Show Web Setup. Найдите и запишите для себя имена: Server Name и Printer Name.



<u>Примечание:</u> Если вы пользуетесь Windows 95/98(SE)/ME, обязательно установите NETBEUI до того, как следовать нижеприведенным указаниям. Если вы пользуетесь Windows 2000/XP, то достаточно добавить свой принтер, используя нижеприведенные указания. Для получения указаний по TCP/IP-печати воспользуйтесь руководством пользователя на CD-ROM-диске.







Установка завершена.

<u>Примечание:</u> Подробнее о дополнительных возможностях узнайте в Руководстве пользователя.



Q1. I cannot add a network printer after I typed the server name and printer name.

A1. Please double check your hardware connections. Make sure that your printer is connected properly to the print server and your power adapter is connected properly to a power outlet.

Q2. I have double checked my hardware connections and have verified that everything is connected properly, but I still cannot connect to my printer after I typed in the server name and printer name.

A2. Make sure that you are typing the correct printer name. If your USB printer is connected to the USB2 slot, then use the Printer Name that is by the USB2 heading in the web configuration utility. The following examples will give you a better idea of how the print server maps each physical port with a logical name:

LPT port = \\PS-567787\PS-567787-LP1 USB1 port = \\PS-567787\PS-567787-U1 USB2 port = \\PS-567787\PS-567787-U2

Q3. I verified that the hardware installation is correct and typed the correct printer name, but I still cannot find the network printer.

A3. Make sure that the server name and printer name is entered correctly. There should be no spaces, and the back slashes that separate the server name and printer name should be this "\\", instead of this "//".

Q4. I typed in the server name and printer name correctly and successfully installed the network printer. But I can't print a test page.

A4. Make sure that the printer is online by turning the printer on. Make sure the power adapter of your printer is properly connected to a power outlet.

Q5. I successfully added a network printer to my computer, and my printer is receiving power. I can also print a test page, but I cannot print anything from Microsoft Word or other applications.

A5. Make sure to set the newly installed network printer to your default printer.

Q6. I configured my print server to automatically receive an IP Address from a DHCP server, and now I cannot go into the print server's web utility.

A6. Press the Reset button at the back of the TE100-P21, hold the button for 15 seconds, release the button, and enter http://192.168.0.1 in a web browser to access the web utility feature.

Q7. I pressed the reset button and held it for 15 seconds. I also typed in http://192.168.0.1 in a web browser, but I still cannot access my print server.

A7. Make sure to change your local IP address to 192.168.0.xxx where xxx is an available number between 2 to 254. You can also use the PS-Utility to locate the print server's IP address, or enable UPnP.

If you have any questions regarding the print server, please contact TRENDnet Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ADVERTENCIA

En todos nuestros equipos se mencionan claramente las caracteristicas del adaptador de alimentacón necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños fisicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energia electrica domiciliaria existente en el pais o zona de instalación.



TRENDnet Technical Support

US · Canada

Toll Free Telephone: 1(866) 845-3673 24/7 Tech Support

Europe (Germany • France • Italy • Spain • Switzerland • UK)

Toll Free Telephone: +00800 60 76 76 67

English/Espanol - 24/7 Francais/Deutsch - 11am-8pm, Monday - Friday MET

Worldwide

Telephone: +(31) (0) 20 504 05 35

English/Espanol - 24/7 Francais/Deutsch - 11am-8pm, Monday - Friday MET

Product Warranty Registration

Please take a moment to register your product online. Go to TRENDnet's website at http://www.trendnet.com

TRENDNET

20675 Manhattan Place Torrance, CA 90501 USA



Copyright ©2006. All Rights Reserved. TRENDnet.