

TRENDnet®



Quick Installation Guide

Multi-Gig Web Smart Switch Series

Table of Contents

1 Русский

1. Перед началом работы
2. Краткий справочник
3. Установка и настройка оборудования

1. Перед началом работы

Содержимое упаковки

- Руководство по быстрой установке
- Сетевой провод (1.8 м / 6 футов) (TEG-7124WS)
- Силовой адаптер(12V пост. тока, 1.5A) (TEG-3102WS)
- Набор оборудования монтажной стойки (только TEG-7124WS)

Требования к установке

- Компьютер с портом Ethernet и веб-браузер
- Сетевая кабель

Дополнительное оборудование


- Корпус 19 дюймов стандарта EIA
- Модуль SFP (напр., TE100-MGBFX, TEG-MGBSX, TEG-MGBS10, TEG-MGBS40, TEG-MGBS80, TEG-MGBS10D3, TEG-MGBS10D5, TEG-MGBS40D3, TEG-MGBS40D5)

2. Краткий справочник

Камеру с IP



Камеру с IP

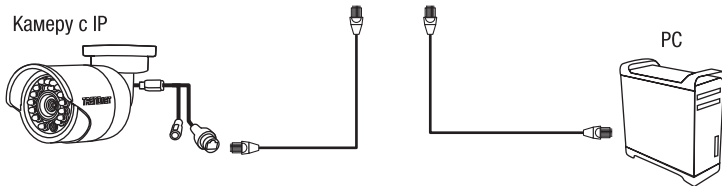

Примечание: Модель переключателя может отличаться от той, которая показана в приведенном ниже примере.

3. Установка и настройка оборудования

ENGLISH

FRAÇAIS


DEUTSCH

ESPAÑOL


PORTUGUÉS

ITALIANO

РУССКИЙ

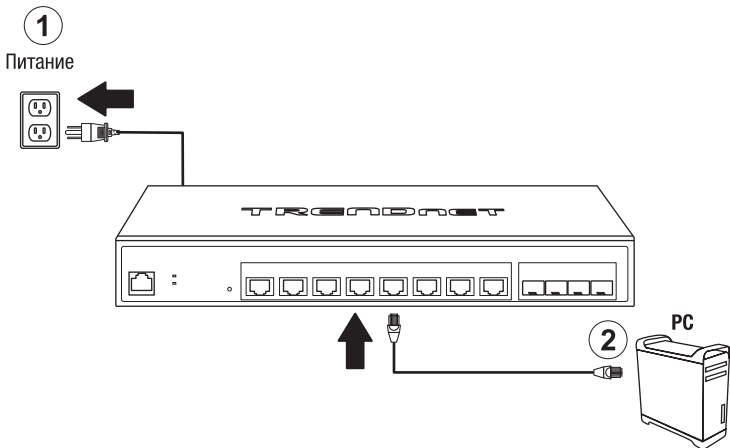

3. Необходимо назначить сетевому адаптеру компьютера статический IP-адрес в подсети 192.168.10.x (напр., 192.168.10.25) и маску подсети 255.255.255.0.
4. Откройте свой браузер, введите IP-адрес коммутатор в адресной строке и нажмите на **Enter** (Ввод). IP-адрес по умолчанию 192.168.10.200.

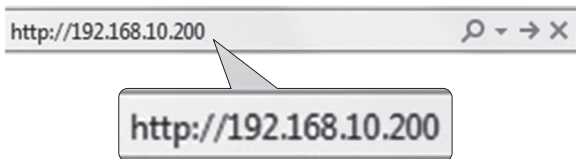


5. Введите **User Name (имя пользователя)** и **Password (пароль)**, затем щелкните по кнопке **Login**. По умолчанию:

User name (**Имя пользователя**): **admin**

Password (**Пароль**): **admin**

Примечание: Имя пользователя и пароль следует вводить с учетом регистра.

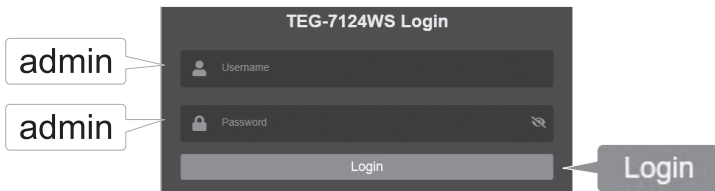

6. Нажмите **System (Система)**, а затем **IP Settings (Настройка IP)**.
7. Настройте коммутатор в соответствии с требованиями сети. Нажмите кнопку **Apply (Применить)** чтобы сохранить изменения.



Загрузить самую последнюю версию направляющего выступления и общего назначения потребителя, пожалуйста пойдите к <https://www.trendnet.com/support> и выбирает **Switch Model** в пределах Загрузки Продуктов раскрывающийся список.

LED Definition Reference

TEG-7124WS LED Indicators

LED	Color	Status	Description
Power	Green	Solid	Power On
	Off	Off	Power Off
Fault	Amber	Solid	Switch has Error
	Off	Off	No error
RJ-45 Ports 1-8: SPEED	Green	Solid	2.5/5/10Gbps connected
	Amber	Solid	100/1000Mbps connected
RJ-45 Ports 1-8: LINK / ACT	Green	Blinking	Data Transmitting
	Off	Off	No Link
SFP Ports 9-12: SPEED	Green	Solid	10Gbps connected
	Amber	Solid	1Gbps connected
SFP Ports 9-12: LINK / ACT	Green	Blinking	Data Transmitting
	Off	Off	No Link

TEG-3102WS LED Indicators


LED	Color	Status	Description
Power	Green	Solid	Power On
	Green	Blinking	Switch is Booting
	Off	Off	Power Off
Fault	Amber	Solid	Switch has Error
	Off	Off	No error
RJ-45 Ports 1-8: SPEED	Green	Solid	2.5Gbps connected
	Amber	Solid	100/1000Mbps connected
RJ-45 Ports 1-8: LINK / ACT	Green	Solid	Link connected
	Green	Blinking	Data Transmitting
	Off	Off	No Link
SFP Ports 9F - 10F: LINK / ACT / SPEED	Green	Solid	10Gbps connected
	Amber	Solid	1Gbps connected
	Green or Amber	Blinking	Data Transmitting
	Off	Off	No Link

UL Warning

- 1) Elevated Operating Ambient Temperature - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (TMRA).
- 2) Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
- 3) Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
- 4) Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
- 5) Reliable Earthing - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).


Rack Installation

The Switch can be mounted in an EIA standard, 19-inch rack, which can be placed in a wiring closet with other equipment. To install, attach the mounting brackets on the switch's front panel (one on each side) and secure them with the screws provided.

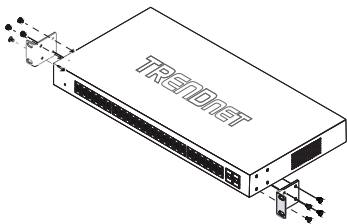

1. Attach the mounting brackets to the Switch

Use the screws provided with the equipment rack to mount the Switch on the rack.

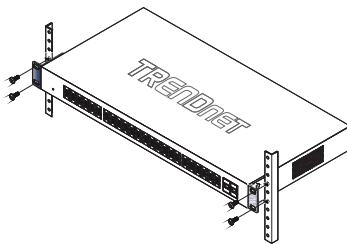

2. Install the Switch in an equipment rack

TRENDNET[®]

Certifications

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received.

Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or Retailer for recycling advice.

Fiber product warning note:

If the Optical Transceiver doesn't ship with the unit, the user manual shall have the description as below or equivalent:

"This product is intended to be used with a UL Listed Optical Transceiver product, Rated DC3.3V, Laser Class I."

Laser warning note:

This product is intended to be used with a UL Listed Optical Transceiver product, Rated DC3.3V, Laser Class I.

Technical Support

If you have any questions regarding the product installation, please contact our Technical Support.

Toll free US/Canada: **1-855-373-4741**

Regional phone numbers available at www.trendnet.com/support

TRENDnet

20675 Manhattan Place
Torrance, CA 90501
USA

Applies to PoE Products Only: This product is to be connected only to PoE networks without routing to the outside plant.

Note

The Manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Advertencia

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.

Product Warranty Registration

Please take a moment to register your product online. Go to TRENDnet's website at: www.trendnet.com/register