



Quick Installation Guide



Table of Contents

| Русский | 1 |
|--|---|
| 1. Что нужно сделать в самом начале 2. Порядок установки 3. Управление | 2 |
| Specifications Troubleshooting | |

1. Что нужно сделать в самом начале




Содержимое упаковки

- TK-200/TK-400
- Руководство по быстрой установке
- KVM-кабели

Системные требования

- Клавиатура PS/2
- Мышь PS/2
- VGA монитор
- Windows 98/ME/2000/XP(SP1/SP2)/2003 server, Unix и Linux.

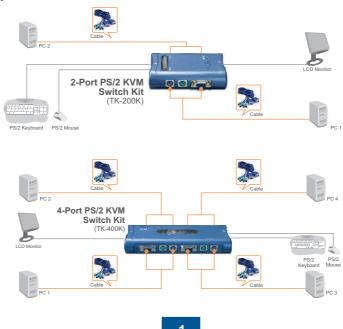

Русский

<u>Применение</u>

2. Порядок установки

<u>Примечание:</u> Переключатель клавиатура/видео/мышь TK-200/TK-400 не требует установки драйверов или программ.



3. Присоедините к консольному порту переключателя совместно используемую клавиатуру, монитор и мышь.





4. Включите присоединенные компьютеры один за одним и дождитесь загрузки рабочего стола на каждом из них.



Установка завершена.

<u>Примечание:</u> Не нажимайте кнопки на переключателе клавиатура/видео/мышь для выполнения системной команды во время загрузки на компьютерах. Перейдите к разделу 3 Управление.



3. Управление

<u>Примечание:</u> Для переключения от компьютера к компьютеру используйте кнопка на передней панели.

3.1 кнопка

Переключение от компьютера к компьютеру – использовать кнопка.



 
3.2 Назначенные клавиши

Команды с клавиатуры подаются с помощью комбинации трех клавиш:

Команда = ScrLk + ScrLk + управляющая клавиша

После нажатия на клавишу ScrLk успейте нажать на ScrLk опять в течение 2-х секунд. Опять в течение 2-х секунд успейте нажать на управляющую клавишу. Если не нажать на клавишу в течение 2-х секунд, режим использования назначенных клавиш в коммутаторе отключится.

Приводим ниже необходимые команды для назначенных клавиш:



В " Hot Key" режиме, нажмите кнопку "Стрелка Вверх", для того чтобы выбрать следующий порт, нажмите кнопку "Стрелка Вниз", для того чтобы выбрать предыдущий порт, и нажмите кнопку "S", для того чтобы установить KVM в Auto-Scan режим.



Specifications

| Computer Connections: | 2 (TK-200) or 4 (TK-400) |
|--|--|
| KVM Cable: | TK-200K: 2 sets of 1.2 M (4 ft) High Grade KVM Cables TK-400K: 4 sets of 1.8 M (6 ft) High Grade KVM Cables |
| Console Port Connectors: (All Female) | 1 x PS/2 keyboard 6-pin mini din 1 x PS/2 mouse 6-pin mini din 1 x VGA HDB15 (15-pin) |
| PC Port Connectors: (All Female) | TK-200K: $2 \times PS/2$ keyboard 6-pin mini din $2 \times PS/2$ mouse 6-pin mini din $2 \times VGA$ HDB15 (15-pin)TK-400K: $4 \times PS/2$ keyboard 6-pin mini din $4 \times PS/2$ mouse 6-pin mini din $4 \times VGA$ HDB15 (15-pin) |
| VGA Resolution: | 1920 x 1440 |
| Port Selection: | Push Button and Hot-Key Commands |
| Auto-Scan Intervals: | 4 seconds |
| Power Type: | PS/2 Interface Power. Optional 9V DC, 500mA Adapter |
| Dimensions: | TK-200: 113 x 84 x 31 mm (4.45 x 3.31 x 1.22 inches) TK-400: 192 x 81 x 31 mm (7.5 x 3.19 x 1.22 inches) |
| Weight: | Approx. 155g. (5.5 oz.) (TK-200) Approx. 240g. (8.5 oz.) (TK-400) |
| Operating Temperature: | 0°C ~ 40°C (32°F ~104°F) |
| Storage Temperature: | -20°C ~ 60°C (-4°F ~ 140°F) |
| Humidity: | 0%~80%, Non-Condensing |
| Certifications: | FCC and CE |

Q1: Where is the AC adapter? I did not find one in the box.

A1: The TK-200/TK-400 do not require an AC adapter. It draws power from the PS/2 connection of your computers. As long as you are connected to the PS/2 port, your KVM switch will function.

Q2: I have the KVM switch connected properly, but my keyboard and mouse don't work.

A2: Please make sure your PS/2 ports are working properly by testing it with another mouse or keyboard. Once you confirm that the PS/2 ports are functional, please reboot your computers, and try to use the KVM switch again.

Q3: Can I connect or disconnect the KVM cables while the computers are turned on?

A3: Yes, you can connect or disconnect the KVM cables while the computers are turned on, because the interface is Hot-Pluggable.

Q4: Will the KVM switch restore the keyboard settings when switching between computers?

A4: Yes, the KVM switch will restore the keyboard settings when switching between computers. (i.e.: Cap lock, Num key, etc.)

Q5: How do I switch from one computer to another with the KVM switch?

A5: You can switch PCs by pressing the push button on the KVM switch or by using the Hot-Key commands. Go to Section 3 Operation for more information.

If you still encounter problems or have any questions regarding the TK-200K/TK-400K, please contact Trendnet's Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

TK-200K/TK-400K - 2 Year Warranty

If a product does not operate as warranted above during the applicable warranty period, TRENDnet shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product. All products that are replaced will become the property of TRENDnet. Replacement products may be new or reconditioned.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet office within the applicable warranty period for a Return Material Authorization (RMA) number, accompanied by a copy of the dated proof of the purchase. Products returned to TRENDnet must be pre-authorized by TRENDnet with RMA number marked on the outside of the package, and sent prepaid, insured and packaged appropriately for safe shipment. WARRANTIES EXCLUSIVE: IF THE TRENDnet PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDnet'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDNET NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDNET'S PRODUCTS.

TRENDNET SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLECT, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDnet ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATE, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDNE'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

AC/DC Power Adapter, Cooling Fan, and Power Supply carry 1 Year Warranty



TRENDnet Technical Support

US · Canada

Toll Free Telephone: 1(866) 845-3673 24/7 Tech Support

Europe (Germany • France • Italy • Spain • Switzerland • UK)

Toll Free Telephone: +00800 60 76 76 67

English/Espanol - 24/7 Francais/Deutsch - 11am-8pm, Monday - Friday MET

Worldwide

Telephone: +(31) (0) 20 504 05 35

English/Espanol - 24/7 Francais/Deutsch - 11am-8pm, Monday - Friday MET

Product Warranty Registration

Please take a moment to register your product online. Go to TRENDnet's website at http://www.trendnet.com



TRENDNET

3135 Kashiwa Street Torrance, CA 90505 USA

Copyright ©2006. All Rights Reserved. TRENDnet.