



Quick Installation Guide



TK-802R
TK-1602R

Table of Contents

English	1
1. Before You Start	1
2. How to Install	2
3. Operation	5
Troubleshooting	10

1. Before You Start



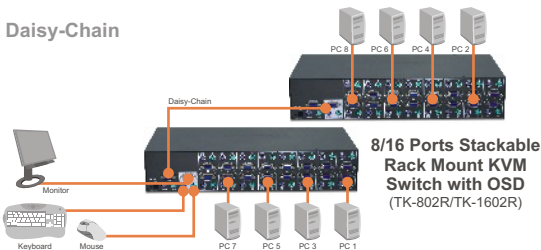 
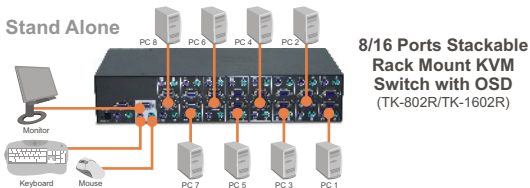 
Package Contents

- TK-802R/TK-1602R
- Quick Installation Guide
- Daisy-Chain Cable
- Rack-Mount kit
- AC Power Adapter (9V DC, 1A)

System Requirements

- PS/2 Keyboard
- PS/2 Mouse
- VGA Compatible Monitor
- KVM Cables
- Windows 98/ME/2000/XP/2003 Server, Linux, and Netware

Application



2. How to Install

1. Turn **OFF** all computers and their peripherals, and then disconnect all power cords.

2. Use the KVM cables to connect each computer to the KVM switch.
Note: Do not use the supplied daisy-chain cable to connect to your computer. You must purchase these KVM cables separately.

3. Connect the shared PS/2 keyboard, monitor, and PS/2 mouse to the KVM switch's **Console Port**. (TK-1602R shown)

4. Connect the included AC Power Adapter to the KVM switch and then to a power outlet.

5. Turn **ON** the connected computers one-by-one and wait until each computer's desktop appears.



Daisy-Chain

Note:

1. Must use the daisy chain cable provided with the KVM switch
2. Only daisy chain the KVM switch with another TK-802R or TK-1602R.
3. Stackable up to 16 KVM switches

6. Connect one end of the daisy-chain to the **Daisy chain in** port on the first (master) KVM switch.



7. Connect the opposite end of the daisy-chain cable to the **Console port** on the second (slave) switch.

8. If you have a third KVM switch, connect one end of the daisy chain to the **Daisy chain in** port on the second KVM switch. Then connect the opposite end of the daisy-chain cable to the **Console port** on the third (slave) switch. Repeat for each additional switch.

9. Press Port 1 button on the first (master) switch for 3 seconds to initialize the daisy chain.

Note: DO NOT PRESS the port 1 button for 3 seconds or longer on any slave switch because this will initialize only the switches downstream from this slave switch.

10. Turn **ON** the connected computers one-by-one and wait until each computer's desktop appears.

Rack Mount

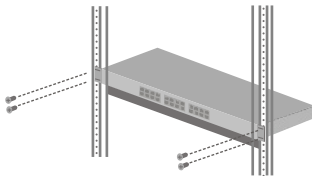 
The KVM Switch can be mounted in an EIA standard-size, 19-inch rack, which can be placed in a wiring closet with other equipment.

Note: If you would like to mount the KVM switch to a EIA 19" equipment rack, install the included mounting brackets to the sides of the KVM switch, secure them with the screws provided, and then mount the KVM switch to the equipment rack with the hardware provided by the equipment rack manufacturer.

11. Attach the mounting brackets to both sides of the switch and secure them with the provided screws.



12. Carefully position the switch onto the rack. Align the bracket to the screw holes on the rack, then use the screws provided with the equipment rack to mount the switch.



Your installation is now complete.

3. Operation

Note: To switch between computers, you can use the front-panel push buttons or the Hot Key commands.

LED Indicators

Bank Number: Indicates the number or sequence of the switch when daisy chained. This number is 01 when the switch is not daisy chained.

Red LED light: KVM cable is connected and PC is powering the KVM switch.

Green LED light: Indicates the selected PC port is active, whether the computer is turned on or off.



Push Buttons

Press the push buttons to switch between computers.



 
 

 
Hot-Key Commands

A keyboard hot-key command consists of at least three keystrokes:

 

 

 

Hot-Key command = ScrLk + ScrLk + Command key(s)

After pressing the ScrLk key, you have 2 seconds to press the ScrLk key again. You then have another 2 seconds to press a command key. A beep confirms that the KVM switch is in "Hot-Key" mode. If you do not press a key within 2 seconds, the switch will exit hot-key mode.

To select a specific PC port:

Select PC =  +  +  +  +  + 
Bank number Port number

For example, to select port 1, hit the following key sequence:

Select PC =  +  +  +  +  + 

For example, to select port 10 of the 10th KVM switch on a series of daisy chained TK-1602R's you hit the following key sequence:

Select PC =  +  +  +  +  + 

Note: When using the KVM switch standalone, type in 0 + 1 for the bank number.

For a list of all the Hot-Key commands, please see the Quick Reference Sheet.

Quick Reference Sheet for TK-802R/TK-1602R

Command	Hot-Keys	OSD	Front-panel	Description
Select PC	<p>(ab) = bank number (12) = 2-digit channel number</p>	Use arrow keys to select and then hit enter	Press Push Button for a specific port to the switch	Select the active bank (switch) and channel (computer)
Next lower channel		Use arrow keys to select and then hit enter	---	Select the next lower connected channel. Only works within active bank.
Next higher channel		Use arrow keys to select and then hit enter	---	Select the next higher connected channel. Only works within active bank.
Next lower bank		PgUp	---	Select the next lower bank when multiple switches are daisy-chained
Next higher bank		PgDn	---	Select the next higher bank when multiple switches are daisy chained
Autoscan Beep Sound On/Off		---	---	Toggle On/Off beep during autoscan mode
Reflash EEPROM		---	---	Restore to Factory Defaults except password
Find PC by Name		---	---	Search presence of a specific PC by name
Change PC Name	---	Use arrow keys to select and then hit enter	---	Change the PC Name

Quick Reference Sheet for TK-802R/TK-1602R

Command	Hot-Keys	OSD	Front-panel	Description
Reset / Initialize	<div style="display: flex; align-items: center; gap: 5px;"> ScrLk + ScrLk + End </div>	Press on button 1 for 3 seconds	---	Resets/reboot/initialize daisy-chain and activates password protection
Show OSD Menu	<div style="display: flex; align-items: center; gap: 5px;"> ScrLk + ScrLk + Space Bar </div>	---	---	Activates OSD menu
Autoscan	<div style="display: flex; align-items: center; gap: 5px;"> ScrLk + ScrLk + S </div>	---	Press any push button	Autoscan through every connected channel for quick browsing of each channel
Autoscan with Programmable Delay Time	---	Use arrow keys to navigate, then hit enter to select and edit name	---	Specify a delay within a range of 5-99 seconds
Stop Autoscan	<div style="display: flex; align-items: center; gap: 5px;"> Press any key on keyboard </div>	Press any button or key	Press any button or key	End Autoscan activity

Q1: Do I need to use the included external AC adapter?

A1: It is recommended that you use the included external AC adapter with the TK-802R/TK-1602R KVM switch.

Q2: Can I connect or disconnect the KVM cables while the computers are turned on?

A2: Yes, you can connect or disconnect the KVM cables while the computers are turned on, because the interface is Hot-Pluggable.

Q3: Will the KVM switch restore the keyboard settings when switching between computers?

A3: Yes, the KVM switch will restore the keyboard settings when switching between computers. (i.e.: Caps Lock, Num Lock, etc.)

Q4: The KVM switch prompts for a password. What should I do?

A4: The default password is 00000000. Type this in. If this does not work, follow the below procedure to reset the KVM switch:

- 1) Shutdown your computers
- 2) Unplug the power to the KVM switch
- 3) Press on the reset button using a pin or paper clip. The reset button is on the back of the KVM switch, next to the power.
- 4) Plug the power while still pressing on the reset button.
- 5) Wait for the beep and let go.

If you still encounter problems or have any questions regarding the TK-802R/TK-1602R, please contact Trendnet's Technical Support Department.

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

TK-802R/TK-1602R - 2-Year Warranty

If a product does not operate as warranted above during the applicable warranty period, TRENDnet shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product. All products that are replaced will become the property of TRENDnet. Replacement products may be new or reconditioned.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet office within the applicable warranty period for a Return Material Authorization (RMA) number, accompanied by a copy of the dated proof of the purchase. Products returned to TRENDnet must be pre-authorized by TRENDnet with RMA number marked on the outside of the package, and sent prepaid, insured and packaged appropriately for safe shipment.

WARRANTIES EXCLUSIVE: IF THE TRENDnet PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDnet'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDnet NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDnet'S PRODUCTS.

TRENDnet SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDnet ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDnet'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

AC/DC Power Adapter, Cooling Fan, Cables and Power Supply carry a 1 Year Warranty

Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ADVERTENCIA

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.



TRENDnet Technical Support

US • Canada

Toll Free Telephone: 1(866) 845-3673

24/7 Tech Support

Europe (Germany • France • Italy • Spain • Switzerland • UK)

Toll Free Telephone: +00800 60 76 76 67

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

Worldwide

Telephone: +(31) (0) 20 504 05 35

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

TRENDnet

20675 Manhattan Place

Torrance, CA 90501

USA