TRENDNET®

User's Guide

Mira App

Legal Information

By installing the Mira application, you are agreeing to TRENDnet's <u>terms of use</u> and <u>privacy policy</u>.

Symbol Conventions

Symbol	Description
Danger	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
i Note	Provides additional information to emphasize or supplement important points of the main text.

The symbols that may be found in this document are defined as follows.

Contents

Chapter 1 Introduction1
Chapter 2 Select Country or Region2
Chapter 3 Registration3
3.1 Register by Mobile Phone Number
3.2 Register by Email Address
Chapter 4 Device Management5
4.1 Activate an Inactive Device5
4.2 Add Device for Management6
4.2.1 Add an Online Device7
4.2.2 Add a Device by Scanning Device QR Code8
4.2.3 Add a Device by IP/Domain
4.2.4 Add a Device by a Domain10
4.3 Connect Offline Device to Network
4.4 Unbind Device from Its Original Account13
4.5 Device Settings
4.5.1 Edit Information of Cameras Linked to Added Device13
4.5.2 Set Video and Image Encryption14
4.5.3 Set DDNS
4.5.4 Change Device's Verification Code16
4.5.5 Remotely Configure Device17
4.6 Upgrade Device Firmware25
Chapter 5 Favorites Management26
5.1 Add Cameras to Favorites on Device List Page26
5.2 Add Cameras to Favorites during Live View26
5.3 Remove Cameras from Favorites27
Chapter 6 Share Device
6.1 Share a Single Device
6.2 Share Multiple Devices in a Batch
6.3 Silenced Mode for Devices Shared by Others

Chapter 7 Live View
7.1 Start and Stop Live View
7.2 Set Window Division
7.3 Digital Zoom
7.4 PTZ Control
7.4.1 Pan and Tilt a Camera34
7.4.2 Set a Preset
7.4.3 Adjust PTZ Speed 35
7.4.4 Other Functions
7.5 Capturing and Recording
7.6 Set Image Quality for Device Added by IP/Domain37
7.8 Set Image Quality for Mira Device
Chapter 8 Playback40
8.1 Start and Stop Playback40
8.2 Capturing and Recording41
8.3 Set Playback Quality for Device Added by IP/Domain41
8.4 Download Video Segment43
8.5 Adjust Playback Speed
Chapter 9 Other Functions45
9.1 Pictures and Videos
9.2 Fingerprint Authentication45
Chapter 10 System Settings46
10.1 Enable Push Notification 46
10.2 Save Device Parameters
10.3 Auto-receive Alarm after Power-on46
10.4 Generate a QR Code with Device Information47
10.6 View Traffic Statistics
10.7 Generate a QR Code with Wi-Fi Information47
10.8 Floating Live View
10.9 Resume Latest Live View48
10.10 Tablet Mode

10.11 Display/Hide Channel-Zero	.49
10.12 Auto-Download Upgrade File	.49

Chapter 1 Introduction

The Mira, is designed for the phones or tablets based on Android 4.1 or later or iOS 8.0 or later. With the Mobile Client, you can remotely control devices via Wi-Fi or mobile networks. You can also share your devices to other accounts with the sharing feature.

The Mobile Client provides access to the Mira service, which is a cloud service, to manage your devices.

iNote

Network traffic charges may be produced during the use of the Mobile Client. For details, refer to the local ISP.

System Requirement

Android 4.1 or later versions. iOS 8.0 or later versions.

Conventions

In the following chapters, we simplify Mira app as "Mobile Client", devices such as NVR and network camera as "device", and devices which support being added to Mira service as "Mira Device".

Chapter 2 Select Country or Region

The first time you run the Mobile Client, you should select the region where your devices are located. Otherwise, the live view, playback and alarm notification of the devices will fail.

iNote

- The country or the region cannot be changed once you have selected.
- You should select a correct country or region. Or it may affect subsequent operations.

After running the Mobile Client, tap **Select Country or Region** to select a country or region.

Chapter 3 Registration

You can register an account by your mobile phone number or your email address. With a registered account, you can log in to the Mobile Clients running on different mobile phones or tablets, which provides convenience for managing your devices.

3.1 Register by Mobile Phone Number

You can register an account by your mobile phone number.

Steps

- 1. Tap **Login** on the Home page to enter the Login page.
- 2. Tap **Register** to enter the Register page.
- 3. Tap **Terms of Use** and **Privacy Policy** to read the relevant content and then tap **Agree** to continue.
- 4. Enter your mobile phone number and then tap **Get Security Code** to receive the security code for identity verification.
- 5. Enter the security code you received and tap **Next** to continue.
- 6. Create a password.

iNote

We highly recommend you to create a strong password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

7. Tap Finish.

3.2 Register by Email Address

You can register an account by your email address.

Steps

- 1. Tap **Login** on the Home page to enter the Login page.
- 2. Tap **Register** to enter the Register page.
- 3. Tap **Terms of Use** and **Privacy Policy** to read the relevant content and then tap **Agree** to continue.
- 4. Enter your email address and then tap **Get Security Code** to get the security code for identity verification.
- 5. Enter the security code you received and then tap **Next** to continue.

6. Create a password.

iNote

We highly recommend you to create a strong password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

7. Tap Finish.

Chapter 4 Device Management

You can add devices to the Mobile Client, and configure device functions such as video and image encryption.

4.1 Activate an Inactive Device

When adding a device, if the device is not activated, a window will pop up to ask you to activate the device.

Before You Start

The device and the phone or tablet running the Mobile Client should be in the same LAN.

Steps

iNote

For the access control device, you should activate it via other clients (e.g., Mira client software).

1. Add a device.

iNote

See Add Device for Management for details.

- 2. On the Activate Device page, tap Set Device Password.
- 3. Create a password.



ACaution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

4. Tap **Activate** to activate the device.

5. Enable DHCP or manually configure network if you enter the Network Configuration page.

4.2 Add Device for Management

You need to add devices to the Mobile Client first so that subsequent operations such as live view and playback can be available. If you want to receive alarm event information from a device, you should add it by scanning QR code or a domain.

iNote

• For details about managing alarm event information, see *Alarm Notification*.

4.2.1 Add an Online Device

The Mobile Client can detect the online devices in the same local area network with your phone or tablet, and you can add the detected online devices to the Mobile Client.

Before You Start

Make sure the devices are connected to the same local area network with the phone or tablet.

Steps

1. On the device list page, tap + \rightarrow **Online Device** to enter the Online Device page.

All detected online devices will be in the list.

2. Select a device for adding.



Figure 4-2 Online Device

iNote

- For network cameras, make sure the device Multicast Discovery function is enabled so that the online network camera can be automatically detected via private multicast protocol in the LAN. For details, see User Manual of the network camera.
- For the inactive device (excluding the access control device), tap **Active** to create a password for it before you can add the device properly. For more information about the device activation, see **Activate an Inactive Device**.
- 3. Optional: Edit the network information.
 - 1) Tap 🖊.
 - 2) Change the device IP address to the same LAN as your phone's by either editing the IP address manually or enabling the device DHCP function.
 - 3) Tap 📄 and input the admin password of the device to save the settings.
- 4. Tap **Add**.
- 5. Enter the required information, including device alias, user name and the password.
- 6. Tap 🗎.
- 7. Optional: Delete the device.
 - On the device list, if the list is in list mode, swipe the device name to the left and tap
 Delete Device.
 - On the device list, if the list is in thumbnail mode, tap the device name or tap ••••, and then tap **Delete Device**.

4.2.2 Add a Device by Scanning Device QR Code

You can add the device by scanning the device's QR code.

Steps

iNote

If adding an access control device, you should activate the device and set the device network information via other clients (e.g., Mira client software) before adding it to this client.

- 1. On the device list page, tap + \rightarrow Scan QR Code to enter the Scan QR Code page.
- 2. Scan the QR code.
 - Scan the device QR code by aligning the QR Code with the scanning frame.

iNote

- Usually, the QR code is printed on the label, which is on the back cover of the device.
- Tap **form** to enable the flashlight if the scanning environment is too dark.
- If there are device QR codes in photo album of the phone or tablet, tap in to extract QR code from local album.
- 3. Optional: Perform the following operations if the following situations occur.
 - If the system fails to recognize the QR code, tap // to add the device manually. See Add a Device by Mira Domain or Add a Device by IP/Domain for details.
 - If the device has been added to another account, you should unbind the device from the account first. See Unbind Device from Its Original Account for details.
 - If the device is offline, you should connect a network for the device. For details, see *Connect Offline Device to Network* for details.
 - If the device is not activated, the Activate Device page will pop up (excluding the access control device). You should activate the device. For details, see *Activate an Inactive Device* for details.
 - If the Mira service is disabled for the device, you should enable the function (excluding the access control device). For details, see *Enable Mira Service When Adding Device on Mobile Client* for details.
- 4. Tap Add on the Result page.
- 5. Enter the device verification code.

The device will be added successfully.

iNote

- The default device verification code is usually on the device label. If no verification code found, enter the device verification code you created when enabling Mira service.
- For details about enabling Mira service, see Enable Mira Service for Device.
- 6. Optional: Tap **Configure DDNS** to configure DDNS.

iNote

- See *Set DDNS* for details.
- After DDNS being enabled, the device will be accessed via IP address in priority, so that remote configuration of the device will be supported and the streaming speed will be faster than streaming via Mira service.
- If you skip this step, the device will be accessed via Mira service.

7. Tap **Finish**.

- 8. Optional: Delete the device.
 - On the device list, if the list is in list mode, swipe the device name to the left and tap
 Delete Device.
 - On the device list, if the list is in thumbnail mode, tap the device name or tap ••••, and then tap **Delete Device**.

4.2.3 Add a Device by IP/Domain

You can add the device by fixed IP address or domain name. The streaming speed of devices added by IP/domain is faster than those added by Mira domain.

Before You Start

- If you want to add the access control device, activate it before adding. See the user manual of the access control device for details.
- You should activate it via other clients such as Mira client software. Make sure the device is powered on.

Steps

iNote

The Mobile Client doesn't support receiving alarm event information from devices added by IP/domain. For details about managing event information on the Mobile Client, see **Alarm Notification**

- 1. Tap 🕂 and select Manual Adding.
- 2. Select IP/Domain as the adding type.
- 3. Enter the required information, such as alias, address, user name, camera No. and device password.

Address

Device IP address or domain name.

Camera No.

The number of the camera(s) under the device can be obtained after the device is successfully added.

4. Tap 🛅 to add the device.

iNote

- If the device is offline, you should connect the device to a network. For details, see *Connect Offline Device to Network*.
- If the device is not activated, the Activate Device page will be popped up (exclude the access control device). You should activate the device. For details, see *Activate an Inactive Device*.
- 5. Optional: Perform the following operations after adding the device.

Edit Device Information	On the Device Information page, tap 🙋 to edit the basic information of the device.
Star Live View	Tap Start Live View to view the live view of the device.
Delete a Device	Tap $ \overline{\odot} $ and then tap Delete to delete the device.
Configure Device Parameters	Tap \bigcirc and then tap Remote Configuration to remotely configure device parameters such as basic information, time settings, recording schedule, etc. See Remotely Configure Device for details.
Remote Controller	Tap \bigcirc and then tap Remote Controller to remotely control the device. See Use Mobile Client as Device's Remote Controller for details.

4.2.4 Add a Device by a Domain

For devices which support Mira service (a cloud service), you can add them manually by Mira domain.

Before You Start

- Make sure the device is powered on.
- If adding access control device, you should activate the device and set the device network information via other clients (e.g., Mira client software) before adding it to this client.

Steps

- 1. On the device list page, tap + \rightarrow **Manual Adding** to enter the Add Device page.
- 2. Select **Mira Domain** as the adding type.
- 3. Enter the device serial No. manually.

INote

- By default, the device serial No. is on the device label.
- For the video intercom devices, when entering the serial No. of the indoor station, the corresponding door station will also be added to the Mobile Client automatically.
- An indoor station can be linked to multiple door stations.

4. Tap 🛅 to search the device.

iNote

- If the device has been added to another account, you should unbind the device from the account first. See **Unbind Device from Its Original Account** for details.
- If the device is offline, you should connect a network for the device. For details, see *Connect Offline Device to Network* for details.
- If the device is not activated, the Activate Device page will pop up (excluding the access control device). You should activate the device. For details, see *Activate an Inactive Device* for details.
- If Mira service is disabled for the device, you should enable the function (excluding the access control device). For details, see *Enable Mira Service When Adding Device on Mobile Client* for details.
- 5. Tap **Add** on the Result page.
- 6. Enter the device verification code. The device will be added successfully.

INote

- The default device verification code is usually on the device label. If no verification code found, enter the device verification code you created when enabling Mira service.
- For details about enabling Mira service, see *Enable Mira Service for Device*.
- 7. Optional: Tap **Configure DDNS** to configure DDNS.

iNote

- See Set DDNS for details.
- After DDNS being enabled, the device will be accessed via IP address in priority, so that remote configuration of the device will be supported, and the streaming speed will be faster than streaming via Mira service.
- If you skip this step, the device will be accessed via Mira service.

8. Tap Finish.

- 9. Optional: Delete the device.

 - On the device list, if the list is in thumbnail mode, tap the device name or tap ***, and then tap **Delete Device**.

4.3 Connect Offline Device to Network

When adding a device to the Mobile Client, if the device is offline, you should connect the device to a network first. The Mobile Client provides the following four methods for connecting offline devices to networks.

iNote

For access control device, you should connect it to a network via other Clients (e.g., Mira client software).

Connecting to Wired Network

Using this method if a router is available for the device to connect to.

	i	h	ο	t	e
-	-		-	•	-

Make sure the device is powered on.

Connecting to Wireless Network

Use this method if a wireless network is available for the device to connect to. "Device" here excludes wireless doorbell, wireless security control panel, and Mini Trooper (a kind of battery camera).

iNote

- Make sure your phone has connected to a Wi-Fi network before using the method.
- The device should support connecting to wireless network.

Connecting to Network by Wi-Fi Configuration

You can use this method to connect wireless doorbell to the network by using the doorbell to scan the QR code generated by the Mobile Client.

Tap **Connect to a Network** on the Result page and then follow the instructions on the subsequent pages to connect the device to the network.

Connecting to Network by Access Point

In the Mobile Client, Access Point (AP) refers to a networking hardware device (e.g., wireless doorbell or wireless security control panel), which can provide a Wi-Fi network for the phone to connect to.

iNote

You should have turned on WLAN in the phone's operation system.

Tap **Connect to a Network** on the Result page, select **Wireless Connection** as the connection type, and then follow the instructions on the subsequent pages to complete the connection process.

4.4 Unbind Device from Its Original Account

When adding a device by scanning QR code or Mira domain, if the result shows that the device has been added to another account, you should unbind it from the account before you can add it to your account.

Before You Start

Make sure the device and the phone running the Mobile Client are in the same local area network.

Steps

1. Add the device by scanning QR code or Mira domain.

See Add a Device by Scanning Device QR Code or Add a Device by Mira Domain for details.

- 2. On the Result page, tap **Unbind Device** to start unbind the device from its account.
- 3. Optional: If the network exception occurs, perform the following operations.

Tap **Connect to Wi-Fi** to connect the phone to the Wi-Fi network and make sure the device is in the same local area network with the phone. Tap **Or you can unbind the device from its account in local GUI** to unbind the device via local GUI.

iNote

Unbinding the device via local GUI should be supported by the device.

- 4. On the Unbind Device page, enter the device password and the verification code displayed on the image.
- 5. Tap **Finish**.

4.5 Device Settings

On Settings page, you can view and edit a device's basic information, delete the device, and configure other functions such as video and image encryption, changing device verification code, transferring the device to another user, etc.

4.5.1 Edit Information of Cameras Linked to Added Device

For cameras linked to NVR, you can edit their names, and hide or show them in the device list.

Steps

1. Enter the Settings page of a NVR.

- On the device list page, if the page is in list mode, swipe the device name to the left and tap

 Image: Second seco
- On the device list page, if the page is in thumbnail mode, tap the device name or tap
- On the Live View page. Tap •••• and then tap **Settings**.

iNote

For details about how to enter the Live View page, see Start and Stop Live View.

- 2. Tap Linked Camera to enter the Linked Camera page.
 - **Edit Camera Name** Tap Z to edit the camera name, and then tap E to save the settings.

Hide/Show Camera Tap \odot or \searrow to hide or show the camera on the device list respectively.

4.5.2 Set Video and Image Encryption

For security reasons, you can set the video and image encryption function to encrypt the videos or the pictures.

Steps

iNote

- If you set the video and image encryption function, the device's live video, recorded video, and pictures in event information will be encrypted. You should enter the device verification code the first time you entering these pages.
- If you log in to the Mobile Client with the same account on another phone, you should enter the device verification code again to view the live video, the recorded video, and pictures in event information.

1. Enter the Settings page.

On the device list page, if the page is in the list mode, swipe the device name to left and tap ⁽²⁾.On the device list page, if the page is in the thumbnail mode, tap the device name or tap *******.Enter the Live View page, tap ******* and tap **Settings**.

- 2. Set the Video and Image Encryption switch to ON to enable the function.
- 3. Optional: Change the encryption password (device verification code).
 - 1) Tap Change Password.
 - 2) Tap Edit in the pop-up window to enter the Change Password page.
 - 3) Follow the instructions on the page to change the device verification code.

4.5.3 Set DDNS

For a device added via Mira Domain or Scanning QR code, if DDNS is enabled, the device's streams will be accessed via IP address in priority. In this case, you can remotely configure device and the speed of streaming will be faster than that of streaming via Mira service.

Steps

- 1. Enter the Settings page of the device.
 - On the device list page, if the page is in list mode, swipe the device's name to the left and tap
 On the device is name to the left and tap
 - On the device list page, if the page is in thumbnail mode, tap the device's name or tap ••••.
 - On the Live View page. Tap **...** and then tap **Settings**.

INote

For details about how to enter the Live View page, see Start and Stop Live View

- 2. On the Settings page, tap **Configure DDNS** to enter the Configure DDNS page.
- 3. Set the required information.

Device Domain Name

The default device domain name is the serial number of the device. If you want to edit it, the edited domain name should contain 1 to 64 characters, including numbers, lowercase letters, and dashes. And it should start with a lowercase letter and cannot end with a dash.

Port Mapping Mode

For details about setting port mapping, tap How to Set Port Mapping.

iNote

The entered port number should be from 1 to 65535.

User Name

Enter the device user name.

Password

Enter the device password.

4. Tap 🗎.

4.5.4 Change Device's Verification Code

The device verification code is used for verifying user identity, as well as encrypting a device's videos (including live videos and recorded video files) and captured pictures. You can change the device verification code for the network camera and Mini Trooper (a kind of camera powered by battery).

Steps

iNote

For details about how to encrypt a device's videos and captured pictures, see Set Video and Image Encryption.

- 1. Enter the Settings page of the device.
 - On the device list page, if the page is in the list mode, swipe the device name to the left and tap <a>[2].
 - On the device list page, if the page is in thumbnail mode, tap the device name or tap ••••.
 - On the Live View page, tap **••••** and then tap **Settings**.

iNote

For details about how to enter the Live View page, see Start and Stop Live View.

- 2. Tap **Change Verification Code**, and then tap **Edit** on the pop-up Window to enter the Change Verification Code page.
- 3. Enter the old verification code, and then tap **Next**.
- 4. Create a new verification code, and then confirm it.

iNote

If you have enabled the Video and Image Encryption function, new pictures and videos will be encrypted by the new verification code. However, the earlier encrypted pictures and videos still use the old verification code.

4.5.5 Remotely Configure Device

After adding a device, you can set the parameters of the device, including basic information, time settings, recording schedule, etc.

iNote

Remote configuration is only available for Android V4.2 or later versions.

View and Edit Basic Information

You can view and edit the basic information of a device.

Before You Start

Add a device to the Mobile Client. See Add Device for Management for details.

Steps

- 1. Enter the Settings page.
 - On the device list page, if the page is in list mode, swipe the device name to the left and tap

 On the device list page, if the page is in list mode, swipe the device name to the left and tap
 - On the device list page, if the page is in thumbnail mode, tap the device name or tap ••••.
 - On the Live View page, tap and then tap **Settings**.

iNote

For details about how to enter the Live View page, see Start and Stop Live View.

- 2. Enter the Remote Configuration page.
 - − For a device added via IP/Domain, tap \bigcirc → Remote Configuration.

iNote

For details about adding device via IP/Domain, see Add a Device by IP/Domain.

- For a device added via other methods, tap **Remote Configuration** on the Settings page.

iNote

You should have configured DDNS for the device first. See Set DDNS.

- 3. Tap Basic Information to enter the Basic Information page.
- 4. Tap 💋 to enter the Edit Device page.
- 5. Edit the basic information of the device.
- 6. Tap 📄 to save the settings.

Set Recording Schedule

You can set a recording schedule for a channel of a specific device.

Steps

1. Enter the Settings page.

- On the device list page, if the page is in list mode, swipe the device name to the left and tap
 On the device name to the left and tap
- On the device list page, if the page is in thumbnail mode, tap the device name or tap ••••.
- On the Live View page, tap **....** and then tap **Settings**.

iNote

For details about how to enter the Live View page, see Start and Stop Live View.

2. Enter the Remote Configuration page.

− For a device added via IP/Domain, tap \bigcirc → Remote Configuration.

□INote

For details about adding device via IP/Domain, see Add a Device by IP/Domain.

- For a device added via other methods, tap **Remote Configuration** on the Settings page.

INote

You should have configured DDNS for the device first. See *Set DDNS*.

- 3. Tap **Recording Schedule** to enter the Recording Schedule page.
- 4. Select a channel if the device has multiple channels.
- 5. Set the switch to ON to enable recording schedule.
- 6. Set a recording schedule for a day in the week.
 - 1) Tap a day in the week to enter the schedule settings page.
 - 2) Tap a time period to set the recording type, start time, and end time.

Continuous

The video will be recorded automatically according to the time of the schedule.

Motion Detection

The video will be recorded when the motion is detected.

Alarm

The video will be recorded when the alarm is triggered via the external alarm input channels.

Motion Detection or Alarm

The video will be recorded when the external alarm is triggered or the motion is detected.

Motion Detection and Alarm

The video will be recorded when the motion and alarm are triggered at the same time.

Event

The video will be recorded when any event is detected.

iNote

You can also set the recording type to detailed event type, which should be supported by the device. For details, refer to the user manual of the device.

3) Tap **OK** to save the settings of the time period.

4) Set other time periods in the day.

iNote

Up to 8 time periods can be configured for each day. And the time periods cannot be overlapped with each other.

Image: Normal state sta	
Monday 0 2 4 6 8 10 12 14 16 18 20 22 24 Tuesday 0 2 4 6 8 10 12 14 16 18 20 22 24 Wednesday	
0 2 4 6 8 10 12 14 16 18 20 22 24 Tuesday 0 2 4 6 8 10 12 14 16 18 20 22 24 Wednesday)
Tuesday 0 2 4 6 8 10 12 14 16 18 20 22 24 Wednesday	>
0 2 4 6 8 10 12 14 16 18 20 22 24 Wednesday	
Wednesday	>
0 2 4 6 8 10 12 14 16 18 20 22 24	>
Thursday	>
0 2 4 6 8 10 12 14 16 18 20 22 24	
Friday	>
0 2 4 6 8 10 12 14 16 18 20 22 24	
Saturday	>
0 2 4 6 8 10 12 14 16 18 20 22 24	

7. Optional: Perform the following operations after saving the time periods in one day.

Copy to Other Days Tap **Copy to** to copy all the time periods settings to the other days in the week.

Delete All Tap **Delete All** to clear all the configured time periods.

8. Tap 🧕 to save the settings.

Configure Time Settings

You can select the time zone and set the time synchronization mode to Manual or NTP mode for the added device.

Steps

- 1. Enter the Settings page of the device.

 - On the device list page, if the page is in thumbnail mode, tap the device name or tap ••••.
 - On the Live View page, tap •••• and then tap **Settings**.

iNote

For details about how to enter the Live View page, see Start and Stop Live View.

- 2. Enter the Remote Configuration page.
 - For a device added via IP/Domain, tap \bigcirc \rightarrow **Remote Configuration**.

iNote

For details about adding devices via IP/Domain, see *Add a Device by IP/Domain*.

- For a device added via other methods, tap **Remote Configuration** on the Settings page.

iNote

You should have configured DDNS for the device first. See *Set DDNS*.

- 3. Tap **Time Configuration** to enter the Time Configuration page.
- 4. Select the time zone in which the device locates.
 - The device time will be adjusted automatically.
- 5. Select the time synchronization mode.
 - Select NTP Synchronization. And then set the interval for synchronizing the device time with the NTP server.

NTP Synchronization

Synchronize time at a specific interval with the NTP server.

iNote

For details about setting the NTP server details, refer to the user manual of the device.

-

- Select **Manual Synchronization**. And then tap **Synchronize with Phone** to synchronize the device time with the OS (Operation System) time of your phone or tablet.
- 6. Tap 🧕 to save the settings.

Change Device Password

You can change the password of a device via the Mobile Client.

Steps

1. Enter the Settings page of the device.

- On the device list page, if the page is in list mode, swipe the device's name to the left and tap
 On the device of the left and tap
- On the device list page, if the page is in thumbnail mode, tap the device's name or tap ••••.
- On the Live View page, tap **...** and then tap **Settings**.

INote

For details about how to enter the Live View page, see *Start and Stop Live View*.

2. Enter the Remote Configuration page.

- For a device added via IP/Domain, tap \bigcirc \rightarrow **Remote Configuration**.

iNote

For details about adding device via IP/Domain, see Add a Device by IP/Domain.

- For a device added via other methods, tap **Remote Configuration** on the Settings page.

INote

You should have configured DDNS for the device first. See Set DDNS.

- 3. Tap **Change Password** to enter the Change Password page.
- 4. Enter the old password of the device
- 5. Create a new password.

ACaution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

- 6. Confirm the password.
- 7. Tap 🧕 to save the changes.

Configure Normal Event

You can enable a device's normal event such as motion detection, video tampering alarm, video loss alarm, for the channels of the device.

Steps

- 1. Enter the Settings page.

 - On the device list page, if the page is in thumbnail mode, tap the device name or tap ••••.
 - On the Live View page, tap •••• and then tap **Settings**.

iNote

For details about how to enter the Live View page, see *Start and Stop Live View*.

- 2. Enter the Remote Configuration page.
 - For a device added via IP/Domain, tap \bigcirc \rightarrow **Remote Configuration**.

iNote

For details about adding device via IP/Domain, see Add a Device by IP/Domain

- For a device added via other methods, tap **Remote Configuration** on the Settings page.

iNote

You should have configured DDNS for the device first. See *Set DDNS*.

- 3. Tap **Normal Event** to enter the Normal Event page.
- 4. Optional: Select a channel if the device has multiple channels.
- 5. Set the switch(es) to ON to enable the event(s).

Configure Smart Event

You can enable the smart event for the channels of a device, including audio exception detection, face detection, and intrusion detection, etc.

Steps

iNote

The supported event types of smart event vary according to different devices.

- 1. Enter the Settings page.
 - On the device list page, if the page is in list mode, swipe the device name to the left and tap
 On the device name to the left and tap
 - On the device list page, if the page is in thumbnail mode, tap the device name or tap ••••.
 - On the Live View page, tap **....** and then tap **Settings**.

INote

For details about how to enter the Live View page, see *Start and Stop Live View*.

- 2. Enter the Remote Configuration page.
 - − For a device added via IP/Domain, tap \bigcirc → Remote Configuration.

iNote

For details about adding device via IP/Domain, see Add a Device by IP/Domain.

- For a device added via other methods, tap **Remote Configuration** on the Settings page.

INote

You should have configured DDNS for the device first. See *Set DDNS* for details.

- 3. Tap **Smart Event** to enter the Smart Event page.
- 4. Optional: Select a channel if the device has multiple channels.
- 5. Set the switch(es) to ON to enable event(s).

Enable Temperature Measurement

You can enable the temperature measurement function for the thermal camera on the Mobile Client.

Steps

INote

This function is only available to the thermal camera.

- 1. Enter the Settings page.
 - On the device list page, if the page is in list mode, slide the device name to the left and tap
 On the device name to the left and tap
 - On the device list page, if the page is in thumbnail mode, tap the device name or tap ••••.
 - On the Live View page, tap •••• and then tap Settings.

iNote

For details about how to enter the Live View page, see Start and Stop Live View.

- 2. Enter the Remote Configuration page.
 - − For a device added via IP/Domain, tap \bigcirc → Remote Configuration.

INote

For details about adding device via IP/Domain, see Add a Device by IP/Domain.

- For a device added via other methods, tap **Remote Configuration** on the Settings page.

iNote

You should have configured DDNS for the device first. See Set DDNS.

- 3. Tap **Temperature Measurement** to enter the Temperature Measurement page.
- 4. Optional: Select a camera if camera(s) are linked to the device.
- 5. Set the switch to ON to enable temperature measurement.

4.6 Upgrade Device Firmware

For a device added via IP/Domain, its new version can be detected by the Mobile Client. Once detected, you can upgrade the device to its latest version.

Steps

1. Enter the Device Information page.

- On the device list page, if the page is in the list mode, swipe the device name to the left and tap
- On the device list page, If the page is in thumbnail mode, tap the device name or tap ••••.
- On the Live View page. Tap •••• and then tap Settings.

iNote

For details about how to enter the Live View page, see Start and Stop Live View.

- 2. Tap \bigcirc \rightarrow **Device Version** to enter the Device Version page.
- 3. Tap **Upgrade** and then tap **UPGRADE** on the pop-up window. The Mobile Client will download the upgrade file first and then start upgrading the device.

INote

You can also enable the Mobile Client to automatically download the upgrade file in Wi-Fi networks once a new device version is detected. For details, see *Auto-Download Upgrade File*.

Chapter 5 Favorites Management

You can add the frequently-used camera(s) to the favorites so that you can access them conveniently.

5.1 Add Cameras to Favorites on Device List Page

On the device list page, you can add the frequently-used camera(s) to the favorites so that you can access them conveniently.

Steps

- 1. On the device list page, tap 🛨.
- 2. Tap Add to Favorites.
- 3. Select devices and cameras on the Select Camera page.
- 4. Tap **OK**.
- 5. Create a name for the Favorites and then tap **OK**.

iNote

- Up to 32 favorites can be added.
- The favorites name should be no more than 32 characters.

The added Favorites will be displayed on the device list page.

6. Optional: Tap the Favorites name on the device list page to view the cameras' live videos.

5.2 Add Cameras to Favorites during Live View

On the live view page, you can add frequently-used cameras to Favorites so that you can access them conveniently

Steps

1. Enter the Live View page.

iNote

For details about how to enter the Live View page, see Start and Stop Live View

2. Tap •••• and tap Add to Favorites.

- 3. Add cameras to favorites.
 - Create a new favorites in the pop-up window and tap **OK**.
 - 1. Add to existing favorites. Tap Add to Existing Favorites in the pop-up window.
 - 2. Select a Favorites folder in the list.

-

INote

• Up to 32 Favorites can be added.

The favorites name should be no more than 32 characters.

4. Optional: Tap the Favorites on the device list page to view the cameras' live videos.

5.3 Remove Cameras from Favorites

You can delete cameras in the favorites.

Steps

1. Enter the Edit Favorites page.

On the device list page, if the page is in list mode, swipe the Favorites name to the left and tap On the device list page, if the page is in thumbnail mode, tap *** of the Favorites.

2. Tap a camera that need to be deleted.

3. Tap **Confirm** in the pop-up window to delete the camera.

Chapter 6 Share Device

You can share devices to other users. After that, they can access the devices according to the permissions you configured for them. You can also receive devices shared by other users.

6.1 Share a Single Device

You can select a device and then share it to a specified account, and at the same time you can determine the permission(s) that the recipient has to access the device. For example, if you do not grant the two-way audio permission to the recipient, the recipient will have no access to two-way audio functionality of the shared device.

Steps

1. Select the device and then enter the Recipient page.

Option 1	 Tap I to display the device list page in list mode. Swipe the target device's name to the left, and then tap S. 		
Option 2	1. Enter the Live View page.		
	i Note		
	For details about how to enter the Live View page, see Start and Stop Live View .		
	 Select a live view window and then tap . Tap Share. 		
Option 3	For security control panel, tap the device on device list page to enter the device details page and then tap 😤		
2. Set the account that yo	u want to share device with.		
Manually Add a Recipient	1. Enter the email address or the mobile phone number bound with the recipient's account in the Search box.		
	 If matched history account(s) exists, select a history account. If no matched history account(s) found, tap Add Recipient to enter the Add Recipient page. 		
	 Optional) Enter a remark for the recipient, such as his or her name. 		

	i	lote
--	---	------

Only you can view the remark content while the account you shared with cannot.

- 4. Tap 🔽 to select the recipient's account and add it to the history account list.
- 5. Tap Next.

Add Recipient by Scanning QR Code 1. Tap 🚍 on the Recipient page to scan the QR code of the target account.

The account will be listed on the account list.

iNote

Go to **More** \rightarrow **Account Management** \rightarrow **My QR Code** to get the QR code of your account.

- 2. Select the account from the history account list and then tap **Next**.
- 3. Optional: If you are sharing a device linked with multiple cameras, select the camera(s) that need to be shared.
- 4. Configure permissions for the to-be-shared device(s).
 - Check All Permissions on the Sharing Details page to select all the permissions.
 - Tap the device displayed on the Sharing Details page, and then select permission(s) and tap
 Image: Comparison of the Sharing Details page and then select permission of the Sharing Details page and the select permission of the select permission of the Sharing Details page and the select permission of the Sharing Details page and the select permission of the select permission of the Sharing Details page and the select permission of the select perm

Example

For example, if you select Live View and Remote Playback, the recipient will have the permissions to view live video and play back the video footage of the device.

5. Tap Finish.

A message about the sharing will appear on the recipient's Mobile Client. He or she can tap the message, and then accept or reject the shared device.

- 6. Optional: Delete the recipient account and all the sharing information.
 - 1) Go to More \rightarrow Manage Sharing Settings.
 - 2) Tap the account and then tap **Delete**.

6.2 Share Multiple Devices in a Batch

If another user of the Mobile Client needs to use multiple devices of yours, you can share them in a batch to him or her with the least operation effort, and at the same time determine the permission(s) that the recipient has to access each device. For example, if you do not grant the two-way audio permission of a device to the recipient, the recipient will have no access to the two-way audio functionality of the device.

Steps

- 1. On the More page, tap **More** → **Manage Sharing Settings** to enter the Manage Sharing Settings page.
- 2. Enter the Recipient page.
 - For the first time sharing, tap
 - For other occasions, tap Share Device.
- 3. Set the account that you want to share device(s) with.

Manually Add	а
Recipient	

- 1. Enter the email address or the mobile phone number bound with the recipient's account in the Search box.
- If matched history account(s) exists, select a history account. If no matched history account(s) found, tap Add Recipient to enter the Add Recipient page.
- 3. (Optional) Enter a remark for the recipient, such as his or her name.

iNote

Only you can view the remark content while the account you shared with can not.

- 4. Tap 🔽 to select the recipient's account and add it to the history account list.
- 5. Tap Next.
- Add Recipient by
 1. Tap 🗄 on the Recipient page to scan the QR code of the target account.

 Scanning QR Code
 1. Tap 🗄 on the Recipient page to scan the QR code of the target account.

 The account will be listed on the account list.

Go to More \rightarrow Account Management \rightarrow My QR Code to get the QR code of your account.

- 2. Select the account from the history account list and then tap **Next**.
- 4. Select device(s).

iNote

For devices linked with multiple cameras, you can select camera(s) for sharing.

- 5. Configure permissions for the to-be-shared device(s).
 - Check All Permissions on the Sharing Details page to select all the permissions.
 - Tap the device displayed on the Sharing Details page, and then select permission(s) and tap
 Image: Comparison of the Sharing Details page and then select permission of the Sharing Details page and the select permission of the select permission of the Sharing Details page and the select permission of the Sharing Details page and the select permission of the select permission of the Sharing Details page and the select permission of the select perm

Example

For example, if you select Live View and Remote Playback, the recipient will have the permissions to view live video and play back the video footage of the device.

6. Tap **Finish** to finish sharing.

A message about the sharing will appear on the recipient's Mobile Client. He or she can tap the message, and then accept or reject the shared device.

7. Optional: Tap the account on the history account list and then tap **Delete** to delete the recipient's account and all the sharing information.

6.3 Silenced Mode for Devices Shared by Others

You can enable Silenced mode for the devices shared by others if you don't want to be disturbed by the devices' alarm notifications. When enabled, all the alarm notifications triggered by the device(s) will be silenced. And you can still check the information of all the silenced alarm notifications from the devices on the notification list.

Enter the Settings page of the device in one of the following ways, and then enable the Silenced mode.

- On the device list page, if the page is in the list mode, swipe the device name to the left and tap <a>[6].
- On the device list page, if the page is in thumbnail mode, tap the device name or tap ••••.
- On the device's Live View page, tap •••• and then tap **Settings**.

iNote

For details about how to enter the Live View page, see Start and Stop Live View.
Chapter 7 Live View

You can view live video of the devices' connected cameras. And some basic operations are supported during live view, including picture capturing, manual recording, PTZ control, etc.

7.1 Start and Stop Live View

Live view shows you the live video getting from cameras. Perform the following task to start and stop live view.

Steps

- 1. Enter the Live View page to start live view.
 - On the device list page, if the device list is displayed in thumbnail mode, tap the device thumbnail to enter the Live View page.



 On the device list page, if the device list is displayed in list mode, and the Floating Live View function is enabled, tap one or more devices to open the floating windows. And then tap the floating window to enter the Live View page.

iNote

- For details about enabling or disabling the Floating Live View function, see *Floating Live View*.
- Up to 256 cameras can be selected.
- On the device list page, if the device list is displayed in list mode, and the Floating Live View function is disabled, tap the device to enter the Live View page.
- If the Video and Image Encryption function is disabled, the live video will start playing automatically.
- If the Video and Image Encryption function is enabled, you should enter the device verification code before the live video starting playing.

iNote

- For details about Video and Image Encryption function, see **Set Video and Image Encryption**.
- The default device verification code is usually on the device label. If no verification code found, enter the device verification code you created when enabling Mira service.
- o The live video from the video intercom device lasts 5 minutes.
- Up to 6 users can view the live video of a same door station simultaneously. If the upper-

limit is reached, other users can only use the audio function of the door station.

2. Optional: Perform the following operations.

ripe the live view page to the left or right to switch camera and ew its live video.
Tap 🙋 to go back to the device list. Reselect cameras and then tap OK .
Vou can select up to 256 cameras.
p \rightarrow Playback to switch to playback. Note r details about playback, see <i>Playback</i> .

- 3. Stop live view of a camera.
 - 1) Press and hold a window under live view.
 - 2) Drag the window upwards to the appearing 💼 at the top of the page.

7.2 Set Window Division

You can adjust window division in different scenarios.

Tap 1, 4, 9, 12 or 16 to set the window division mode to 1-window, 4-window, 9-window, 12-window, or 16-window respectively.

If the added camera number is more than the window division number, you can swipe to the left or right to change the window division group on the current page.

7.3 Digital Zoom

Digital zoom adopts encoding technology to enlarge the image which will result in image quality damage. You can zoom in or zoom out the live video image as desired.

Tap 🔘 to zoom in or zoom out the image.

Or spread two fingers apart to zoom in, and pinch them together to zoom out.

7.4 PTZ Control

PTZ is an abbreviation for "Pan, Tilt, and Zoom". With the PTZ Control functionality provided by the Mobile Client, you can make the cameras pan and tilt to the required positions, and zoom in or out the live video images. For some network cameras, you can also enable auto-tracking to make the camera pan, tilt, and zoom to track the detected moving objects.

iNote

PTZ control should be supported by the camera.

7.4.1 Pan and Tilt a Camera

The Mobile Client allows you to pan and tilt a camera's view.

Steps

1. Start live view of a camera supports PTZ control.

iNote

For details about how to start live view, see Start and Stop Live View.

- 2. Select a live view window on the Live View page.
- 3. Tap 💿 to open the PTZ Control panel.



4. Tap Pan and Tilt.

5. Drag the circle button at the center of the PTZ Control panel to pan and tilt the camera.

7.4.2 Set a Preset

A preset is a predefined image position which contains configuration parameters for pan, tilt, zoom, focus and other parameters. You can also set a virtual preset after enabling digital zoom. After you set a preset, you can call the preset and then the camera will move to the programmed

position.

Steps

1. Pan and tilt a camera to move the camera direction to a desired position.

iNote

See Pan and Tilt a Camera for details.

2. In the PTZ Control panel, tap **Add Preset** to open the following window.



3. Swipe the number up or down to set the preset No.

INote

The preset No. should be between 1 and 256.

- 4. Tap Set to complete setting the preset.
- 5. Tap **Call** to call the preset.
- 6. Optional: Tap **Delete** to delete the preset.

7.4.3 Adjust PTZ Speed

You can adjust the PTZ speed.

Steps

- 1. Start live view of a camera which supports PTZ control.
- 2. Tap to open the PTZ control panel.
- 3. Tap **More** \rightarrow to open the PTZ speed panel.
- 4. Drag the slider to adjust the PTZ speed.

7.4.4 Other Functions

The PTZ Control panels provide other functions such as PTZ speed adjustment, auto-scan, focus control, iris control, and auto-tracking.

Tap **More** on the PTZ Control panel to view the functions.

lcon	Description
	Start/stop the auto-scan, which means to make the speed dome pan, tilt, and (or) zoom by a predefined route.
	Note
(\$)	 You can define the route on the device. For details, see the user manual of the device. The function should be supported by the device.
φ	Zoom control: 🛛 Zoom+/ 🌆 Zoom-
•	Focus control: 🚳 Focus +/ 🚳 Focus -
\odot	Iris control: 🔞Iris +/ 🔞 Iris -
	Adjust PTZ speed.
	Enable/Disable auto-tracking. After enabled, when the camera detects a moving object, the camera will pan, tilt, and zoom to track the object until the object moves out of the field of view of the camera.
1 ²	i Note
	The function should be supported by the device.

7.5 Capturing and Recording

During live view, you can capture pictures of the live video and record video footage.

Steps

1. Start live view of a camera.

INote

See Start and Stop Live View for details.

2. Capture a picture or record video footage.

Capture Picture	Tap 🔟 to capture a picture.
Record Video Footage	Tap III to start recording video footage, tap again to stop.

The captured pictures and recorded videos will be saved in More \rightarrow Pictures and Videos. For details about managing pictures and videos, see *Pictures and Videos*.

7.6 Set Image Quality for Device Added by IP/Domain

For devices added via IP/Domain, you can set its image quality to Fluent or Clear. You can also customize image quality for the devices.

Steps

iNote

- If you change the image quality, the live view and recording of the device may be affected due to the new settings.
- In multi-window mode, you can only set the image quality to Fluent, or customize the image quality and the stream type can only be Sub Stream.

1. Start live view of a device added via IP/Domain.

INote

See Start and Stop Live View for details.

2. Tap **BASIC** on the live view page to enter the quality switching panel.

iNote

The icon vary with the actual video quality.

- 3. Set the image quality as desired.
 - Tap Clear to set the image quality as Clear.
 - Tap **Fluent** to set the image quality as Fluent.
 - Tap Custom to open the Custom Settings window, and then configure the parameters and tap Confirm to confirm the custom settings.

Mira

	Custo	om
>	Stream Type	Sub Stream
>	Resolution	4CIF(704*576)
>	Frame Rate	25/30
>	Bitrate	512K

INote

• The following table shows the recommended frame rate and bitrate configuration for different resolution at H.264, H.264+ and H.265 video compression by Moto X Pro (CPU: Snapdragon805, Android 5.0.2).

Resolution	1-ch	2-ch	4-ch	Recommended Configuration		
H.264 (Software Decoding)						
1080P	V	V		Frame rate: 25fps; Bit rate: 4Mbps		
720P	V	V	٧	Frame rate: 25fps; Bit rate: 2Mbps		
4CIF	v	V	v	Frame rate: 25fps; Bit rate: 512Kbps		
H.264 (Hardwar	H.264 (Hardware Decoding)					
1080P	٧	٧	V	Frame rate: 25fps; Bit rate: 4Mbps		
720P	٧	٧	٧	Frame rate: 25fps; Bit rate: 2Mbps		
4CIF	v	V	v	Frame rate: 25fps; Bit rate: 512Kbps		
H.264+ (Softwar	re Decoding)					
1080P	V	V		Frame rate: 25fps; Bit rate: 4Mbps		
720P	V	V	V	Frame rate: 25fps; Bit rate: 2Mbps		
H.264+ (Hardwa	H.264+ (Hardware Decoding)					
1080P	V	v	٧	Frame rate: 25fps; Bit rate: 4Mbps		
720P	V	V	٧	Frame rate: 25fps; Bit rate: 4Mbps		
H.265 (Software	H.265 (Software Decoding. Hardware decoding is not supported.)					
1080P	V	V		Frame rate: 25fps; Bit rate: 2Mbps		
720P	٧	٧	٧	Frame rate: 25fps; Bit rate: 4Mbps		

Resolution	1-ch	2-ch	4-ch	Recommended Configuration
4CIF	v	v	V	Frame rate: 25fps; Bit rate: 256Mbps

7.8 Set Image Quality for Mira Device

Usually three pre-defined image qualities are provided in the Mobile Client for Mira device: Basic, Standard, and High Definition.

Steps

INote

The provided image quality types may vary with different devices.

1. Start live view of a Mira device.

iNote

See Start and Stop Live View for details.

2. Tap **BASIC** to enter the quality switching panel.

iNote

The icon may vary with the actual image quality.

3. Set image quality.

Basic

Basic image quality.

INote

Basic is the default image quality.

Standard

Standard image quality (the image quality is higher than that of Basic and lower than that of HD).

HD

High definition image quality (the image quality is the highest of the three).

Chapter 8 Playback

You can search the recorded video files stored in the added device for remote playback.

8.1 Start and Stop Playback

You can search the camera's recorded video files in a selected time period and then start playback.

Steps

- 1. On the device list page, tap 🗿 at the upper-left corner to enter the Select Item(s) page.
- 2. Set the date and time for playback.

Playback Date

Select a date.

iNote

The date during which video files were recorded is marked with a yellow dot.

Playback Time

Set the start time point for the playback in the selected date.

3. Select camera(s).

iNote

You can select up to 4 cameras.

- 4. Tap **Start Playback** to enter the Playback page.
- 5. Optional: Perform the following operations.

Adjust Playback Time Slide the timeline to adjust the playback time.

	i Note		
		represents continuous recording and represents	
	event-trig	ggered recording.	
down	Spread tv	vo fingers apart to scale up the timeline or pinch them	

Scale up and downSpread two fingers apart to scale up the timeline or pinch th
together to scale down.



8.2 Capturing and Recording

During playback, you can capture pictures and record video footage.

Steps

1. Start playback.

Note	
See Start and Stop Playback for details.	
2. Capture a picture or record video footag	je.

Capture a Picture	Tap 🔟 to capture a picture.
Reccord Video Footage	Tap 🔳 to start recording video footage, tap again to stop.

The captured pictures and recorded videos will be saved in More \rightarrow Pictures and Videos. For details about managing pictures and videos, see *Pictures and Videos*.

8.3 Set Playback Quality for Device Added by IP/Domain

For devices added by IP/Domain, you can set the image quality of playback for them.

Steps

iNote

For details about adding device by IP/Domain, see Add a Device by IP/Domain.

1. Select a device added by IP/Domain on the device list and then start playback.

iNote

For details about starting playback, see *Start and Stop Playback*.

2. Tap **BASIC** on the playback page to enter the quality switching panel.

INote

The icon may vary with the actual video quality.

- 3. Set the image quality as desired.
 - Tap **Clear** to tap the image quality to Clear.
 - Tap Custom to open the Custom Settings window, and then configure the parameters (Resolution, Frame Rate, and Bitrate) and tap Confirm to confirm the custom settings.

iNote

- The image effect is related to the performance of your network and phone or tablet. If the image is not fluent or the screen appears blurred, reduce the resolution, frame rate and bitrate of the camera in custom mode.
- The following table shows the recommended frame rate and bitrate configuration for different resolution at H.264, H.264+ and H.265 video compression by Moto X Pro (CPU: Snapdragon805, Android 5.0.2).

Resolution	1-ch	2-ch	4-ch	Recommended Configuration		
H.264 (Software Decoding)						
1080P	٧	V		Frame rate: 25fps; Bit rate: 4Mbps		
720P	٧	V	V	Frame rate: 25fps; Bit rate: 2Mbps		
4CIF	v	V	v	Frame rate: 25fps; Bit rate: 512Kbps		
H.264 (Hardwar	H.264 (Hardware Decoding)					
1080P	٧	V	V	Frame rate: 25fps; Bit rate: 4Mbps		
720P	٧	v	V	Frame rate: 25fps; Bit rate: 2Mbps		
4CIF	٧	v	v	Frame rate: 25fps; Bit rate: 512Kbps		
H.264+ (Softwar	H.264+ (Software Decoding)					
1080P	٧	v		Frame rate: 25fps; Bit rate: 4Mbps		
720P	٧	V	V	Frame rate: 25fps; Bit rate: 2Mbps		
H.264+ (Hardware Decoding)						
1080P	٧	V	V	Frame rate: 25fps; Bit rate: 4Mbps		
720P	٧	v	V	Frame rate: 25fps; Bit rate: 4Mbps		
H.265 (Software	e Decoding. Ha	rdware deco	ding is not s	upported.)		
1080P	V	٧		Frame rate: 25fps; Bit rate: 2Mbps		

Resolution	1-ch	2-ch	4-ch	Recommended Configuration
720P	V	V	V	Frame rate: 25fps; Bit rate: 4Mbps
4CIF	V	٧	V	Frame rate: 25fps; Bit rate: 256Mbps

8.4 Download Video Segment

During playback of the cameras linked to a DVR or NVR, you can download a specific video segment as evidence if it contains important information about incidents such as violent crimes in case of the need for settling disputes or legal cases.

Steps

iNote

The function should be supported by the device.

- 1. Start playback.
- 2. Tap **I** if important information occurs on the image.

By default, the video segment which lasts 130 seconds (from 10 seconds before the tapping, to 120 seconds after that) will be automatically selected for download. For example, if you tap when the video footage is played to 00:00:30, the segment from 00:00:20 to 00:02:30 will be selected.

iNote

In special occasions when 130-seconds duration is not available to be selected following the above-mentioned rule, the segment will extend afterwords or backwards until the segment duration reaches 130 seconds. For example, if you start downloading from the very beginning of the video footage, the selected segment will be from 00:00:00 to 00:02:10.

3. Optional: Drag the slider(s) to lessen the duration of the segment for download.

iNote

The duration should not be shorter than 10 seconds.

4. Optional: Tap the Play icon to preview the selected segment.

INote

If the segment is encrypted, you should enter the device verification code before you can preview it. For details about video encryption, see *Set Video and Image Encryption*.

5. Tap **Download** to start downloading.

iNote

Download at the background is supported. The download continues if you exit the Download page or the Mobile Client.

6. Optional: Go to More \rightarrow Pictures and Videos to view the downloaded video segment.

8.5 Adjust Playback Speed

For the cameras linked to a DVR or NVR, you can adjust the playback speed for them as required.

iNote

The function should be supported by the device.

During playaback, you can swipe the toolbar at the bottom to view the hidden icons, and then tap to set the playback speed to 1/8X, 1/4 X, 1/2 X, 1X, 2X, 4X, and 8X. X here refers to the original playback speed.

Chapter 9 Other Functions

This section introduces other functions provided by the Mobile Client, including fingerprint authentication, and management of the recorded (or clipped) video and captured pictures.

9.1 Pictures and Videos

In Picture and Video Management module, you can view and mange the recorded (or clipped) video footage and the captured pictures.

Tap **More** \rightarrow **Pictures and Videos** to enter the Pictures and Videos page and then you can perform the following operations.

- Play Video File
- : Tap a video file and then tap 🚺 to play it.
- Delete a Video File or Picture
- : Tap a video file or a picture, and then tap 🔟 to delete it.
- Share a Picture or Video File to Another Application
- : Tap a video file or a picture, and then tap 😵 to share it to another application.
- Batch Delete Video Files and (or) Pictures
- : Tap Edit and select video files and (or) pictures, and then tap 🔟 to delete them.
- Batch Share Pictures and (or) Video Files to Another Application
- : Tap **Edit** and select pictures and (or) video files, and then tap **S** to share it to another application.

9.2 Fingerprint Authentication

For information security, the Mobile Client provides the function of fingerprint authentication, which requires you to verify your identity before you can access it.

iNote

- The phone operation system should support fingerprint authentication.
- You should have enabled fingerprint authentication on the phone operation system, or you will fail to enable the function on the client software.

Tap **More** \rightarrow **Account Management** to enter the Account Management page and then enable the function.

Chapter 10 System Settings

This section introduces system settings of the Mobile Client, including hardware decoding, floating live view, resuming latest live view, etc.

10.1 Enable Push Notification

If push notification is enabled, the Mobile Client will push alarm notifications related to the added devices to you.

iNote

For details about alarm notifications, see *Alarm Notification* for details.

Tap **More** \rightarrow **Settings** to enter the Settings page, and then enable the function.

10.2 Save Device Parameters

If the function is enabled, the Mobile Client will remember the device parameters you set. Take video and image encryption for an example, you only need to enter the device verification code for once to view the encrypted live view, playback, or picture.

iNote

- For details about video and image encryption, see *Set Video and Image Encryption*.
- For details about setting device parameters via the Mobile Client, see *Device Settings*.

Tap **More** \rightarrow **Settings** to enter the Settings page, and then enable the function.

10.3 Auto-receive Alarm after Power-on

If you enable this function, the Mobile Client will run automatically and receive alarm event information when the phone or tablet is powered on.

Tap **More** \rightarrow **Settings** to enter the Settings page and then enable the function.

iNote

The power consumption of the phone or tablet may increase.

10.4 Generate a QR Code with Device Information

For devices added via IP/domain, the Mobile Client allows you to generate a QR code containing the information of up to 32 devices. The QR code can be used to quickly add multiple devices. For example, if user A has generated a QR code containing the information of 10 devices, user B can scan the QR code to batch add the 10 devices to his or her account.

Steps

iNote

Only devices added by IP/domain support this function.

- 1. Tap **More** \rightarrow **Settings** to enter the Settings page.
- 2. Tap Generate QR Code.
- 3. Tap Generate QR Code in the IP/Domain field to enter the Select Device page.
- 4. Select device(s).
- 5. Tap Generate QR Code.
 - The QR code picture will be generated.
- 6. Tap **Save** to save the picture to the photo album of your phone or tablet.

10.6 View Traffic Statistics

The Mobile Client automatically calculates the network traffic consumed during live view and playback. You can check the mobile network traffic and Wi-Fi network traffic separately. Tap **More** \rightarrow **Settings** to enter the Settings page, and then tap **Traffic Statistics**.

10.7 Generate a QR Code with Wi-Fi Information

You can generate a QR code with Wi-Fi information, and then use a network to scan the QR code to connect the device to the Wi-Fi network. The camera needs to be added through online device to use this feature.

Steps

INote

Connecting device to a Wi-Fi network by scanning QR code should be supported by the device.

- 1. Tap **More** \rightarrow **Settings** to enter the Settings page.
- 2. Tap Wi-Fi Settings to enter the Wi-Fi Settings page.
- 3. Set the required information.

Wi-Fi Name

Enter the SSID of the Wi-Fi network.

Password

Enter the password of the Wi-Fi network.

Encryption

Select the encryption type as the one you set for the router.

iNote

If you select NONE as the encryption type, the password of the Wi-Fi network is not required.

4. Tap Generate to generate a QR code for the Wi-Fi network.

What to do next

Use a network camera or wireless doorbell to scan the QR code to connect the device to the Wi-Fi network.

10.8 Floating Live View

If you enable this function, floating live view window(s) will be displayed on the device list page when you select one or more device(s). You can preview the live video(s) in the floating window(s).

INote

- If you select more than 16 cameras, the number of the selected cameras will be displayed.
- Up to 256 cameras can be displayed as floating windows.

Tap **More** \rightarrow **Settings** to enter the Settings page and then enable the function.

10.9 Resume Latest Live View

If you enable the function, the latest live view will be resumed each time you enter the Mobile Client. The window division mode, and the live view windows' sequence (if in multiple-window mode) will also be restored.

Tap $More \rightarrow Settings$ to enter the Settings page, and then enable the function.

10.10 Tablet Mode

If the Mobile Client is installed on a tablet, you can enable tablet mode so that the interfaces will be displayed in landscape mode by default.

Tap $More \rightarrow Settings$ to enter the Settings page and then enable the function.

10.11 Display/Hide Channel-Zero

Channel-zero, known as virtual channel, can show the videos from all channels of the device, reducing the bandwidth while simultaneously previewing from multi-channel. It can acquire image information and save bandwidth for transmission through encoding and configuring output images.

Tap **More** \rightarrow **Settings** and then enable the Mobile Client to display channel-zero.

10.12 Auto-Download Upgrade File

If you enable Auto-Donwload Upgrade File, the Mobile Client will automatically download the upgrade file in Wi-Fi networks, which helps speed up the device upgrade process.

iNote

For details about upgrading device, see **Upgrade Device Firmware**. Tap **More** \rightarrow **Settings** to enter the Settings page and then enable the function.

TRENDNET®

Product Warranty Registration

Please take a moment to register your product online. Go to TRENDnet's website at http://www.trendnet.com/register

> TRENDnet 20675 Manhattan Place Torrance, CA 90501. USA

Copyright ©2020. All Rights Reserved. TRENDnet.