



Quick Installation Guide



TU2-ETG

Table of Contents

English	1
1. Before You Start	1
2. How to Install	2
Troubleshooting	6

1. Before You Start




Package Contents

- TU2-ETG
- Driver CD-ROM
- Quick Installation Guide

System Requirements

- CD-ROM Drive
- CPU: 300MHz or above/ 800MHz or above (Windows Vista)
- Memory: 256 MB RAM or above/ 512 MB RAM or above (Windows Vista)
- Computer With An Available USB 1.1 or 2.0 Port
- Windows Vista/2003 Server/XP/2000/ME/98SE

Application

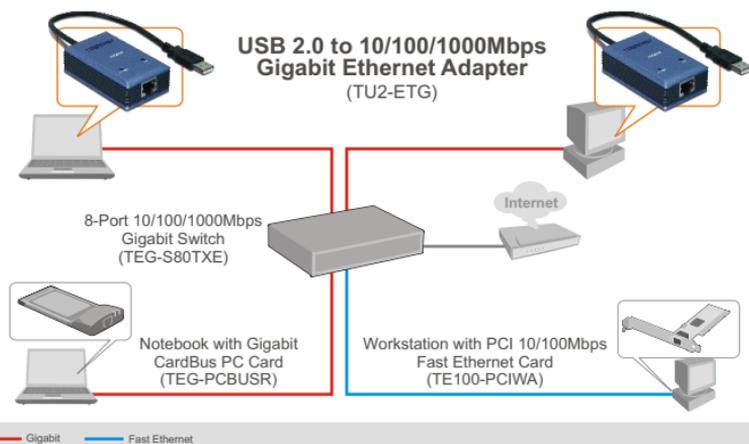


2. How to Install

Note: Do not connect the TU2-ETG to your computer until instructed to do so.

1. Insert the **CD-ROM** into your computer's CD-ROM Drive.

2. Follow the **InstallShield Wizard** instructions. Click **Yes, I want to restart my computer now** and then click **Finish**.

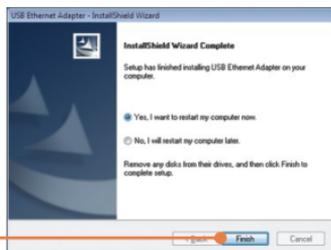

3. Connect the Adapter to an available USB port on your computer. The **“Found New Hardware Wizard”** will appear.



Note: For Windows Vista/ME/98SE drivers will automatically install. Proceed to step 8. For Windows 2003 Server, XP and 2000, continue on to step 4.

Windows XP/2003 Server




4. Select No, not this time, and then click Next.

Windows 2000



4. Click Yes.

5. Proceed to step 8.

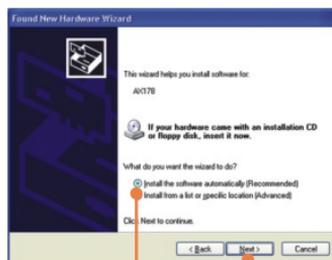

5. Click Install the software automatically (Recommended) and then click Next.

Windows XP/2003 Server



6. Click **Continue Anyway.**



7. Click **Finish.**

8. Connect a Cat-5e or Cat-6 RJ-45 cable from the Adapter to a Switch, Router or Cable/DSL Modem.



Your installation is now complete.

For detailed information regarding the TU2-ETG configuration and advanced settings, please refer to User Guide on the Driver and User Guide CD-ROM.

Register Your Product

To ensure the highest level of customer service and support, please take a moment to register your product Online at: www.trendnet.com/register

Thank you for choosing TRENDnet

Q1: Can I connect or disconnect the TU2-ETG while the computer is on?

A1: Yes, you can connect or disconnect the TU2-ETG while the computer is on because the USB interface is Plug-and-Play compliant and hot-pluggable.

Q2: Windows is unable to recognize my hardware. What should I do?

A2: First, make sure your computer meets the minimum requirements as specified in Section 1 of this Quick Installation Guide. Second, try plugging the adapter into a different USB port.

Q3: Windows recognizes my new hardware, but I'm unable to connect to my network. What should I do?

A3: First, verify that the network cable is securely connected from your switch or router to your adapter. Second, verify that the LEDs on your adapter are lit. Third, verify that the TCP/IP settings are set to **Obtain an IP address automatically**.

Q4: When I connect the adapter to a gigabit switch, I am not getting gigabit speeds. What should I do?

A4: Make sure you are using CAT-5e or CAT-6 Ethernet Cables. Some CAT-5 cables are not rated to run in Gigabit.

If you still encounter problems or have any questions regarding the **TU2-ETG**, please refer to the User's Guide included on the Driver CD-ROM or contact TRENDnet's Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ADVERTENCIA

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.



TRENDnet Technical Support

US • Canada

Toll Free Telephone: 1(866) 845-3673

24/7 Tech Support



Europe (Germany • France • Italy • Spain • Switzerland • UK)

Toll Free Telephone: +00800 60 76 76 67

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

Worldwide

Telephone: +[31] (0) 20 504 05 35

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com/register>

TRENDnet

20675 Manhattan Place

Torrance, CA 90501

USA