




Guía de instalación rápida 

TU3-SA
1.01

Table of Contents

Español	1
1. Antes de iniciar	1
2. Instalación del Hardware	2
3. Obtener acceso a unidades de disco duro en TU3-SA	4
Troubleshooting	5



Contenidos del paquete

- TU3-SA
- Guía de instalación rápida multilingüe
- Adaptador para corriente AC (12V DC, 2A)

Requisitos de instalación

- Puertos USB: 1.1 ó 2.0, 3.0
- Disco Duro II/SATA 2.5" ó 3.5"

Compatible con sistemas operativos	CPU	Memoria
Windows 7 (32/64-bit)	1GHz o superior	1GB RAM o superior
Windows Vista (32/64-bit)	800MHz o superior	512MB RAM o superior
Windows XP (32/64-bit)	300MHz o superior	256MB RAM o superior

Nota:

1. El disco duro NO está incluido.
2. Algunos sistemas operativos no son compatibles con USB 3.0.

2. Instalación del Hardware


1. Conectar su disco duro SATA a la unidad TU3-SA.



Nota:

conectar un disco duro SATA 2.5 ", alimentación de poder externa no es necesaria.
Saltar al paso 4

2. Conecte el cable de alimentación al adaptador eléctrico AC y luego a una toma de corriente.

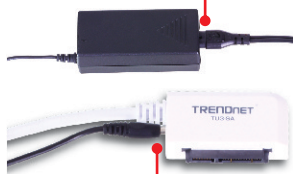

3. Conecte el adaptador eléctrico al TU3-SA.

4. Conecte el conector USB tipo A macho de los TU3-SA a un puerto USB de su ordenador.



ENGLISH

FRANÇAIS

DEUTSCH

ESPAÑOL

РУССКИЙ

5. Los archivos controladores se instalarán automáticamente.

Nota:

Se le recomienda formatear primero el disco duro nuevo. Por favor refiérase a la pregunta 2 en la guía de resolución de problemas para más información.

La instalación ha sido completada


Para obtener información más detallada sobre la configuración así como de las configuraciones avanzadas del **TU3-SA**, por favor consulte la sección de resolución de problemas, el CD-ROM de la Guía del Usuario, o el sitio Web de TRENDnet en <http://www.trendnet.com>.

Registre su producto

Para asegurar los más altos niveles de servicio y apoyo al cliente, registre su producto en línea en: www.trendnet.com/register Gracias por elegir TRENDnet

Windows 7 / Vista / XP

1. Haga doble clic en PC o Mi PC. Le aparecerá una unidad debajo de la unidad de disco duro.

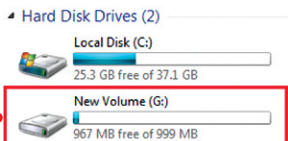

El disco duro está listo para el acceso

1. My computer does not recognize the TU3-SA. What should I do?

1. Verify that the computer meets the minimum requirements as listed in section 1.
2. Make sure that you have plugged in the power adapter into the unit and the power cord into an available power outlet.
3. Access the device manager and verify the TU3-SA is installed properly.
 1. To access the device manager on Windows 7, click on the Windows icon on the bottom left-hand corner, click **Computer**, click **System Properties** and then click **Device Manager**. Double click on **Universal Serial Bus Controllers**. Make sure that **USB Mass Storage Device** is listed and there is no yellow question mark or exclamation point.
 2. To access the device manager on Windows Vista, right-click **Computer**, click **Properties** and then click **Device Manager**. Double click on **Universal Serial Bus Controllers**. Make sure that **USB Mass Storage Device** is listed and there is no yellow question mark or exclamation point.
 3. To access the device manager on Windows XP, right-click **My Computer**, click **Properties**, click the Hardware tab, and then click **Device Manager**. Right click on My Computer → **Properties**. Double click on **Universal Serial Bus Controllers**. Make sure that **USB Mass Storage Device** is listed and there is no yellow question mark or exclamation point.
4. Try plugging the device into a different USB port on your computer.

2. How do I format my brand new hard drive with the TU3-SA?

1. For Windows 7/Vista, right click on **Computer** or **My Computer** and select **Manage**. When the **Computer Management** screen appears, click on **Disk Management**. Right click on the hard drive and click **New Simple Volume**. Follow the **New Simple Volume wizard** and then click **Finish**.
2. For Windows XP, go to **Start** → **Settings** → **Control Panel** → **Administrative Tools** → **Computer Management** → **Disk Management**. If the Initialize and Convert Disk Wizard appears, click **Cancel**. Right click the **Unknown** drive, click Initialize and then click **OK**. Right click on the unallocated region of the hard drive and select **New Partition**. Follow the **New Partition Wizard** instructions then click **Finish**. The hard drive will automatically start the formatting process.

Note: Make sure that the selected hard drive is not your C or D drive. Also make sure that the selected hard drive is connected to the TU3-SA.

3. My computer does not list any drives? What should I do?

1. Access the device manager and verify the hard drive is installed properly.
 1. To access the device manager on Windows 7, click on the Windows icon on the bottom left-hand corner, click **Computer**, click **System Properties** and then click **Device Manager**. Double click on **Disk Drives**. Make sure that **USB Device** is listed and there is no yellow question mark or exclamation point.
 2. To access the device manager on Windows Vista, right-click **Computer**, click **Properties** and then click **Device Manager**. Double click on **Disk Drives**. Make sure that **USB Device** is listed and there is no yellow question mark or exclamation point.
 3. To access the device manager on Windows XP, right-click **My Computer**, click **Properties**, click the Hardware tab, and then click **Device Manager**. Right click on **My Computer** → **Properties**. Double click on **Disk Drives**. Make sure that USB Device is listed and there is no yellow question mark or exclamation point.
2. If you are attaching a brand new hard drive, format the drive. Please refer to question 2 for more information.

If you still encounter problems or have any questions regarding the **TU3-SA**, please contact TRENDnet's Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ADVERTENCIA

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.



Product Warranty Registration

Please take a moment to register your product online.
Go to TRENDnet's website at <http://www.trendnet.com/register>