



## Quick Installation Guide



**TV-IP301**  
**TV-IP301W**

# Table of Contents

Español .....	1
1. Antes de iniciar .....	1
2. Instalación del Hardware .....	2
3. Configuración de la cámara Internet .....	3
Troubleshooting .....	5

# 1. Antes de iniciar




## Contenidos del paquete

- TV-IP301/TV-IP301W
- Guía de instalación rápida
- Base de metal
- CD-ROM de la herramienta
- Adaptador de corriente AC
- 1 antena desmontable de 2dBi (TV-IP301W)

## Requisitos del sistema

- Ethernet a 10/100 Mbps
- CPU: Intel Pentium 1GHz o superior
- Memoria: 256 MB o superior
- Resolución VGA: 800 x 600 o superior
- Navegador Web: Internet Explorer 5.0 o superior

## Aplicación

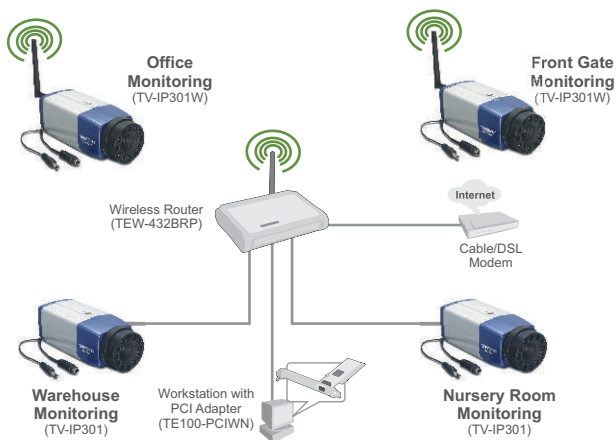

## 2. Instalación del Hardware

1. Fije la Cámara de Internet a la base de metal.



2. Instale la Antena. (TV-IP301W)

3. Conecte el cable de red RJ-45 del conmutador/enrutador al puerto Ethernet de la Cámara de Internet.



 
4. Conecte el adaptador de alimentación AC a la Cámara de Internet y luego a una toma de corriente.



### 3. Configuración de la cámara Internet

Nota: Se le recomienda configurar la cámara de Internet desde un PC por cable. Antes de configurar la Cámara de Internet, debe asignar una dirección IP estática al adaptador de red de su PC en la subred 192.168.1.x. Dado que la dirección IP por defecto de la Cámara de Internet es 192.168.1.30, compruebe que ningún otro dispositivo de red tenga asignada una dirección IP de 192.168.1.30. (Consulte la sección de resolución de problemas para saber cómo configurar las opciones de configuración TCP/IP de su PC).


1. Abra su navegador Web, escriba **http://192.168.1.30** en la barra de Dirección, y luego pulse **Enter** (Intro).



2. Introduzca el User name (Nombre de Usuario) y Password (contraseña), y después pulse **OK**.  
User name: **admin**  
Password: **admin**



3. Haga clic en **System** (Sistema) y después en **Network** (Red). Configure las opciones de configuración de red en la misma subred que su red. Luego, haga clic en **Save** (Guardar).

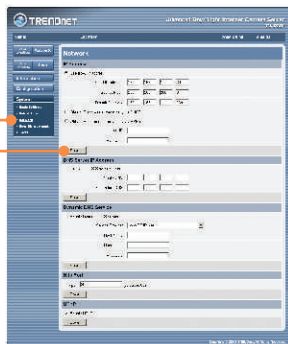

4. Haga clic en **System** (Sistema) y después en **Wireless** (Inalámbrico). Establezca sus opciones de configuración inalámbrica de forma que coincidan con sus configuraciones de red y después haga clic en **Save** (Guardar). (Sólo para TV-IP301W)



Nota: La TV-IP301W no trabajará de manera inalámbrica a menos que desconecte el cable Ethernet de la parte trasera de la cámara.

5. Haga clic en **Live Show Active X** (Mostrar en vivo con Active X).




## La instalación ha sido completada

Nota: Para obtener información más detallada sobre la configuración y las opciones de configuración avanzadas de la **TV-IP301/TV-IP301W**, por favor consulte la sección de resolución de problemas en el CD-ROM de la Guía del Usuario, o el sitio Web de Trendnet en <http://www.trendnet.com>.

## Q1: How do I configure TCP/IP settings on my computer?

1. Go into the **Control Panel** and double-click the **Network Connections** icon, and then right-click the **Local Area Connection** icon and then click **Properties**.

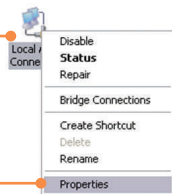

2. Click **Internet Protocol (TCP/IP)** and then click **Properties**. Then click on **Use the following IP address**, and make sure you assign your network adapter an IP address in the subnet of 192.168.1.x.



## Q2: The image is blurry. How do I fix this?

**A2:** You can adjust the Internet Camera's focus by rotating the lens.

## Q3: When I click on Live Show Active X, the image does not load?

**A3:** First, make sure that you are using a browser that supports Active X. Second, make sure that Active X is installed.

## Q4: How do I connect the TV-IP301W to my wireless router or access point?

**A4:** Make sure that you configure the camera to have the same SSID, encryption mode and key (if enabled). Follow the instructions in section 2 to configure the camera with the SSID and encryption key.

## Q5: After I successfully configured the TV-IP301W to match my wireless network settings, I can not connect to the camera.

**A5:** First, verify that the wireless settings match your wireless network settings. Second, verify in the wireless section of the browser configuration that the **Disable Wireless Communication** option is not checked. Third, make sure to disconnect the Ethernet cable from the camera and verify that the **LINK** LED is blinking green.

If you still encounter problems or have any questions regarding the **TV-IP301/TV-IP301W**, please contact TRENDnet's Technical Support Department.

## Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



**NOTE:** THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.





# TRENDnet

## TRENDnet Technical Support

### US • Canada

**Toll Free Telephone:** 1(866) 845-3673

24/7 Tech Support



### Europe (Germany • France • Italy • Spain • Switzerland • UK)

**Toll Free Telephone:** +00800 60 76 76 6

### Worldwide

**Telephone:** +(31) (0) 20 504 05 35

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

## Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

## TRENDnet

3135 Kashiwa Street  
Torrance, CA 90505  
USA