



Microsoft Windows Vista Installation Guide

TFM-560X

1. Microsoft Windows Vista Installation

System Requirements

- Computer with an available RS-232 COM port
- CPU: 800MHz or Above
- Memory: 512MB RAM or above

1. Turn off the PC.

2. Plug the male end of the RS-232 cable into the TFM-560X. Then plug the female end of the RS-232 cable into your PC's Serial port.



3. Plug one end of a RJ-11 telephone cable into the **Line** port on the Modem, and then connect the other end into the telephone jack.

4. Connect the AC Power Adapter to the Modem and then to a power outlet



5. Turn on the modem.

6. Connect your telephone into the Phone port (optional).

7. Turn on the PC.


8. Click **Locate and install driver software (recommended)**.



9. Click **Don't search online**.



10. Insert the Driver CD-ROM into your computer's CD-ROM drive and then click **Next**.

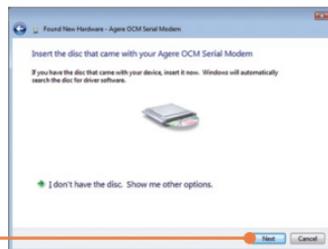

11. Click Install this driver software anyway.



Your installation is now complete.

For detailed information regarding the TFM-560X configuration and advanced settings, please refer to the User's Guide included on the Utility & Driver CD-ROM or TRENDnet's website at www.trendnet.com



TRENDnet Technical Support

US • Canada

Toll Free Telephone: 1(866) 845-3673

24/7 Tech Support



Europe (Germany • France • Italy • Spain • Switzerland • UK)

Toll Free Telephone: +00800 60 76 76 67

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

Worldwide

Telephone: +(31) (0) 20 504 05 35

English/Espanol - 24/7

Francais/Deutsch - 11am-8pm, Monday - Friday MET

Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

TRENDnet

20675 Manhattan Place

Torrance, CA 90501

USA