



**Quick Installation Guide** 













# **Table of Contents**

English	
1. Before You Start	
2. Hardware Installation	2
3. Web Smart Switch Management Utility	3
Troubleshooting	6

### 1. Before You Start




#### **Package Contents**

- TEG-2248WS
- Quick Installation Guide
- Utility & User Guide CD-ROM
- 2 Mounting Brackets with Screws
- Power Cord

### **System Requirements**

- Web Browser: Internet Explorer (5.0 or above), Netscape (6.0 or above)
- Computer with Network adapter installed
- Optional Mini-GBIC modules (e.g. TEG-MGBSX, TEG-MGBS10, TEG-MGBS40, TEG-MGBS80, TEG-MGBS10D3\_5, TEG-MGBS40D3\_5) for Mini-GBIC slots


## **Application**

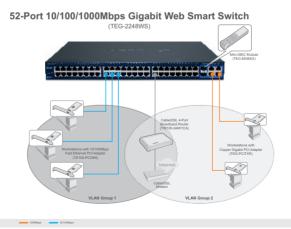

### 2. Hardware Installation

#### Note:

- 1. After hardware installation is complete, use the Web Browser to configure the TEG-2248WS. Open your web browser, and enter the default IP Address <a href="http://192.168.0.1">http://192.168.0.1</a> and default password "admin". Make sure your computer and the TEG-2248WS are configured to the same network segment.
- The Mini-GBIC slots are shared with Port 49 and 50 Gigabit Ethernet ports. When the Mini-GBIC slots are in use, port 49 and 50 Gigabit Ethernet ports are disabled.

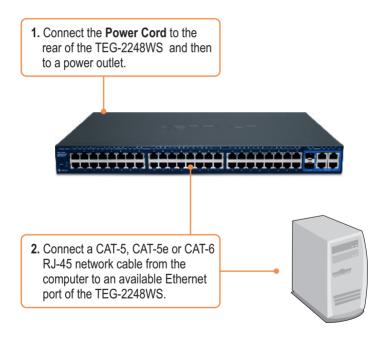

## 3. Web Smart Switch Management Utility

Note: If you would like to easily discover all the Web Smart Switches on the network, assign IP Address, change the password, and upgrade to new firmware, then install the Web Smart Switch Management Utility. Follow the steps below.

### For Windows User

 Insert the Utility & User's Guide CD-ROM into your computer's CD-ROM Drive and then click Install Utility.





2. Follow the Installation Wizard instructions. Click **OK**.

3. Click Start > Programs > TRENDnet > Web Smart Switch Management Utility, and then click Web Smart Switch Management Utility.

Web Smart Switch Management Utility

**4.** Click **Discovery**, and then double-click the **Switch** that appears in the **Discovery List**.




5. Click the **Switch** in the **Monitor**List and then click **Configuration**setting.



 Configure the IP Address, Subnet mask, Gateway, and Password. Click Set.





7. Click OK.

8. Click Access Web.

Manager | Manage

**9.** Type in your **Password** and then click **Login**. By default, the Password is **admin**.



For more information regarding the **Web Smart Switch Management Utility** configuration and advanced settings, please refer to the User's Guide included on the Utility CD-ROM or TRENDnet's website at www.trendnet.com

### **Register Your Product**

To ensure the highest level of customer service and support, please take a moment to register your product Online at: www.trendnet.com/register

Thank you for choosing TRENDnet

## **Troubleshooting**

#### Q1: After connecting the TEG-2248WS to a power outlet, the LEDs do not turn on.

A1: Check the connection of the power cord to the TEG-2248WS and the power outlet. Also check that the power outlet is receiving power.

# Q2: After installing the Web Smart Switch Management Utility, I clicked Discovery and the Utility is unable to discover the TEG-2248WS. What should I do?

A2: Make sure that the TEG-2248WS is powered on and that all connections are secure. Also check that your computer's IP Address is on the same network segment as the TEG-2248WS. The default IP Address of the Switch is 192.168.0.1 and the default password is admin

# Q3: When I access the TEG-2248WS using a web browser, I get a screen that tells me "only one user can login". What should I do?

A3: Another computer is configuring the TEG-2248WS. Please wait until the user logs off. If the other user has already logged off and you still get the same screen, then disconnect the power cord from the TEG-2248WS, wait for 5 seconds, reconnect the power cord to the TEG-2248WS, allow 5 seconds for the Switch to power on, and then attempt to access the web configuration page to login.

#### Q4: I forgot the administration password. How do I reset my TEG-2248WS?

A4: Press on the reset button using a pen or paperclip for 10 seconds. The default password is admin.

# Q5: When I connect a computer to the Switch's Gigabit port, I am not getting Gigabit speeds. What should I do?

A5: Check the LED on the Switch. When the LED is amber, the computer's connection speed is 10 or 100Mbps. Make sure that you have a Gigabit Ethernet adapter installed. Also make sure to use a Cat-5e or Cat 6 Ethernet cable. Some Cat-5 cables are not rated to run in Gigabit.

If you still encounter problems or have any questions regarding the TEG-2248WS, please refer to the User's Guide included on the Utility CD-ROM or contact TRENDnet's Technical Support Department.

#### Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.





Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

#### **ADVERTENCIA**

En todos nuestros equipos se mencionan claramente las caracteristicas del adaptador de alimentacón necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños fisicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energia electrica domiciliaria existente en el pais o zona de instalación.



## **Product Warranty Registration**

Please take a moment to register your product online. Go to TRENDnet's website at http://www.trendnet.com/register

# TRENDNET<sup>®</sup>

20675 Manhattan Place Torrance, CA 90501 USA