



TRENDnet



Quick Installation Guide



TE100-P21

Table of Contents

Русский	1
1. Что нужно сделать в самом начале	1
2. Порядок подключения	2
3. Работа с принтером печати	3
Troubleshooting	7

1. Что нужно сделать в самом начале




Содержимое упаковки

- TE100-P21
- Руководство по быстрой установке
- CD-ROM-диск с утилитами
- Силовой адаптер (5V, 2.5A)

Системные требования

1. Pentium с процессором 100 МГц или выше
2. 8 МБ ОЗУ или более
3. Windows, Linux, Mac OS X или другая ОС.

10/100Mbps Multi-Port Print Server (TE100-P21)

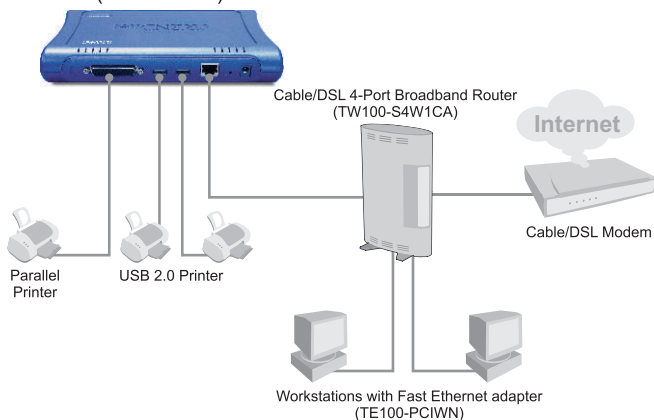

2. Порядок подключения

Примечание: Отключите питание всех принтеров перед их подключением к серверу печати. Затем после подключения оборудования соответственно включите каждый принтер.

1. Присоедините Parallel или USB-принтер к принтерным портам.



2. Подключите кабель RJ45 к порту ЛС и сетевому концентратору.

3. Присоедините силовой адаптер к серверу печати.

3. Работа с принтером печати


Примечание: Пользователи MAC должны изменить IP-адрес своих компьютеров на 192.168.0.X (где X имеющееся число от 2 до 254) и ввести 192.168.0.1 в своем браузере для получения доступа к утилите сервера печати в Интернете.

Пользователям Windows

1. Установив установочный компакт-диск, щелкните по **Install Utility**.




2. Пройдите все этапы установки и щелкните по кнопке **Finish**.

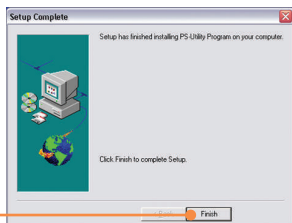


3. Двойным щелчком выберите значок PS-Utility.




4. Выберите **Change IP Address**.

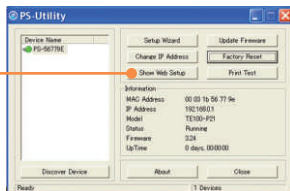

5. Выберите **Manually Assign** и введите **IP Address**, соответствующий вашему текущему сетевому сегменту. Щелкните по кнопке **OK**. Для подтверждения изменения появится еще одно окно. Щелкните по кнопке **OK**.

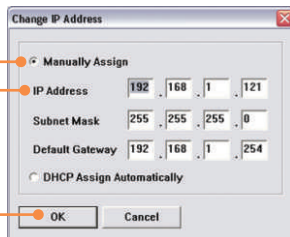


6. В PS-Utility выберите **Show Web Setup**. Найдите и запишите для себя имена: **Server Name** и **Printer Name**.

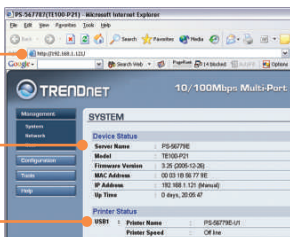


Примечание: Если вы пользуетесь Windows 95/98(SE)/ME, обязательно установите NETBEUI до того, как следовать нижеприведенным указаниям. Если вы пользуетесь Windows 2000/XP, то достаточно добавить свой принтер, используя нижеприведенные указания. Для получения указаний по TCP/IP-печати воспользуйтесь руководством пользователя на CD-ROM-диске.


7. Перейдите к **Панели управления** и двойным щелчком выберите **Принтеры и факсы**. Выберите **Добавить принтер**.

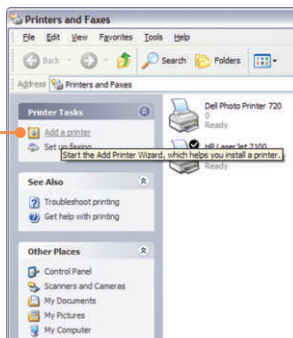


8. Щелкните по кнопке **Далее** в **Мастере добавления принтеров** и выберите опцию сетевого принтера. Щелкните по кнопке **Далее**.

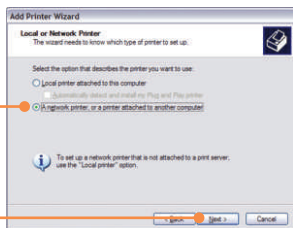


9. Выберите **Подключиться к этому принтеру** и введите имя сервера и имя принтера в следующем формате:
`\\server_name\printer_name`
Щелкните по кнопке **Далее**.

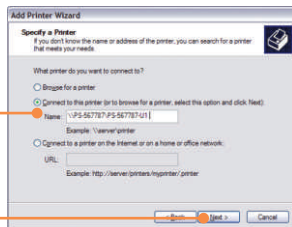


10. Щелкните по кнопке **Далее**.



11. Выберите соответствующий драйвер для принтера и щелкните по кнопке **Далее**.

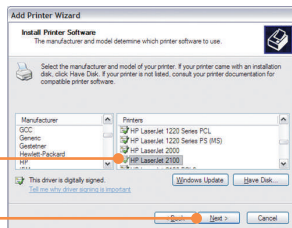

12. Выберите **Да** и щелкните по кнопке **Далее**. Для завершения установки щелкните по кнопке **Завершить**.

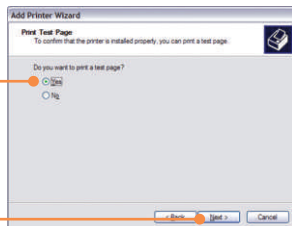

Установка завершена.

Примечание: Подробнее о дополнительных возможностях узнайте в Руководстве пользователя.

Q1. I cannot add a network printer after I typed the server name and printer name.

- A1.** Please double check your hardware connections. Make sure that your printer is connected properly to the print server and your power adapter is connected properly to a power outlet.

Q2. I have double checked my hardware connections and have verified that everything is connected properly, but I still cannot connect to my printer after I typed in the server name and printer name.

- A2.** Make sure that you are typing the correct printer name. If your USB printer is connected to the USB2 slot, then use the Printer Name that is by the USB2 heading in the web configuration utility. The following examples will give you a better idea of how the print server maps each physical port with a logical name:

LPT port = \\PS-567787\PS-567787-LP1

USB1 port = \\PS-567787\PS-567787-U1

USB2 port = \\PS-567787\PS-567787-U2

Q3. I verified that the hardware installation is correct and typed the correct printer name, but I still cannot find the network printer.

- A3.** Make sure that the server name and printer name is entered correctly. There should be no spaces, and the back slashes that separate the server name and printer name should be this “\\”, instead of this “/”.

Q4. I typed in the server name and printer name correctly and successfully installed the network printer. But I can't print a test page.

- A4.** Make sure that the printer is online by turning the printer on. Make sure the power adapter of your printer is properly connected to a power outlet.

Q5. I successfully added a network printer to my computer, and my printer is receiving power. I can also print a test page, but I cannot print anything from Microsoft Word or other applications.

- A5.** Make sure to set the newly installed network printer to your default printer.

Q6. I configured my print server to automatically receive an IP Address from a DHCP server, and now I cannot go into the print server's web utility.

A6. Press the Reset button at the back of the TE100-P21, hold the button for 15 seconds, release the button, and enter `http://192.168.0.1` in a web browser to access the web utility feature.

Q7. I pressed the reset button and held it for 15 seconds. I also typed in `http://192.168.0.1` in a web browser, but I still cannot access my print server.

A7. Make sure to change your local IP address to `192.168.0.xxx` where xxx is an available number between 2 to 254. You can also use the PS-Utility to locate the print server's IP address, or enable UPnP.

If you have any questions regarding the print server, please contact TRENDnet Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received.
Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



TRENDnet

TRENDnet Technical Support

US/Canada Support Center

Contact

Telephone: 1(888) 777-1550

Fax: 1(310) 626-6267

Email: support@trendnet.com

Tech Support Hours

7:30am - 6:00pm
Pacific Standard Time
Monday - Friday

European Support Center

Contact

Telephone:

Deutsch : +49 (0) 6331 / 268-460

Français : +49 (0) 6331 / 268-461

0800-907-161 (numéro vert)

Español : +49 (0) 6331 / 268-462

English : +49 (0) 6331 / 268-463

Italiano : +49 (0) 6331 / 268-464

Dutch : +49 (0) 6331 / 268-465

Fax: +49 (0) 6331 / 268-466

Tech Support Hours

8:00am - 6:00pm
Middle European Time
Monday - Friday

Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

TRENDnet

3135 Kashiwa Street
Torrance, CA 90505
USA