



# TE100-P1P/TEW-P1PG Windows 7 Installation Instruction

## Hardware Installation


1. Go to <http://www.trendnet.com/downloads/> to download the Windows 7 Utility. Save the file to your desktop.
2. Right click on the file and select **Extract All**. Follow the wizard to uncompress the file.
3. Connect a RJ-45 Network cable from a switch/router to the LAN port of the Print Server
4. Connect the detachable antenna (for TEW-P1PG only)
5. Connect the AC power adapter to the Print Server and then to a power outlet
6. Connect the Parallel Printer to the Parallel port on the Print Server
7. Power on the Printer

## Configure the Print Server

1. Double click on **PSUtilitySetup\_v3.13.exe**
2. Follow the steps to configure the Print server

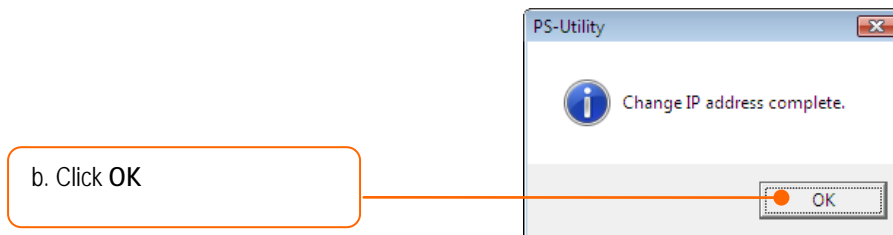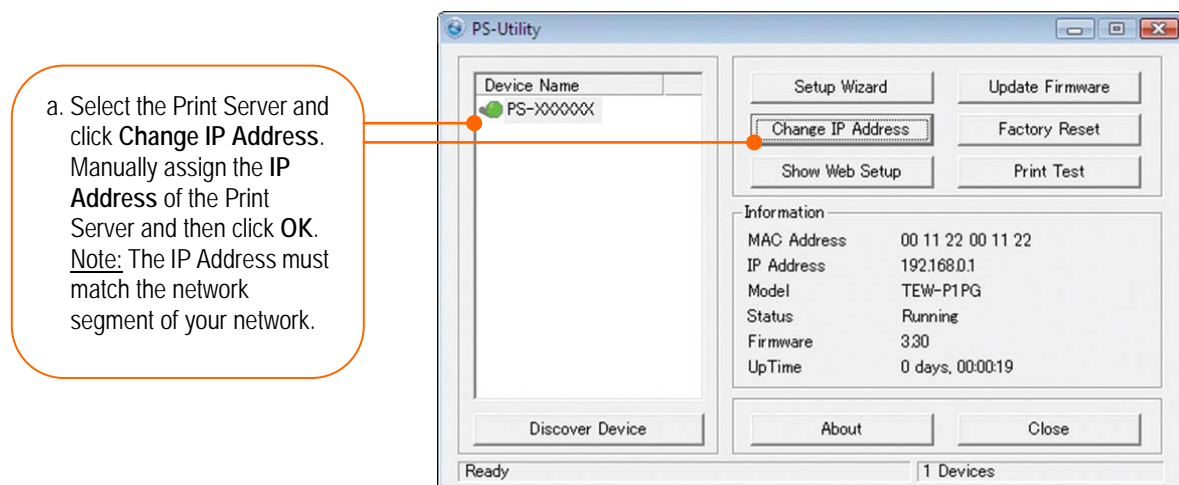

c. Click **Show Web Setup**.

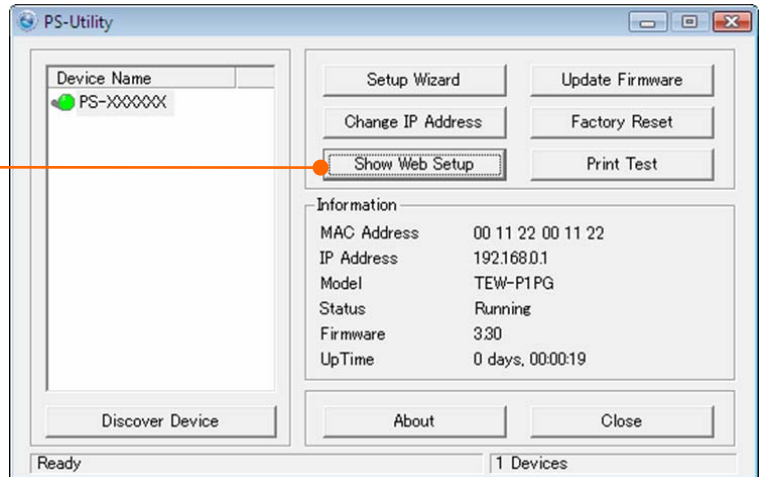

d. Click on **Configuration**, then **Wireless**. Select the proper **SSID** and then click **Save**. (Enable and enter the encryption key if your wireless network is encrypted. Please contact your Network Administrator for the encryption key)(TEW-P1PG only).




e. Unplug the Ethernet cable and the power adapter from the print server. Wait 15 seconds, then plug the power adapter back in (TEW-P1PG only).


## Add the Printer to your computer

1. Double click on PSWizardSetup\_v2.20.exe
2. Follow the steps to add the printer to your computer


a. Select the print server, select the desired port and then click **Add Printer**.

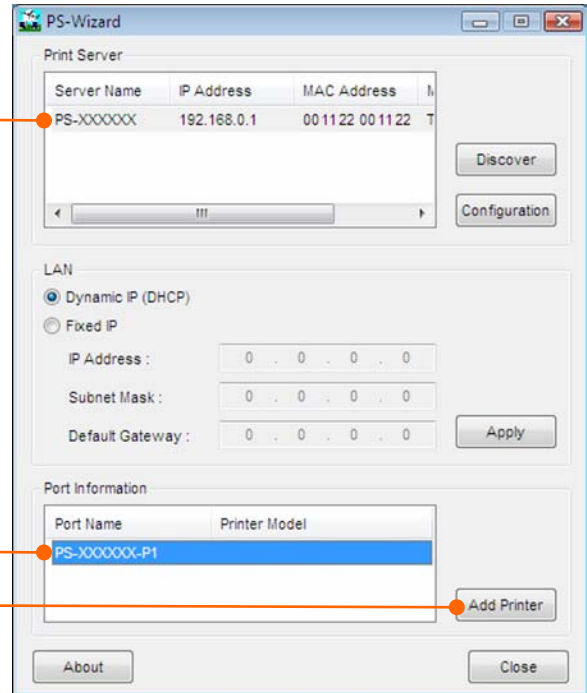


b. Click **Select from manufacturer list**. Select the appropriate driver for your printer and then click **Next**.

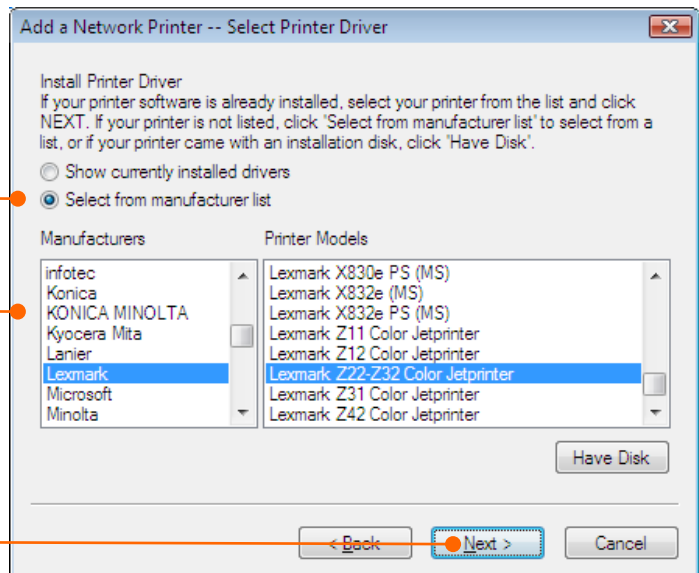


c. Click Next.

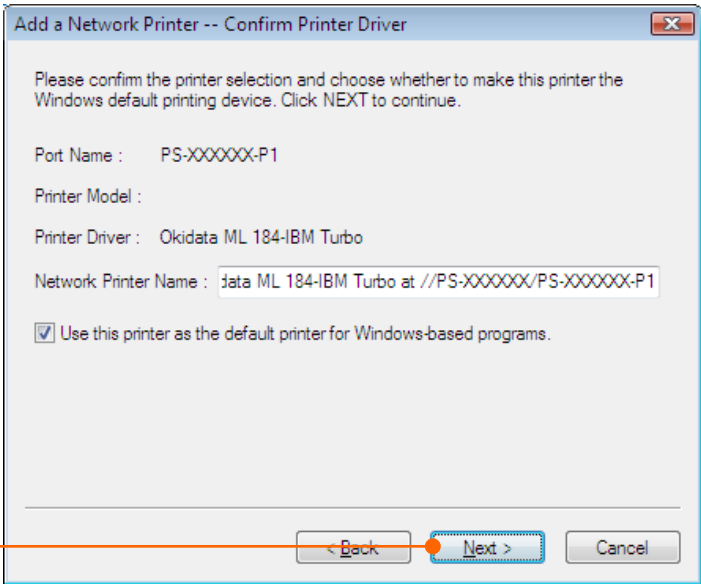

d. Click Print Test Page.

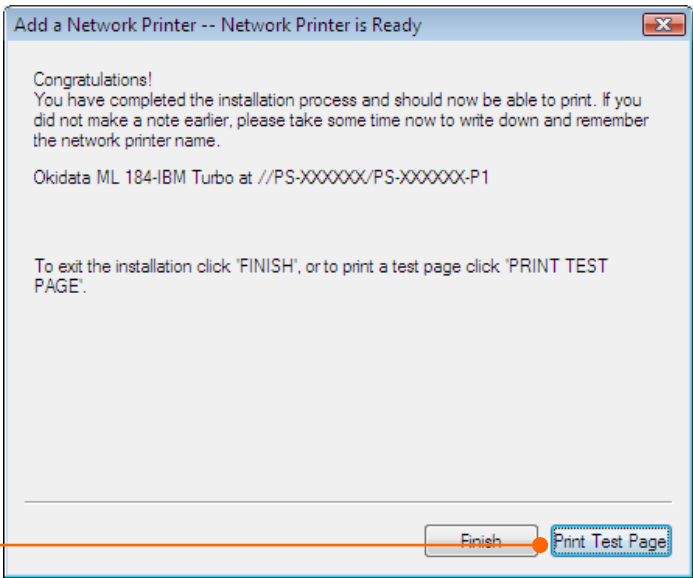

e. Click OK.

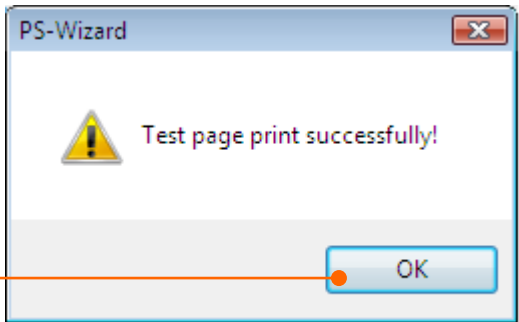

f. Click **Finish**.

g. Repeat the above steps to add the printer to other computers on the network

## Troubleshooting

### The PS Wizard / PS Utility is unable to see my printer server. What should I do?

1. Double check your hardware connections; make sure that the print server and printer are powered ON and are properly connected.
2. Click **Discover**.
3. Disable any software firewall programs (e.g. ZoneAlarm). Also disable the built in Windows firewall program.

### My printer does not print the entire document. What should I do?

#### Windows 7

1. Click on the Windows icon on the bottom left-hand corner of the screen.
2. Click Devices and Printers.
3. Right click on the printer and select Printer Properties.
4. Click the **Advanced** tab.
5. Uncheck **Enable advanced printing features**.
6. Click **Apply**.
7. Click **OK**.

### I successfully added a printer to my computer and I can print a test page, but I cannot print anything from Microsoft Word or other applications.

Make sure the printer is set as your **default** printer. Click the Windows icon -> Devices and Printers and verify that your printer icon has a check on it.

### I configured my print server to automatically receive an IP Address from a DHCP server, and now I cannot go into the Print Server's web utility.

Open PS Wizard (See Add the Printer to your PC) to locate your print server's IP Address.

### After I successfully configured the TEW-P1PG to match my wireless network settings, I can not print through the Print Server.

1. Verify that the wireless settings match your wireless network settings.
2. Verify that the antenna is attached to the Print Server and the WLAN LED on the Print Server is lit.

### I forgot the administration password. How do I reset my print server?

Factory reset the print server using the following procedure. This procedure will reset all settings to default. By default, there is no password.

1. Open up PS-Utility.
2. Copy down the last 4 digits of the MAC address.
3. Press the Factory Reset button.
4. When prompted for a password, enter SYSXXXX, where XXXX represents the last 4 digits of the MAC address. Note: All letters must be uppercase.