



# TRENDnet



## Quick Installation Guide



# TE100-P21

# Table of Contents

English .....	1
1. Before You Start .....	1
2. How to Connect .....	2
3. Using the Print Server .....	3
Troubleshooting .....	7

# 1. Before You Start




## Package Content

- TE100-P21
- Quick Installation Guide
- Utility CD-ROM
- Power Adapter (5V, 2.5A)

## System Requirements

1. Pentium 100Mhz or faster processor
2. 8MB RAM or more
3. Windows, Linux, Mac OS X, or other OS

### 10/100Mbps Multi-Port Print Server (TE100-P21)

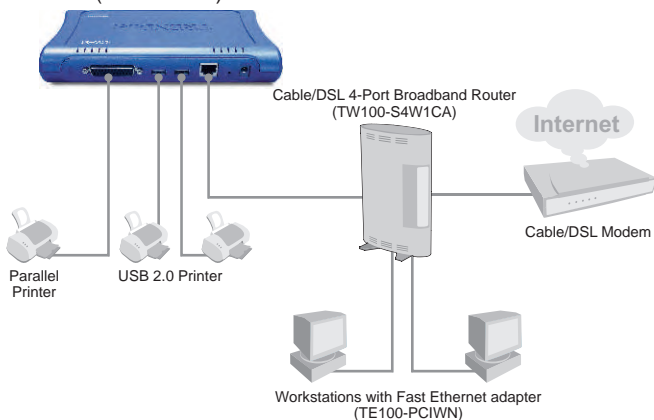

## 2. How to Connect

**Note:** Please power off all printers before connecting them to the print server. Then turn on each printer after you make your hardware connections.

1. Connect a Parallel or USB printer to the printer ports.



2. Connect the RJ45 cable to the LAN port and to your network hub or switch.

3. Plug the AC power adapter into the Print Server.

# 3. Using the Print Server


**Note:** For MAC Users, change your computer's IP address to 192.168.0.X (where X is an available number from 2-254), and enter 192.168.0.1 in your web browser to access the Print Server's Web Utility.

## For Windows Users

1. After inserting the installation CD, click **Install Utility**.



2. Go through each installation step and click **Finish**.

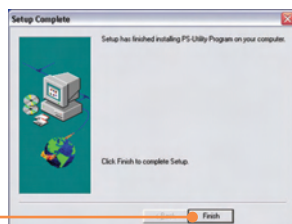


3. Double-click the PS-Utility icon.




PS-Utility  
V3.00

4. Click **Change IP Address**.

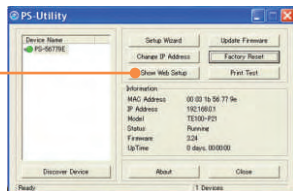

5. Select **Manually Assign** and type in an **IP Address** that matches your current network segment. Click **OK**. Another pop-up window will appear to confirm the change. Click **OK**.

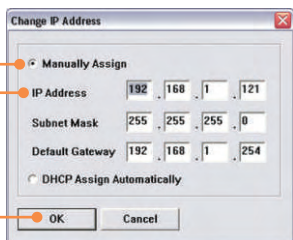


6. Click **Show Web Setup** on PS-Utility. Take note and write down the **Server Name** and the **Printer Name**.




**Note:** If you are using Windows 95/98(SE)/ME, then make sure that NETBEUI is installed before you follow the instructions below. If you are using Windows 2000/XP, then you can simply add your printer using the instructions below. For TCP/IP Printing instructions, please consult the User's Guide on the CD-ROM for details.


7. Go into **Control Panel** and double-click **Printers and Faxes**. Click **Add Printer**.

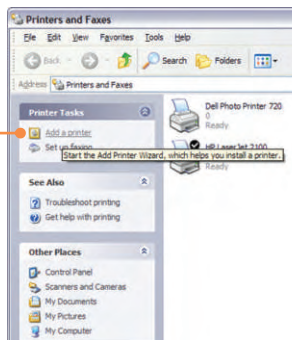


8. Click **Next** on the **Add Printer Wizard**, and select the network printer option. Click **Next**.

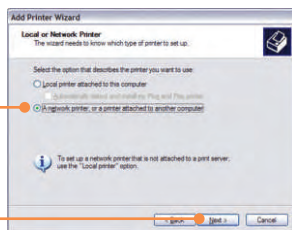


9. Select **Connect to this printer** and type in the server name and the printer name in the following format:  
`\\server_name\printer_name`  
Click **Next**.

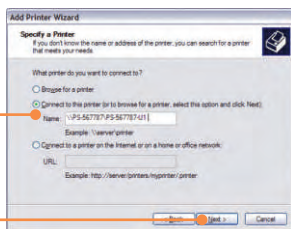


10. Click **OK**.



11. Select the appropriate driver for your printer and click **Next**.

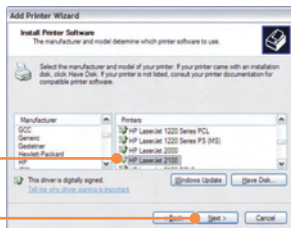

12. Select **Yes** and click **Next**. Click **Finish** to complete the installation.

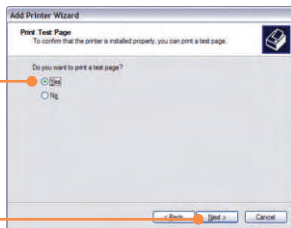

**Your installation is now complete.**

Note: For more detail on advanced features, please consult the User's Guide.



**Q1. I cannot add a network printer after I typed the server name and printer name.**

- A1.** Please double check your hardware connections. Make sure that your printer is connected properly to the print server and your power adapter is connected properly to a power outlet.

**Q2. I have double checked my hardware connections and have verified that everything is connected properly, but I still cannot connect to my printer after I typed in the server name and printer name.**

- A2.** Make sure that you are typing the correct printer name. If your USB printer is connected to the USB2 slot, then use the Printer Name that is by the USB2 heading in the web configuration utility. The following examples will give you a better idea of how the print server maps each physical port with a logical name:

LPT port = \\PS-567787\PS-567787-LP1

USB1 port = \\PS-567787\PS-567787-U1

USB2 port = \\PS-567787\PS-567787-U2

**Q3. I verified that the hardware installation is correct and typed the correct printer name, but I still cannot find the network printer.**

- A3.** Make sure that the server name and printer name is entered correctly. There should be no spaces, and the back slashes that separate the server name and printer name should be this "\\", instead of this "/".

**Q4. I typed in the server name and printer name correctly and successfully installed the network printer. But I can't print a test page.**

- A4.** Make sure that the printer is online by turning the printer on. Make sure the power adapter of your printer is properly connected to a power outlet.

**Q5. I successfully added a network printer to my computer, and my printer is receiving power. I can also print a test page, but I cannot print anything from Microsoft Word or other applications.**

- A5.** Make sure to set the newly installed network printer to your default printer.

**Q6. I configured my print server to automatically receive an IP Address from a DHCP server, and now I cannot go into the print server's web utility.**

**A6.** Press the Reset button at the back of the TE100-P21, hold the button for 15 seconds, release the button, and enter `http://192.168.0.1` in a web browser to access the web utility feature.

**Q7. I pressed the reset button and held it for 15 seconds. I also typed in `http://192.168.0.1` in a web browser, but I still cannot access my print server.**

**A7.** Make sure to change your local IP address to `192.168.0.xxx` where xxx is an available number between 2 to 254. You can also use the PS-Utility to locate the print server's IP address, or enable UPnP.

If you have any questions regarding the print server, please contact TRENDnet Technical Support Department.

## Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received.  
Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



**NOTE:** THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



# TRENDnet

## TRENDnet Technical Support

### US/Canada Support Center

**Contact**

**Telephone:** 1(866) 845-3673

**Email:** support@trendnet.com

**Tech Support Hours**

24/7 Toll Free Tech Support



### European Support Center

**Contact**

**Telephone:**

Deutsch : +49 (0) 6331 / 268-460

Français : +49 (0) 6331 / 268-461

0800-90-71-61 (numéro vert)

Español : +49 (0) 6331 / 268-462

English : +49 (0) 6331 / 268-463

Italiano : +49 (0) 6331 / 268-464

Dutch : +49 (0) 6331 / 268-465

**Fax:** +49 (0) 6331 / 268-466

**Tech Support Hours**

8:00am - 6:00pm

Middle European Time

Monday - Friday

## Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

## TRENDnet

3135 Kashiwa Street

Torrance, CA 90505

USA