



Quick Installation Guide



TEG-S081Fi

Table of Contents

Español	1
1. Antes de iniciar	1
2. Cómo conectar	2
3. Cómo utilizar el conmutador	3
Troubleshooting	5


1. Antes de iniciar

	Contenidos del paquete <ul style="list-style-type: none">• TEG-S081Fi• Accesorios• Un cable de poder AC• Un cable RS-232• Guía de instalación rápida• Guía del usuario en CD-ROM
---	--

Requisitos del sistema

1. Estaciones de trabajo con tarjetas de red
2. Protocolo TCP/IP instalado en todas las estaciones de trabajo
3. Una navegador Web como Internet Explorer o Netscape Navigator
4. Un cable de fibra multimodo con conectores tipo-SC.
5. Convertidores de fibra multimodo con conectores tipo-SC o un conmutador con puerto de fibra tipo-SC.

8-Port 100Base-FX Layer 2 Managed Switch with GBIC Slot (TEG-S081Fi)

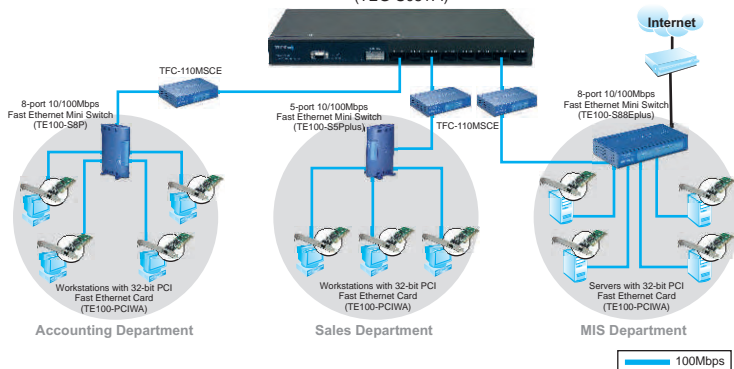

2. Cómo conectar

1. Conecte el cable de alimentación AC a la parte posterior del TEG-S081Fi.




2. Conecte el cable de red en la parte frontal del conmutador.


3. Verifique que los LEDs de **PWR** (Encendido) despliegan una luz verde sólida.

3. Cómo utilizar el conmutador

1. Vaya a **Start (Inicio) ? Settings (Configuración)? Control Panel (Panel de Control).**

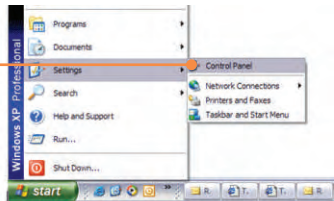


2. Haga doble clic sobre el icono **Network Connection (Conexión de Red).**

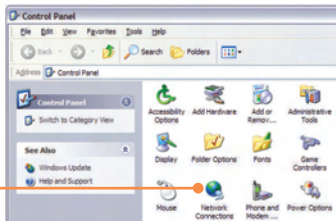

3. Haga clic derecho en el icono **Local Area Connection (Conexión del área local),** después haga clic en **Properties (propiedades).**




4. Por favor configure la dirección IP de su PC a **192.168.16.x**

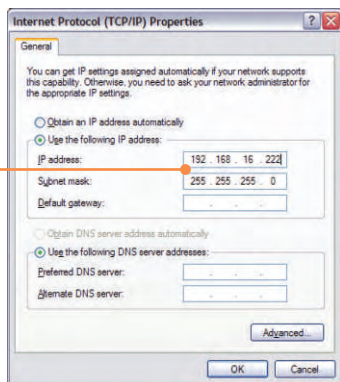

5. Abra su navegador Web, escriba **http://192.168.16.1**, y luego pulse **Enter (Intro)**.

6. Nombre de usuario: **root**
Contraseña: **root**

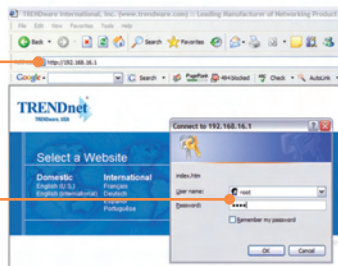

7. Seleccione la opción apropiada para configurar el conmutador SNMP.



La instalación ha sido completada


Nota: Para más detalles sobre las características avanzadas, por favor consulte la Guía del Usuario.

Q1. How come I cannot see any light from any of my LED's?

A1. Your TEG-S081Fi is not getting any power. Make sure that your surge protector or your outlet is getting power and make sure that the AC Power cord is properly connected to your TEG-S081Fi .

Q2. I connected my fiber converter to the TEG-S081Fi using a Multimode Fiber cable with SC connectors. However, the network activity LED does not blink. What should I do?

A2. Go to the TEG-S081Fi and move the connector that was in the **transmit** side to the **receive** side, and the other connector that was in the **receive** side to the **transmit** side.



Q3. I changed my IP settings to 192.168.16.222 to access the switch, but I still cannot get into the Web configuration page. What should I do?

A3. Make sure there is no other network device using the same IP address. Afterwards, consult the User's Guide to access the switch through the Console Port. Once you reach the command line interface, perform a factory reset and try again.

Q4. I performed a factory reset on the TEG-S081Fi, but I still cannot access the web configuration page. What should I do?

A4. If you are configuring more than one TEG-S081Fi, then it is possible that you are experiencing IP conflict between these two switches. Please configure each switch one at a time, and make sure you assign a unique IP address to each switch.

If you have any questions regarding the TEG-S081Fi, please contact TRENDnet's Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received.
Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or Retailer for recycling advice.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



TRENDnet

TRENDnet Technical Support

US/Canada Support Center

Contact

Telephone: 1(866) 845-3673

Email: support@trendnet.com

Tech Support Hours

24/7 Toll Free Tech Support



European Support Center

Contact

Telephone:

Deutsch : +49 (0) 6331 / 268-460

Français : +49 (0) 6331 / 268-461

0800-90-71-61 (numéro vert)

Español : +49 (0) 6331 / 268-462

English : +49 (0) 6331 / 268-463

Italiano : +49 (0) 6331 / 268-464

Dutch : +49 (0) 6331 / 268-465

Fax: +49 (0) 6331 / 268-466

Tech Support Hours

8:00am - 6:00pm

Middle European Time

Monday - Friday

Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

TRENDnet

3135 Kashiwa Street
Torrance, CA 90505
USA