



TRENDNET



Quick Installation Guide




TEG-S2400i
TEG-S2600i


Table of Contents

Español	1
1. Antes de iniciar	1
2. Cómo conectar	2
3. Cómo utilizar el conmutador	3
Troubleshooting	5

1. Antes de iniciar

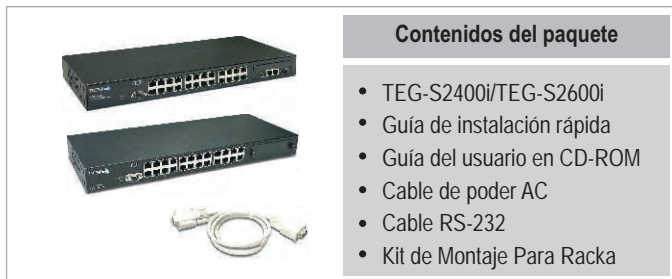

Aplicación

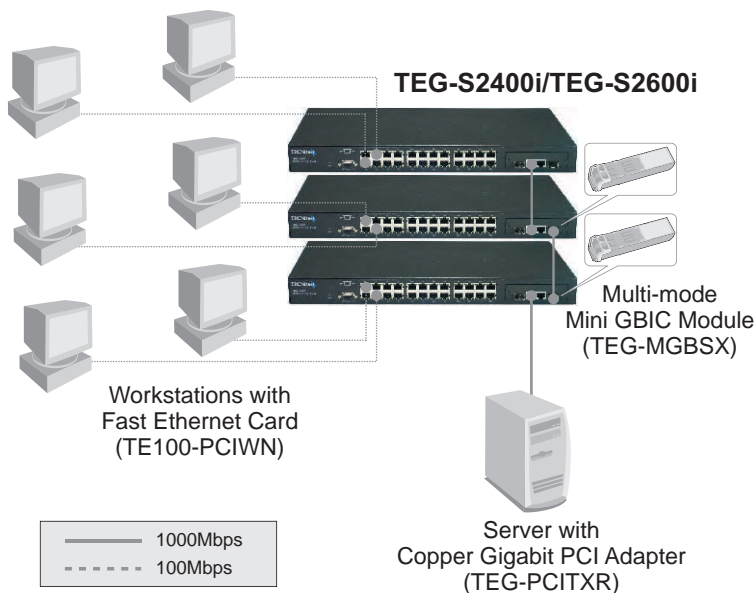

2. Cómo conectar

1. Conecte el cable de alimentación AC a la parte posterior del TEG-S2400i/ TEG-S2600i.




2. Conecte el cable de red en la parte frontal del conmutador y su PC.


3. Verifique que los LEDs de **PWR** (Encendido) despliegan una luz verde sólida.

3. Cómo usar el conmutador


1. Vaya a **Start (Inicio) > Settings (Configuración) > Control Panel (Panel de Control)**.

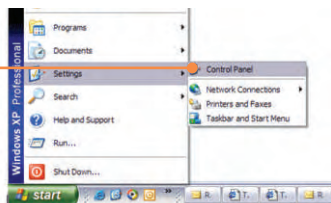


2. Haga doble clic sobre el icono **Network Connection (Conexión de Red)**.

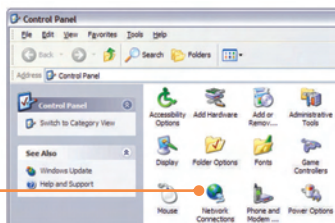


3. Haga clic derecho en el icono **Local Area Connection (Conexión del área local)**, después haga clic en **Properties (propiedades)**.

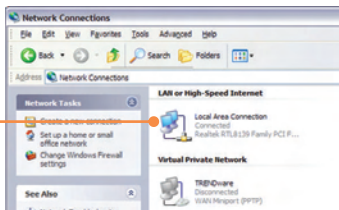

4. Haga clic en la pestaña **General**, seleccione **Protocolo de Internet (TCP/IP)** y luego haga clic en **Propiedades**. Cambie la dirección IP a **192.168.223.10** y haga clic en **OK** para aplicar las configuraciones.

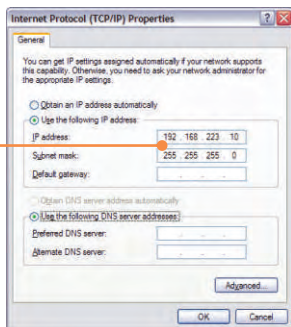

5. Abra su navegador Web, escriba **http://192.168.223.100**, y luego pulse **Enter (Intro)**.

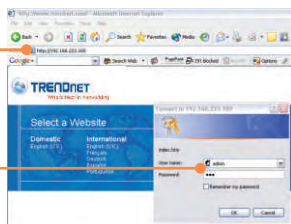

6. Nombre de usuario: **admin**
Contraseña: **123**

7. Seleccione la opción apropiada para configurar el conmutador SNMP.



La instalación ha sido completada

Nota: Para más detalles sobre las características avanzadas, por favor consulte la Guía del Usuario.

Q1. How come I cannot see any light from any of my LED's?

A1. Your TEG-S2400i/TEG-S2600i is not getting any power. Make sure that your surge protector or your outlet is getting power and make sure that the AC Power cord is properly connected to your switch.

Q2. After connecting several workstations to the switch, I have all workstations communicating with the server, but I cannot access the switch's web configuration utility. What should I do?

A2. Please change your switch's IP address to match the network segment of your workstations. For configuring your switch's IP address, please consult the User's Guide.

Q3. I have connected several workstations into the switch, but one workstation does not connect to the network. The LEDs on one of the ports remain unlit, while the rest of the ports have blinking LEDs. What do I do?

A3. You either have a faulty network card or a faulty network patch cable. Make sure that your network card and network cable are functional.

If you have any questions regarding your switch please contact TRENDnet Technical Support Department.

Certifications

This equipment has been tested and found to comply with FCC and CE Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received.
Including interference that may cause undesired operation.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



TRENDnet

TRENDnet Technical Support

US/Canada Support Center

Contact

Telephone: 1(866) 845-3673

Email: support@trendnet.com

Tech Support Hours

24/7 Toll Free Tech Support



European Support Center

Contact

Telephone:

Deutsch : +49 (0) 6331 / 268-460

Français : +49 (0) 6331 / 268-461

0800-90-71-61 (numéro vert)

Español : +49 (0) 6331 / 268-462

English : +49 (0) 6331 / 268-463

Italiano : +49 (0) 6331 / 268-464

Dutch : +49 (0) 6331 / 268-465

Fax: +49 (0) 6331 / 268-466

Tech Support Hours

8:00am - 6:00pm

Middle European Time

Monday - Friday

Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

TRENDnet

3135 Kashiwa Street

Torrance, CA 90505

USA