User's Guide

TRENDNET®



Outdoor 3 MP PoE Day/Night Network Camera

TV-IP310PI

Product Overview



Features

The Outdoor 3 MP PoE Day/Night Network Camera, model TV-IP310PI, provides powerful 3 megapixel night vision in complete darkness for up to 30 meters (100 ft.) This ultra-compact camera is outdoor ready with an IP66 weather rated housing. It comes with a free Apple[®] and Android[™] mobile app and complimentary pro-grade software to manage up to 32 TRENDnet cameras.

Hardware

Adjustable Bracket

Fully adjustable integrated mounting bracket provides installation flexibility

PoE Save installation costs with Power over Ethernet (PoE)

Power Port Optional power port for non-PoE installation

Outdoor Ready Outdoor IP66 weather rated

Sun Visor Sun visor increases image quality throughout the day

Compact Ultra-compact housing

Performance

3 Megapixel Record 2048 x 1538 pixel video at 15 fps in H.264 compression

Night Vision

Night vision up to 30 meters (100 ft.) in complete darkness

Smart IR

Dynamic IR adjustment optimizes night visibility

TRENDnet User's Guide

Digital Zoom

Digitally zoom anywhere within the viewing field

IPv6

IPv6 support

Advanced Playback

Advanced in-camera archived video review functionality

D-WDR

Digital Wide Dynamic Range improves video quality in high contrast lighting environments

Storage

Samba video support with notification if storage drive is full

Free Apps


See live video on a mobile device with free Apple[®] and Android[™] apps

Complimentary Software

Complimentary pro-grade software to manage up to 32 TRENDnet cameras

TV-IP310PI package includes:

- TV-IP310PI
- Multi-Language Quick Installation Guide
- CD-ROM (Utility and User's Guide)
- Camera mounting hardware
- (Optional power adapter not included)

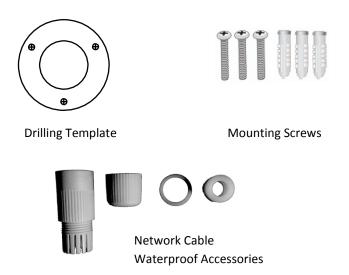


If any package content is missing or damaged, please contact the retail store, online retailer, or reseller/distributor from which the product was purchased.

Front View




Sun Shield	Protect camera lens from direct exposure to the Sun.
Reset Button	Push and hold the reset button then power on the camera. Keep holding the reset button for more than 10 seconds to reset configuration to factory default.
Grounding Screw	Connects to electric ground.
JUEW	
Lock Ring	Loosen to adjust the camera position. Tighten to hold the camera position.
Ambient Light	Detects the brightness in the environment and enable
Sensor	day/night modes automatically.
IR LEDs	Infra-red LEDs for night vision.

Mounting Holes

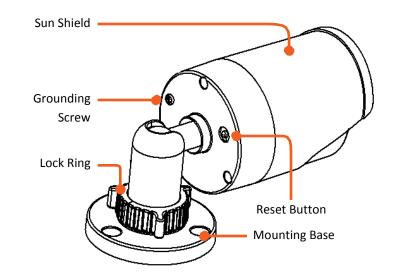

Connectors

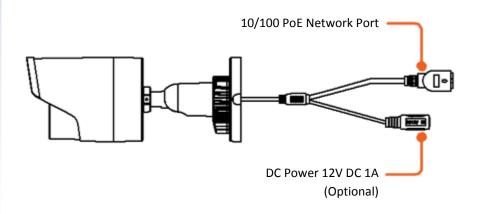

<u>Warnings</u>

Serious injury or death may be caused if any of these warnings are neglected. Follow these safety guards to prevent serious injury or death.

- If using the power adapter, please choose the power adapter that meets the safety extra low voltage (SELV) standard or IEC60950-1 and Limited Power Source standard.
- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the camera yourself. Disassembling the product will void the warranty and may cause harm or injury.
- To reduce the risk of fire or electrical shock, do not expose this product to rain or water.
- The installation should be done by a qualified service person and should conform to all construction and electric regulations and other local codes.

TV-IP310PI

Cautions

Injury or equipment damage may be caused if any of these cautions are neglected. Follow these precautions to prevent potential injury or material damage.

- Make sure the power supply voltage is correct before using the Camera.
- Do not drop the camera or subject to physical shock.
- Do not touch sensor modules with fingers. If cleaning is necessary, use a clean cloth with a bit of ethanol and wipe it gently. If the camera will not be used for an extended period of time, put on the lens cap to protect the sensor from dirt.
- Do not aim the camera lens at the strong light such as the Sun or an incandescent lamp. Strong light can damage the camera sensor.
- The sensor may be burned out by a laser beam, so when any laser equipment is being used, make sure that the surface of the sensor will not be exposed to the laser beam.
- Do not place the camera in extremely hot, cold temperatures (the operating temperature should be between -10°C to 60°C), dusty or damp environment, and do not expose it to high electromagnetic radiation.
- To avoid heat accumulation, good ventilation is required for a proper operating environment.
- Keep out of water and any liquid.
- While shipping, the camera should be packed in its original packing.

Installation Procedure

There are number of factors involved in a successful camera installation. Follow the suggested installation steps and go through the check lists. This guide will help you make your camera installation smoothly and easily.

- Plan for installation location, see page 6 (next paragraph)
- Setup Your Camera with CD, see page 7
- Hardware Installation, see page 10

Plan for installation location

Viewing angle

The TV-IP310PI is a bullet camera with a focused viewing angle (70° horizontal) that provides non-distorted and detailed images. Choose the location where has good angle to shoot the image you expect to see. The motion detection area should also be considered when installing the camera.

Weather Conditions

The TV-IP310PI is a small bullet camera, which fits most installations indoor and outdoor. The camera can work under a wide range of weather conditions. For severe weather conditions, a camera housing with temperature and moisture control is recommended. Using the camera in milder weather conditions will help extend the camera's product life and preserve the quality of the video image.

- **Moisture:** Avoid damp or moist environments whenever you can. The TV-IP310PI is an IP66 grade water proof camera, and it will work in moist environments. However, rain may affect the picture quality, especially at night, water may reflect the light from the infra-red illumination and degrade picture quality.
- **Temperature:** TV-IP310PI works within a specified temperature range. Areas with severe temperatures should be avoided when installing the camera. It's recommended that you use an enclosure with a heater and blower if you plan on using this camera outside of the specified temperature range.
- **Sunlight:** Avoid direct sun light exposure. Direct sun light will damage the image sensor. If sunlight is necessary for your viewing purposes, provide protection for the image sensor.
- Lighting: Consider installing your camera faces the same direction of the light sources. Shooting images with top-down position outdoor or next to the existing light source are good choices. Avoid the light source if it creates a shade that darkens the viewing area.

Setup Your Camera with CD


1. Insert the Installation CD-ROM into your computer's CD-ROM drive to initiate the Auto-Run program. Choose your preferred language and then click the **Install Camera**.



2. Write down the MAC Address of the camera.




- 3. Connect a PoE capable network cable to the camera's network port and then to a PoE switch and wait for the camera to boot up. Click **Next** when you are done.
 - * A power adapter (sold separately) can be used instead of PoE switch.

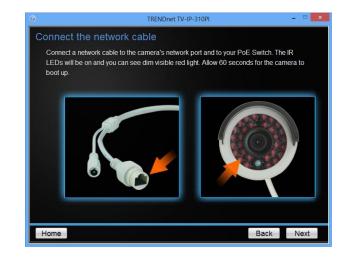


4. Wait while the utility is searches for the camera.



5. The installation wizard will list cameras found on your network. If only one camera is found, it will be selected by default. If you have more than one camera on the network, please choose the camera you wish to set up by identifying its MAC address. Select the camera and then click **Next.**

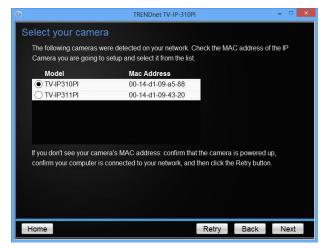

Select the DHCP option to assign IP address dynamically, or select Fixed
 IP to assign the camera an IP address, and then click Next.

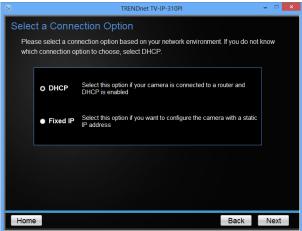

7. If you select **Fixed IP**, enter the IP address, subnet mask, default gateway, and DNS server address. Please make sure the IP address you are setting on the camera is in the same network of the computer that you are using. Click **Next**.

IP Address	192.168.10.150		
Subnet Mask	255.255.255.0		
Default Gateway	192.168.10.1		
primary DNS	192.168.10.1		
Secondary DNS	8.8.8.8	×	


TRENDnet User's Guide

TV-IP310PI

8. Enter a new password. The default password is **admin**. You are required to change the password from the default setting to prevent unauthorized access. Enter the default password: **admin** and enter the new passwords for a brand new installation. The password must be between 8 and 16 characters. (Alphanumeric: a-z, A-Z, 0-9, !, @, #, \$)

Note: This camera installation wizard is also good for finding the camera if it was setup with DHCP. The IP address may change dynamically with the DHCP setting. If you want to access your camera again and you don't know the IP address, you can run this camera installation wizard again. If you have already setup the password and want to keep the password unchanged, un-check the **Change Password** box and click next to get the link to access your camera.)

0		TRENDnet TV-IP-310PI – 🗆 🗙
Cha	nge password	
Υοι	u MUST change the default pass Enter the default password: Enter your new password: m 0-9)	
	Admin ID	admin
	Password	****
	Change Password	
	New password	•••••
	Confirm new password	•••••
Hom	ne	Back Next

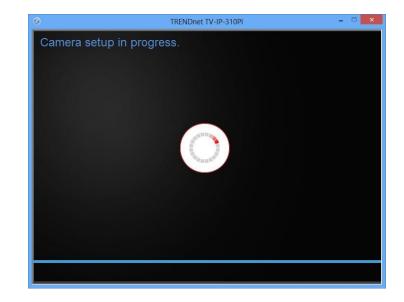

9. Click **here** to access to the camera's web page or click **Next** for mobile app installation.



10. Click **Finish** to exit the program or click **Home** to return to the main screen. You can also download a free app to view video on your mobile devices. Scan the QR code to find and install the TRENDnetVIEW app.





Night Vision

Hardware Installation

Cabling

It's recommended that the wiring the cable in your home or office by a professional. If you already have the cable deployed, make sure the cable and the connectors meet the category 5 Ethernet cable standards. At least 2 pairs of twisted lines are required for power and data. Poor cable quality may cause unexpected problems. Testing your cable or running a new cable is suggested for new camera installation.

Waterproof cap

The TV-IP310PI itself is IP66 grade water and dust proof. There is a set of network cable water proof caps that comes with the package as well. Run your cable going through the accessories, and then crimp the cable with an RJ45 module. Plug in the network cable and then tighten the waterproof cap to prevent water running into camera through the cable.




 \oplus

Mount your camera


Drill the screw holes and the cable hole if necessary with the drill template comes with the package.


 \oplus



 \oplus

Loosen the lock ring and then adjust the camera position. Tighten the lock ring when you setup the camera position.

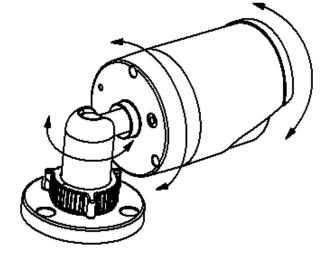

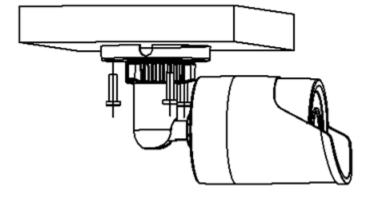

Access your Camera with the Web Browser

System Management and Default Settings

It is recommended that you install your camera with the CD that comes with the package and use accompanying TRENDnetVIEW Pro software (version 2.4.3 or later) for Windows computers. The software is included on the CD comes with the package. If you do not have the CD with you, you can go to http://www.TRENDnet.com/support enter the model number "TV-IP310PI" and download the software.

If you didn't go through the TV-IP310PI CD installation wizard or you have reset the TV-IP310PI to factory defaults by pressing and holding reset button while power on the camera and keep holding the button for over 10 seconds, your TV- IP310PI has following settings:

System Default	
Management	Dynamic assigned if there's a DHCP server on the
IP	network or self-assigned 192.168.10.30
Administrator	admin
name	
Administrator	admin
password	


If you want to access your camera directly instead of using software, you can follow the steps specified in this chapter to login to your camera. A web browser plug-in must be installed to watch video smoothly.

For **Windows** system, please go to the next paragraph.

For **OS X** system, please go directly to page 15

Logging-in to the Camera for the First Time (Windows)


 Open the web browser on your computer. In the address bar, enter the IP address you setup through the setup CD or 192.168.10.30. (If you have a DHCP server on your network, the IP address will be assigned dynamically. For example, if you have a home gateway on your network and you plug-in the camera on the same network, you can find the camera's IP address on your home gateway.), and then press Enter.

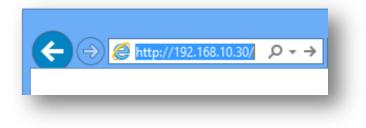

2. Enter the user name, **admin**, and the password you setup through the setup CD or the default password, **admin**, and then click **OK**.

	Windows Security	×
iexplore The server 192	.168.10.30 at TV-IP310PI requires a username and passwo	ord.
P	User name Password Remember my credentials	
	OK Cancel	

3. The camera management page will detect if you installed the camera video streaming plug-in or not. Click the link to download the plug-in from the TV-IP310PI camera.

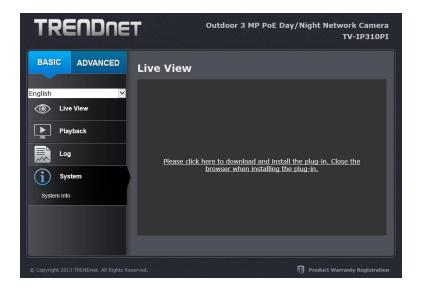


4. Download the plug-in to your computer and then and close your browser. Launch the plug-in installation to install the plug-in.




5. Permission request may show up depends on the Internet security settings on your computer. Click **More Info** and then **Run anyway** to install the plug- in.

Windows Smar at risk. More info	tScreen prevented an unrecognized app from starting. Running this app might put your PC
	ок
Windows	protected your PC
Windows Smart	Sprotected your PC
Windows Smart: at risk. Publisher: TREN	Screen prevented an unrecognized app from starting. Running this app might put your PC

6. Click **Next** to install the plug-in.

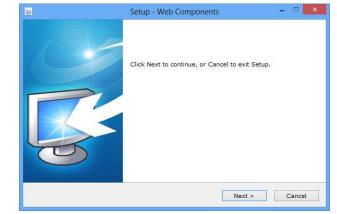

7. Click **Finish** to finish the installation.

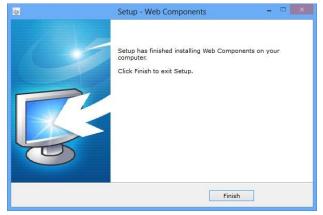

8. Open the browser and login again.




9. (Go to step 11 if you already changed your password with the setup CD). The TV-IP310PI will ask you to change your password from default setting. Please enter the new password twice and click **OK**. The password must be between 8 and 16 characters. (Alphanumeric: a-z, A-Z, 0-9, !, @, #, \$).



10. Enter the user name **admin** and new password again to start secured session.


iexplore The server 19	2.168.10.30 at TV-IP310PI requires a username and password
Р	User name Password
	Remember my credentials
	OK Cancel

11. The Live View page will show up and begin streaming video.

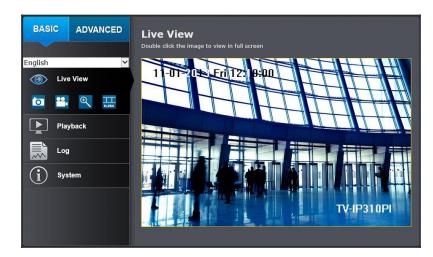

Logging-in to the Camera for the First Time (OS X)

1. Open the web browser on your computer. In the address bar, enter the IP address of the camera 192.168.10.30. (If you have a DHCP server on your network, the IP address will be assigned dynamically. For example, if you have a home gateway on your network and you plug-in the camera on the same network, then you can find the camera IP address on your home gateway), and then press Enter.



2. Enter the user name, **admin**, and the default password, **admin**, and then click **OK**.


ک	To view this page, you must log in to area "TV– IP310PI" on 192.168.10.30:80. Your login information will be sent securely. Name: admin		
	Password:	••••••	
	Remember this password in my keychain		
		Cancel Log In	

3. The camera management page will detect if you installed the camera video streaming plug-in or not. Click the link to download the plug-in from the TV-IP310PI camera.


Note: Internet connection is required to download the plug-in. If you do not have Internet access, you can find the plug-in on the CD comes with the package under **/Mac** folder.

BASIC ADVANCED	Live View Double click the image to view in full screen
English Clive View Clive View Playback	
Log î System	Please click here to download and install the plug-in. Close the browser when installing the plug-in.

4. Quit your browser completely by **command-Click** on the browser icon and then click **Quit** before installing the plug-in.

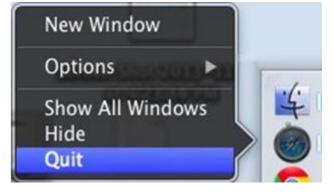

 Go to the Finder and navigate to the Download folder. Command-Click the WebComponents.pkg and then click Open. (If you are install the plug-in from the CD, just browse to /Mac folder and double click the WebComponents.pkg file.)

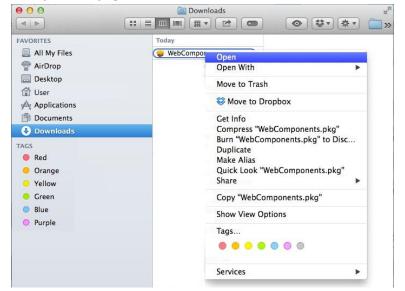

6. Click **Open** to start installation.




7. Click **Continue** to install the plug-in.






9. Use the default location and click **Install.**

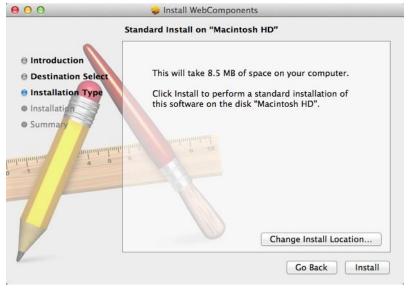

10. Enter your password and click Install Software

00 Install WebComponents Installer is trying to install new software. ⊖ Intre Type your password to allow this. uter. ⊖ Des 🖯 Inst n of Name: MAC User Insta Sum Password: ? Install Software Cancel Change Install Location... Go Back Install


11. Installation will process automatically.

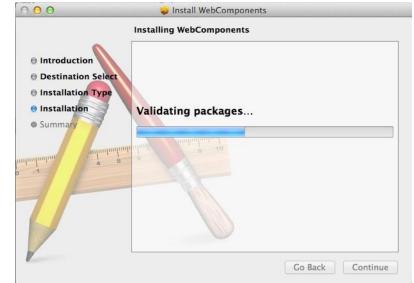

12. Click **Close** to exit the installation.



13. Open the browser and login again with the default IP 192.168.10.30 or the IP that was dynamically assigned by your router.



14. Enter the user name, **admin**, and the default password, **admin**, and then click **OK**.

ò	To view this page, you must log in to area "TV- IP310PI" on 192.168.10.30:80. Your login information will be sent securely. Name: admin		
	Password:	•••••	
	Remember this password in my keychain		
		Cancel Log In	

15. Click **Trust** (You'll have to do this again when your camera changes to a new IP address.)

	Do you want to trust the website "192.168.10.30" to use the "WebVideoPlugin" plug-in?
	You can manage which websites you trust to use this plug-in in the Security pane of Safari preferences.
?)	Trust


16. The TV-IP310PI will ask you to change your password from the default setting. Please enter the new password twice and click **OK**. The password must be between 8 and 16 characters. (Alphanumeric: a-z, A-Z, 0-9, !, @, #, \$).

PLEASE ENTER YOUR NEW ADMINISTRATOR PASSWORD			
User Name	admin		
Password	•••••		
Confirm	•••••		
		ОК	

17. Enter the user name **admin** and new password again to start secured session.

ک	To view this page, you must log in to area "TV– IP310PI" on 192.168.10.30:80. Your login information will be sent securely.	
	Name:	admin
	Password:	
	Rememb	per this password in my keychain
		Cancel Log In

18. The Live View page shows up and the video starts to stream.

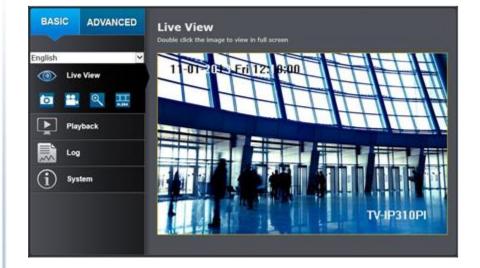

Live View

After you log-in into the camera management page, you'll see the Live View page.

English Deutsch Español Français Русский

Multi-Language Change your preferred language anytime.

🗿 Snapshot

Click this icon to take a video snapshot.

🔍 Zoom


Click once to enable zoom. When enabled, click and drag the area on the picture to zoom in. Right click to resume 100% zoom. Click the icon again to disable zoom. The zoom function works in full screen mode as well.

🖰 Recording

Click once to start recording. Click it again to stop recording. The status bar will indicate if it is in recording state or not.

H.264 H.JPEG Video Stream

TV-IP310PI has two video streams: H.264 and MJPEG. Switch to view the different video streams by clicking this icon.

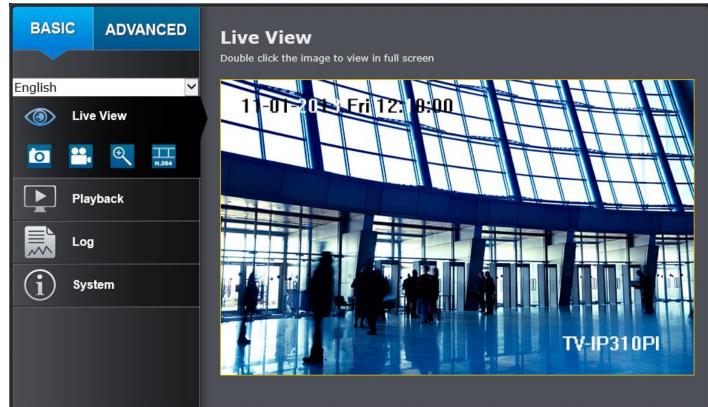

Full Screen Mode

Click the picture to view in full screen mode. Double click again or press escape key on your keyboard to exit full screen mode.

Status Bar

The status bar shows the status you are at, including enabled the zoom, recording video, and successfully taking a snapshot.

Where can I find saved files?

Videos and snapshots captured from Live View will save to your computer. See **Live View Settings** on page 29 for details.

10 11 12

Start Time

2013-11-11

Sun Mon Tue Wed Thu

5

6

BASIC ADVANCED

nalish

Live ViewPlayback

Log

Playback

F 4 1 1F

Playback works only if the NAS is available

<u>Playback</u>

You can playback the video recording on the network storage and download the video clip and snapshots to your local computer. (See **Network Storage** on page 50 to setup the storage.)

Search for video recordings

Click the date selection, and then choose a date as the date range of searching. Click **Search** to start searching.

F H

Fri Sat 1 2

8 9

2013

2.8

2013-11-06 07:25:46 2013-11-0<mark>5</mark> 07:26:22 4 10 8 14 14


Search

Set playback time

Time Line

There is a play back head in the center of the time line represented in a yellow vertical line. To look for a specific video recording, move the time line by clicking and dragging it. If the recording is short, zoom in by clicking button. Click c to zoom out the time scale. If you know the exact time of the day you are looking for, click then enter the time you want to playback.

Different types of recordings are identified differently. The scheduled recordings are marked in blue, and the recordings triggered by motion detection are marked in red.

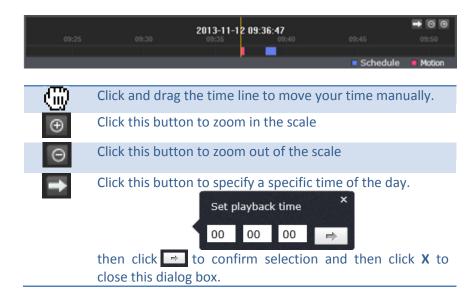

Playback

*

Use playback controls to play back the video recording.

•	Click this button to play the video.
11	Click this button to pause video playback.
	Click this button to stop playback.
₩	Click this button increase playback speed*.
	Click this button decrease playback speed*.
	Click to playback video frame by frame. Click again for the next frame
Note: There	are 5 steps of playback speed you can choose from: 1/4, 1/2, 1, 2, and

4 times of original speed.

Slice images from video playback

You can take snapshots from playback video or make new video clips from the video you are playing back.



Click this button to enable zoom. Then click and drag on the video to define the area you want to zoom in. Click again to get back to 100% zoom.
Double click to show video in full screen and press ESC on keyboard to exit full screen mode.
Click this button to disable zoom.
Click this button to take a snapshot of current playback.
Click this button to start clipping a video from playback.
Click this button to stop clipping a video from playback.


Where can I find saved files?

Videos and snapshots captured from Playback will be saved to your computer. See *Live View Settings* on page 29 for details.

Download sections of video

To save complete video sections or snapshots, you can download the files directly.





	No.	File Name	Start Time	End Time	File Size	Progress
~	1	ch01_0800000000000401	2013-11-06 07:26:02	2013-11-06 07:26:22	2 MB	Downloaded
	2	ch01_080000000000000501	2013-11-06 07:37:00	2013-11-06 07:37:20	1 MB	
						wnload
			Total 2 I	tems First Page Prev Page	1/1 Next Pa	ge Last Page

Check the time of the recording, select the videos you want to download, and then click **Download**.

Download snapshots

Click 🗾 button to list snapshots to download

No.	File Name	File Date	File Size	Progress	
1	ch00 08000000000301901		107 KB		
2	ch00_08000000000302001		65 KB		
	ch00_0800000000302101		57 KB		Motion 🗸
	ch00_0800000000302201	2013-11-12 09:28:52	52 KB		
	ch00_0800000000302301	2013-11-12 09:28:53	52 KB		Start Time
	ch00_0800000000302401	2013-11-12 09:28:54	53 KB		
	ch00_0800000000302501	2013-11-12 09:28:55	53 KB		2013-11-12 00:00:00
	ch00_0800000000302601	2013-11-12 09:28:56	53 KB		End Time
	ch00_0800000000302701		53 KB		
	ch00_0800000000302801	2013-11-12 09:36:54	181 KB		2013-11-12 23:59:59
11	ch00_0800000000302901		58 KB		
12	ch00_08000000000303001		54 KB		Search
13	ch00_0800000000303101		52 KB		Search
14	ch00_0800000000303201		52 KB		
15	ch00_0800000000303301		52 KB		Download
16	ch00_0800000000303401		52 KB		
17	ch00_0800000000303501		52 KB		
18	ch00_0800000000303601		52 KB		
19	ch00_0800000000303701		54 KB		
20	ch00_0800000000303801		55 KB		
21	ch00_0800000000303901		52 KB		
22	ch00_0800000000304001		52 KB		
23	ch00_0800000000304101		53 KB		
24	ch00_0800000000304201		53 KB		
25	ch00_0800000000304301		52 KB		
26 27	ch00_0800000000304401		53 KB		
27	ch00_0800000000304501		53 KB		
	Total 27	Items First Page Prev	<u>/ Page 1/1 N</u>	ext Page Last Page	

Schedule Motion


Select the type of event that triggered the snapshots. Choose the Start Time and End Time. Then, click **Search** to find the snapshot list. Check the time of the snapshot, and then select the snapshots you want to download, then click **Download**.

Where can I find saved files?

Videos and snapshots captured from Playback will be saved to your computer. See *Live View Settings* on page 29 for details.

Log

The log of the TV-IP310PI will be saved on the network storage. You can search the relevant records and save to your local computer. (See **Network Storage** on page 50 to setup the storage.)

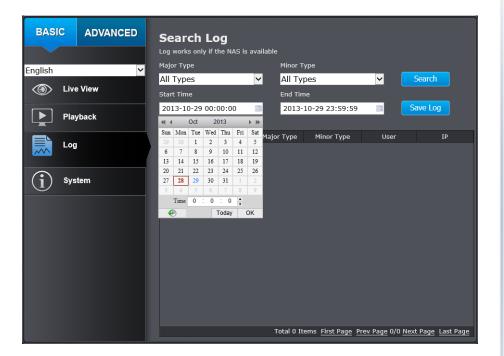

Search for logs

Click the type of log and then the Start Time and End Time. Click **Search** to start searching.

Total 129 Items First Page Prev Page 1/2 Next Page Last Page

Click **First Page**, **Prev Page**, **Next Page**, and **Last Page** to show the logs. Click **Save Log** to save the logs to your computer.

Where can I find saved files?

Videos and snapshots captured from Playback will be saved to your computer. See *Live View Settings* on page 29 for details.

System Information

System Information page shows the TV-IP310PI's basic information. Click System then click System Info to show the page.

BASIC ADVANCED	System Information
English 🗸	BASIC INFORMATION
Live View	Device Name : TV-IP310PI
	Firmware Version : V5.0.0 131028
Playback	Mac Address : 8c:e7:48:df:c1:05
Log	System Time : 2013-10-30T04:30:07
System	NETWORK INFORMATION
	IP Address : 10.10.10.1
System Info	Subnet Mask : 255.255.255.0
	Default Gateway : 10.10.10.254
	Primary DNS : 10.10.10.254
	Secondary DNS :


Basic Information	
Device Name:	Human readable device name for easy identification.
Firmware Version:	Firmware version
MAC Address:	The MAC address of Ethernet Interface
System Time:	The system time setup in the camera. Keeping this time correct is important for recording, scheduled control and logging accurately.
Device Name:	Human readable device name for easy identification.

Network Informatio	Network Information		
IP Address:	IP address of the TV-IP310PI		
Subnet Mask:	Network range of IP address		
Default Gateway:	The default route going from the TV-IP310PI subnet.		
Primary DNS:	Primary DNS server address		
Secondary DNS:	Secondary DNS server address		

System Configuration

Device Settings

Setup your camera name and location for easy identification. This camera name will also be recognized by other network camera software as the name of this camera. OSD, On Screen Display, camera name is referring to this setting as well.

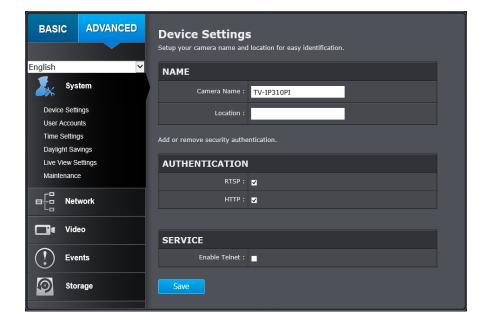

Ν	а	m	es	
	~		~ ~	

Camera Name:Name of the camera. The camera name setup
here can be discovered by other network camera
software and OSD, On Screen Display. The default
camera name is the model number: TV-IP310PILocation:Label where you installed this camera for reference

Authentic	ation
RTSP:	TV-IP310PI's video stream can be accessed with RTSP, Real Time Streaming Protocol. Only the administrator and users can view this video stream Un-checking this box will allow everyone access to this video stream without authentication. Default: Checked.
HTTP:	TV-IP310PI can be accessed via password protected web management interface. Un-checking this box will allow anyone to access this camera and change its settings.

Service

Enable TV-IP310PI embedded Telnet service for multiple camera **Telnet:** control for system developer. Default: disabled.

User Accounts

You can setup up to 16 user accounts to access the camera's video stream with a web browser or real time video stream (RTSP). Only one administrator account can be setup to configure the TV-IP310PI and cannot be deleted.

BASIC ADVANCED	User Acco	unts Modify Delete	
System	NO.	USER NAME	LEVEL
Device Settings		admin	Administrator
User Accounts	2	user	User
Time Settings	u		
Daylight Savings			
Live View Settings			
Maintenance			

User Accounts


- Add: Click Add button to add one user account
- **Modify:** To change a user's name and password, highlight the user by clicking on it. Then, click **Modify** button. You can change the user's name and password. You can also change the administrator's password here. But, the administrator's name is fixed, you cannot change that.

MODIFY USER	
User Name	user X
Password	•••••
Confirm	•••••
	OK Cancel

Click **OK** to save the changes.


Time Settings

The accuracy of the system clock is important for scheduling and accurate logging. You can synchronize the system time with your computer, or automatically check the time accuracy with a network time server (NTP server).

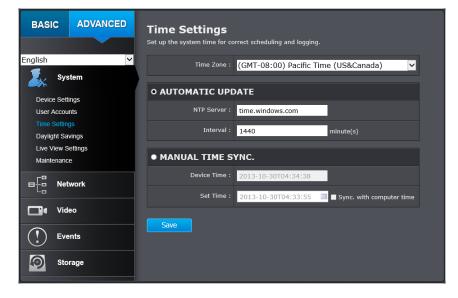

Automatic Update		
NTP	Specify a time server (NTP server) to synchronize with.	
Server:	(e.g. pool.ntp.org)	
Interval:	The time interval that the TV-IP310PI will synchronize the time with NTP server. Default: 1440 minutes (24 hours)	

TRENDnet User's Guide

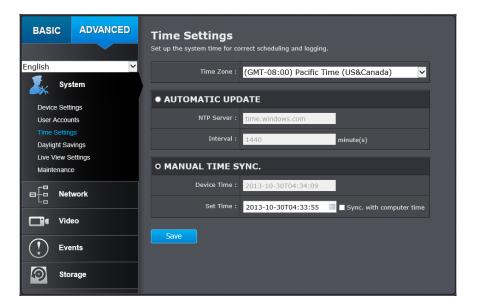

Manual Time Sync	
Device Time:	The system time of this camera.
Set Time:	Click the calendar icon and manually select the date. Check the Sync. with computer time to copy the time from your computer.

Click Save to save the changes

Daylight Savings

Setup daylight savings.

BASIC ADVANCED	Daylight Savings Set daylight savings time.
English 🗸	Enable DST : 💆
System	Start Time : Apr 🗸 First 🗸 Sun 🔽 02 🗹 o'clock
Device Settings	End Time : Oct 🔽 Last 🔽 Sun 🔽 02 🔽 o'clock
User Accounts Time Settings	DST Bias : 60min v
Daylight Savings Live View Settings Maintenance	Save

Automatic Update		
Enable DST:	Check this box if your time zone has daylight savings.	
Start Time:	Enter the date that daylight savings starts	
End Time:	Enter the date that daylight savings ends	
DST Bias	Enter how much time the daylight saving adjusted by daylight savings.	

TRENDnet User's Guide

Live View Settings

Setup the live view video quality, file size and file saving directories.

ADVANCED BASIC **Live View Settings** Live View Parameters English Live View Buffer 🔘 Low Mediur 🔘 High System Device Settings **Record File Settings** User Accounts 256M Record File Size • 512M 🕛 1G Time Settings Daylight Savings Save record files to C:\Users\vincent\TRENDnet\RecordFiles Browse Live View Settings Save downloaded files to C:\Users\vincent\TRENDnet\DownloadF Maintenance 티님 Network Picture and Clip Settings C:\Users\vincent\TRENDnet\SnapshotFi Save snapshots in live view to Video Save snapshots when playback to C:\Users\vincent\TRENDnet\PlaybackPi Events Save clips to C:\Users\vincent\TRENDnet\PlaybackFil Browse 0 Storage Save

Live View Parameters


Live View Configure the buffer size for live view video stream.Buffer: With low buffer size setting, you can get real-time video stream, but the video may be stop and go if the network is congested. With high buffer setting, you can have smooth video streaming, but the video is delayed from the time happening. Medium size can have moderate video stream smoothness and time delay.

Record File Settin	Record File Settings	
Record file size:	This size of live view video recording. You can choose 256MB, 512MB, or 1GB a file. Smaller file size is good for many short recordings.	
Save record files to:	By default, files will be saved under the folder with your user name, under the subdirectory TRENDnet/RecordFiles. Click Browse and then choose a new destination if you want to save the file somewhere else.	
Save downloaded files to:	By default, files will be saved under the folder with your user name, under the subdirectory TRENDnet/DownloadFiles. Click Browse and then choose a new destination if you want to save the file somewhere else.	

Picture and Clip S	ettings
Save snapshots	By default, files will be saved under the folder with
in	your user name, under the subdirectory
live view to:	TRENDnet/SnapshotFiles. Click Browse and then
	choose a new destination if you want to save the file
	somewhere else.
Save snapshots	By default, files will be saved under the folder with
when playback	your user name, under the subdirectory
to:	TRENDnet/PlaybackPics. Click Browse and then
	choose a new destination if you want to save the file
	somewhere else.
Save clips to:	By default, files will be saved under the folder with
	your user name, under the subdirectory
	TRENDnet/PlaybackFiles. Click Browse and then
	choose a new destination if you want to save the file
	somewhere else.

Maintenance

You can restart, load camera settings and upgrade the camera firmware on this page.

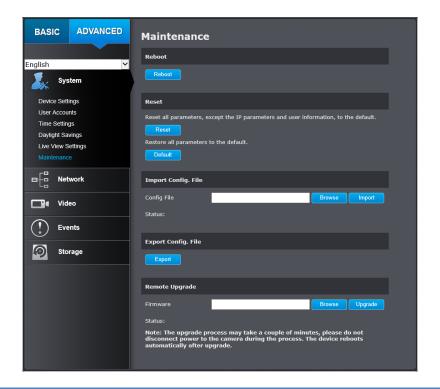

Reboot

Reboot: Click this button to reboot this camera.

Reset: Reset all camera parameters, except the IP parameters and user information.

Default: Load complete factory default to the camera.

Inport Config. File

Config File: To load previously saved settings, click **Browse** to find the configuration file and then click **Import**.

Status: Shows the status in loading configuration file.

Export Config. File

Export: Click Export to download configuration file. The file will be downloaded to the Download folder by default.

Remote Upgrade

Firmware:	Click Browse to find the latest firmware and then click
	Upgrade.

Status: Shows the status in firmware upgrade.

TRENDnet may periodically release firmware upgrades that might add features or fix problems associated with your TRENDnet model and version. To find out if there is a firmware upgrade available for your device, please check your TRENDnet model and version using the link.

http://www.trendnet.com/downloads/

- 1. If a firmware upgrade is available, download the firmware to your computer.
- 2. Unzip the file to a folder on your computer.
- 3. Read the firmware upgrade instruction for specific version update information.
- 4. Log into the TV-IP310PI.
- 5. Getting to this Maintenance page to upgrade firmware.

Network Settings

TCP/IP

Setup your basic IPv4 and IPv6 network settings on this page.

BASIC	ADVANCED	TCP/IP Networ Setup your camera to get n	rk Settings etwork address manually or dynamically.
English	English NETWORK INTERFACE		
Syst	em	Mac Address :	8c:e7:48:df:c1:05
	vork	Duplex and Speed :	Auto
TCP/IP		MTU :	1500
Port		Primary DNS :	10.10.254
DDNS PPP₀E (AD	ISL)	Secondary DNS :	
SNMP 802.1x		IPV4	
IP Address	Filter	DHCP :	0
QoS		IPv4 Address :	10.10.10.1
UPnP		Subnet Mask :	255.255.255.0
Vide	0	Default Gateway :	10.10.10.254
Ever	nts	Multicast Address :	
Stor	age	IPV6	
		IPv6 Mode :	Route Advertisement View Rout
		IPv6 Address :	fe80::8ee7:48ff:fedf:c105
		Prefix Length :	64
		Default Gateway :	
		Save	

Network Interface	
MAC Address:	Click this button to reboot this camera.
Duplex and Speed:	Choose one of the Ethernet duplex and speed to match your network. Default: auto.
MTU:	Maximum transmission unit. The maximum field size in the Ethernet packet.
Primary DNS:	Enter your first IPv4 or IPv6 DNS server address
Secondary DNS:	Enter your second IPv4 or IPv6 DNS server address

IPv4	
DHCP: Check this box if the IP address is assigned by	
	server.
IPv4 Address:	The IPv4 dynamic or static address
Subnet Mask:	Network range of the subnet
Default Gateway:	The default route going further from TV-IP310PI IPv4 subnet
Multicast Address:	Multicast address for video streaming.

IPv6		
IPv6 Mode:	Choose Manual, DHCP, or Route Advertisement. Click View Route Advertisement to find a route advertisement.	
IPv6 Address:	IPv6 address of TV-IP310PI	
Prefix Length:	Length of network prefix	
	The default route going further from TV-IP310PI IPv6 subnet	

<u>Port</u>

You can change the service port numbers of TV-IP310PI and enable/disable RTSP or HTTPS services.

BASIC ADVANCED	Service Ports Enable/ disable service ports. Change service port numbers.
English v	PORT NUMBERS
System	HTTP Port : 80
	RTSP Port: 🛛 554
TCP/IP	HTTPS Port : 🔽 443
Port DDNS PPPoE (ADSL) SNMP 802.1x IP Address Filter QoS UPnP	Save

Port Numbers

HTTP Port:	The default web access port. You can change the port number. However, you cannot disable the web service. The default port number is 80.
RTSP Port:	The Real-Time Streaming Protocol port for video streaming. You can change the port number or disable the service by uncheck the box. The default port number is 554.
HTTPS Port:	The secured web service port. You can change the port number, or you can disable the service by uncheck the box. The default port number is 443.

Click Save to save the changes

<u>DDNS</u>

Dynamic Domain Name Service, DDNS, allows you to find your camera from the Internet with an easy to remember domain name.

BASIC ADVANCED	Dynamic Domain Name Service (DDNS) Easier locate your camera by setting up dynamic domain name service.
English v	Enable DDNS : 🕎
System	DDNS Type : NO-IP
	Server Address :
TCP/IP	Domain :
Port DDNS	User Name :
PPPoE (ADSL)	Password :
SNMP 802.1x	Confirm :
IP Address Filter	
QoS	Save
UPnP	

DDNS					
Enable DDNS:	Check this box to enable DDNS Service.				
DDNS Type: NO-IP IPServer DynDNS NO-IP HiDDNS	Select a DDNS service provider.				
Server Address:	Enter the DDNS server address.				
Domain:	Enter your registered domain/host name on selected DDNS service.				
User Name:	Enter the account name.				
Password:	Enter the password.				
Confirm:	Enter the password again.				

<u>PPPoE</u>

Setup PPPoE (ADSL) connection to connect your camera with your ISP, Internet Service Provider.

BASIC ADVANCED	PPPOE (ADSL) Connect to the Internet with PPPoE.
English 🗸	Enable PPPoE : 😈
System	Dynamic IP : 0.0.0.0
	User Name :
TCP/IP	Password :
Port	Confirm :
DDNS PPPoe (ADSL) SNMP	Save
802.1x IP Address Filter	
QoS	
UPnP	

PPPoE (ADSL)

Enable PPPoE:	Check this box to enable PPPoE connection.
Dynamic IP:	The IP address assigned by ISP
User Name:	Enter the account name.
Password:	Enter the password.
Confirm:	Enter the password again.

Click Save to save the changes

<u>SNMP</u>

SNMP Settings allows you to assign the contact details, location, community name and trap settings of SNMP. This is a networking management protocol used to monitor network-attached devices. SNMP allows messages (called protocol data units) to be sent to various parts of a network. Upon receiving these messages, SNMP compatible devices (called agents) return data stored in their Management Information Bases.

BASIC ADVANCED	Simple Network Management
	SNMP V1/V2
English v	Enable SNMPv1 :
System	Enable SNMP v2c :
■ - E Network	Read SNMP Community : public
ТСРЛР	Write SNMP Community : private
Port DDNS	Trap Address :
PPPoE (ADSL)	Trap Port : 162
802.1x	Trap Community : public
IP Address Filter QoS	SNMP V3
UPnP	Enable SNMPv3 :
Video	Read UserName :
Events	Security Level: Authentication and Pr
\odot	Authentication Algorithm : O MD5 • SHA
Storage	Authentication Password :
	Private-key Algorithm : O DES OAES
	Private-key password :
	Write UserName :
	Security Level: Authentication and Pr
	Authentication Algorithm : O MD5 O SHA
	Authentication Password :
	Private-key Algorithm : O DES CAES
	Private-key password :
	SNMP OTHER SETTINGS
	SNMP Port : 161
	Save

SNMP V1/V2	
Enable SNMPv1:	Check this box to enable SNMP v1 management.
Enable SNMPv2c:	Check this box to enable SNMP v2c management.
Read SNMP	Specify the password to access the SNMP
Community:	community for read only access.
Write SNMP	Specify the password for access to the SNMP
Community:	community with read/write access.
Trap Address:	Specify the IP address for the SNMP trap
	community.
Trap Port:	Specify the port number for the SNMP trap
	community.
Trap Community:	Specify the name of SNMP trap community.

SNMP V3	
Enable SNMPv3:	Check this box to enable SNMP v3 management.
Read User Name:	SNMP v3 member user name.
Security Level:	Choose one of the security levels. Authentication and Privacy Authentication only Privacy only
Authentication Algorithm:	Choose the authentication method to verify the source of information: MD5 or SHA.
Authentication Password:	Specify the authentication password between 8 to 32 letters.
Private-key Algorithm:	Choose the privacy key to encrypt SNMP messages: DES or AES.
Private-key Password:	Specify the privacy key between 8 to 32 letters.
Write User Name:	SNMP v3 manager user name.
Security Level:	Choose one of the security levels.

	Authentication and Privacy Authentication only Privacy only
Authentication Algorithm:	Choose the authentication method to verify the source of information: MD5 or SHA.
Authentication Password:	Specify the authentication password between 8 to 32 letters.
Private-key Algorithm:	Choose the privacy key to encrypt SNMP messages: DES or AES.
Private-key Password:	Specify the privacy key between 8 to 32 letters.

SNMP Other Settings

SNMP Port: SNMP service port number.

TRENDnet User's Guide

<u>802.1X</u>

Setup 802.1X for remote authentication service.

BASIC ADVANCED	802.1X Authentication Setup 802.1x Remote Authentication Services
English	Enable IEEE 802.1X :
System	EAPOL version : 1
■ E Network	User Name :
ТСРЛР	Password :
Port DDNS	Confirm :
PPPoE (ADSL) SNMP 802.1X IP Address Filter QoS UPnP	Save

802.1X Authenticat	ion
Enable IEEE	Check this box to enable 802.1X authentication
802.1X:	service.
EAPOL version:	Extensible Authentication Protocol (EAP) over LAN (EAPoL). Choose version 1 or 2. This version number has to match to your 802.1X service EAPOL version.
User Name:	Enter the account name.
Password:	Enter the password.
Confirm:	Enter the password again.

Click **Save** to save the changes

IP Address Filter


Set up a list of clients allow only the clients on the list to access this camera or to reject clients on the list from access this camera.

BASIC ADVANCE	IP Address Filter	IP Address Filter				
	Enable IP Address Filter : 🚽	1				
nglish System	IP Address Filter Type :	orbidden	~			
E Network	Add Modify	Delete	Clear			
ТСР/ІР	NO.		IP			
Port						
DDNS	Save					
PPPoE (ADSL)						
SNMP						
802.1x						
QoS						
UPnP						

IP Address Filter	
Enable IP	Check this box to enable IP address filtering service.
Address Filter:	
IP Address Filter Type:	Choose Forbidden to ban the listed IP addresses or Allowed to allow listed host to access this camera.
Add:	Click Add to add a user account
Modify:	To modify an entry on the list, highlight the entry by clicking on it. Then, click the Modify button. Modify IP Address IP Address ID Address
Delete:	To delete an entry on the list, highlight the entry by clicking on it. Then, click Delete
Clear:	To clear all entries, click Clear

Quality of Service (QoS)

Setup traffic prioritization tags the video packets to go through network switches and routers with assigned priority. You can set the Differentiated Services Code Point (DSCP) bits on outgoing data streams. The QoS capable network device will forward different data in different priorities. The meaning of the value is different in different DiffServ domains. Consult your network manager for the setup details.

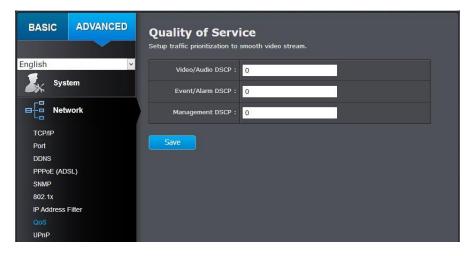

IP Address Filter	
Video/Audio DSCP:	Enter Video/Audio DSCP. Default: 0.
Event/Alarm DSCP:	Enter Event/Alarm DSCP. Default: 0.
Management DSCP:	Enter Management DSCP. Default: 0.

Click Save to save the changes

<u>UPnP</u>

Universal Plug-and-Play is a device discovery protocol set. It allows your camera to easily be found, for example, on a Windows operation system.


UPnP	
Enable UPnP:	Check this box to enable UPnP connection.
Friendly Name:	The name that will be appeared when searched.

Port Mapping	
Enable Port Mapping:	Check this box to enable UPnP connection.
Port Mapping Mode:	Choose Manual or Auto port mapping.
External Port:	Choose the port number for mapping.

Video Settings

Video Format

Adjust the format of video.

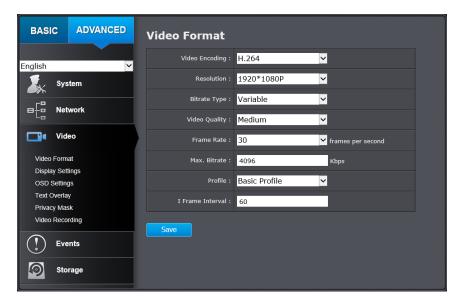

Video Encoding: H.264 MJPEG Choose the video stream you want to modify. H.264 and MJPEG videos are always streaming and can be configured separately.

Resolution:

H.264MJPEG1280*720P320*2401920*1080P352*2402048*1536704*480


Bitrate Type: Choose between variable bit rate or constant bit rate for video compression. The default is variable rate.

Video Quality:	Choose the video quality. The default is medium quality.
Frame Rate:	Choose the capturing frame rate. The default value is 30 frames per second. Reduce the frame rate to reduce the capture file size.
Max. Bitrate:	Choose the maximum video sampling bit rate. Default: 4096
I Frame Interval	An I Frame is a frame that records a complete picture. Frames between I frames, (P frame or B frame) only records the image differences between two frames. Choose the I Frame Interval here. The default is 60.

TV-IP310PI

Display Settings

Adjust video image quality, lightness, and color settings here.

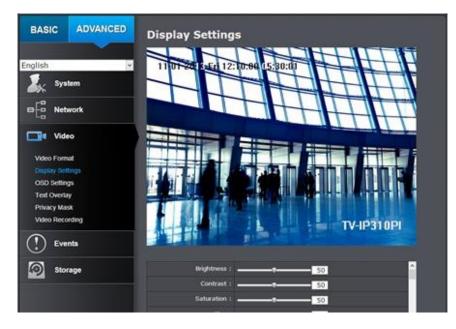

Brightness:	Use the slider or enter a number (0-100) to adjust the image brightness. Default: 50
Contrast:	Use the slider or enter a number (0-100) to adjust the image contrast. Default: 50
Saturation:	Use the slider or enter a number (0-100) to adjust the color saturation. The greater number means the color will be more saturated. Default: 50
Hue:	Use the slider or enter a number (0-100) to adjust the color shade. Default: 50
Sharpness:	Use the slider or enter a number (0-100) to adjust the image sharpness. Default: 50

Brightness :	50
Contrast :	
Contrast :	50
Saturation :	50
Hue :	5 0
Sharpness :	<u>50</u>
Smart IR :	Enable 🗸
Max. Exposure Time :	1/30 ¥
Video Standard :	60hz 👻
Day/Night Switch :	Auto 👻
Sensitivity :	Normal 🗸
Switch Time :	 5
Mirror :	Default 🗸
D-WDR :	Enabled 🗸
D-WDR Level :	2 0
White Balance :	Automatic 🗸
Digital Noise Reduction :	Normal Mode
Noise Reduction Level :	
Reset	

Light sensitivities							
Smart IR:	Smart IR can adjust the strength of infrared lights at night depending on the distance of an object to maintain the maximum IR light distance and while maintaining a clear picture when object is close by. Default: On.						
Max. Exposure Time:	1/3 1/6Adjust this value for exposure time for1/12 (1/12each picture. You can choose a value1/60 1/120between 1/3 second to 1/100,0001/250 1/250 1/500second. The default value is 1/30 second1/750 1/1000exposure time for each picture.1/2000 1/4000 1/1000001/10000						
Video Standard:	This is the base frequency for the video refresh rate. It is recommended to set to the same frequency of your local video standard (NTSC: 60, PAL: 50). Default: 60Hz.						
Day/Night Switch:	Day Night AutoChoose whether you want the camera to be set to the day mode (color video) or night mode (IR enhanced black/white video). You can manually set it to day mode or night mode, adjust by lighting (Auto), or pre-define schedule.						


Auto:

Sensitivity: The light sensor sensitivity. **Switch Time:** The time delayed to switch between

modes. Longer switch time can prevent unnecessary mode flipping if an object is blocking the light source temporarily. Range: 5-120 seconds, default: 5 seconds.

Schedule:

Use quick selection or enter the time down below. Click **OK** to confirm the time you want to set.



Start Time: The start time for day mode. **Stop Time:** The start time for day mode.

Position adjustments

Mirror:	Horizontal Vertical Horizontal/Vertical Default	
	Choose horizontal, vertical or bo	oth to adapt to the
	physical position of installation.	

Image adjustments

Back Light	Back light comp	pensation: Setup a	fixed light source
Compensation	position to com	pensate and adjust	the image in the
and	dark.		
Digital Wide-	Choose the area	that you want to er	nhance (dark area,
Dynamic-Range:	not light source)		
	Note: By default, t	the D-WDR is enabled.	Please disable D-
	WDR to set up bac	ck light compensation.	
	D-WDR:	Disabled	~
	Backlight Control :	Close	v

D-WDR: Digital Wide Dynamic Range compensates for the dark area dynamically.

• **D-WDR Level:** The level of compensation. Range: 0-100%, default: 20%.

White Balance:

Choose a color

temperature as the white color and compensate the color on the whole image.

Digital Noise Choose the mode of noise reduction. **Reduction:**

Automat

Locked

Normal Mode

Incandescent Lamp(3000K)

Warm Light Lamp(4000K)

Natural Light(5500K) Fluorescent Lamp(6500K)

Noise Reduction Level: Adjust the effect of digital noise reduction. Range: 0-100%, default : 100%


Expert Mode

Space DNR Level: Adjust the special digital noise reduction with adjacent pixels. Change the range (0-100%) to change the adjacency effect, default : 50% **Time DNR Level:** Adjust the 3D digital noise reduction. Compare and reduce noise between video frames. Range: 0-100%, default : 100%

Click **Reset** to reset the display adjustments

On Screen Display Settings

Display the camera name and the time the video is shooting on the screen

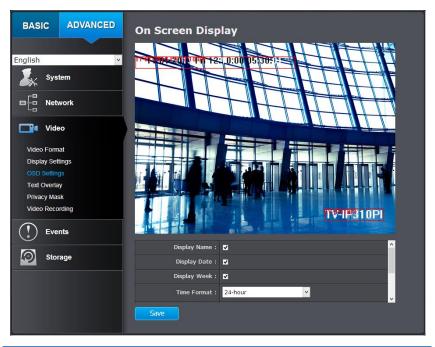


Display	Check this box to display the product name that
Name:	was setup in the device settings (refer to page 26
	Device Settings to change the device name.)
Display Date:	Check this box to display system time.
Display Week:	Check this box to display time of the week.
Time Format:	Select 12 or 24-hour time format.
Date Format:	Select the date format
Display Mode:	Choose how the text will show on the screen.
OSD Size:	Select the text size from 16 to 64 or adjusted by screen size automatically.

Move the red box to position the text. Click **Save** to save the changes.

Text Overlay

Display extra information on the screen over the image.

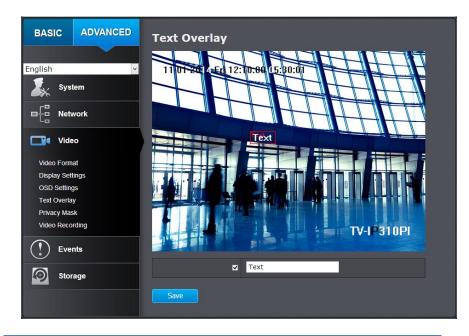


Check Box: Check this box to enable text overlay.

Text Field: Enter the text you want to display. You can enter your local language if you want. The text field allows maximum 44 English letters or 20 non-English characters.

Move the red box to position the text. Click **Save** to save the changes

Privacy Mask

Create a masking area to keep your privacy. You can create up to four independent masking areas by clicking and dragging on the screen.

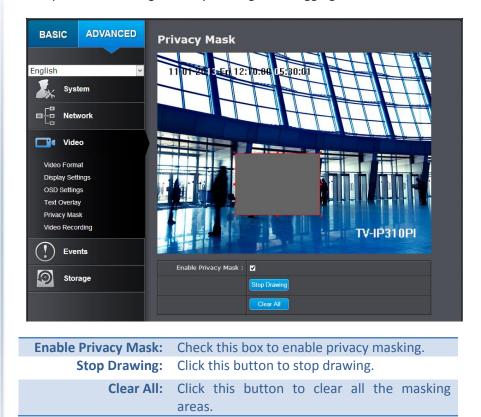

Video Recording

BASIC	ADVANCED	Vid	eo	Re	ec	or	dir	ng														
English	×	Pre-re	ecord				5s	;					~									
Syst		Post-	recor				5s	;					۷									
■ 		Overv	vrite				Ye	es					~									
Uide	0	En En	able f	Reco	ord	Sch	edule											Ed	it			
Video Forma			0	2		4	6	8	10	1	2	14	16	1	8	20	2	22	24	 +	Contin Motior	
Display Setti OSD Setting	-	Mon									1			ł					I		Motior	
Text Overlay		Tue Wed									1	1			1				1			
Privacy Mas Video Recor		Thu									-		1	-	1				+			
() Ever	nts	Fri Sat													1							
Stora	age	Sun	-					1			1		1	ł	-			ł	1			
		S	ave																			
		Si	ive																			

Pre-record:	Recording time before trigger event.
Post-record:	Recording time after trigger event.
Overwrite:	Select Yes to allow older recordings to be overwritten.
	Check this box and then click Save to enable video recording.

Click **Save** to save the changes

Edit: Click **Edit** to edit the recording schedule. The Edit Schedule window will pop up.


⊖All E ⊛Cus	Day Continuous tomize	5		
Period	Start Time	End Time	Record Type	
1	00:00	00: 00	Continuous	
2	00:00	00:00	Continuous	•
3	00:00	00:00	Continuous	
4	00:00	00:00	Continuous	•
5	00:00	00:00	Continuous	•
6	00:00	00:00	Continuous	•
7	00:00	00:00	Continuous	•
8	00: 00	00:00	Continuous	•

- 1. Select day of the week you want to edit.
- 2. Select **All Day** or **Customized** schedule of the day.
- 3. Set the time period and the event you want to trigger the video recording **continuous** (always recording) or **motion detection**.
- 4. Click **Select All** or the weekday you want to have the same schedule on different day.
- Click another day of the week by clicking on its tab to set the next schedule. Click
 OK when you have finished your settings.

Events

Motion Detection

Set up how the motion detection event will be triggered and what actions will be triggered.

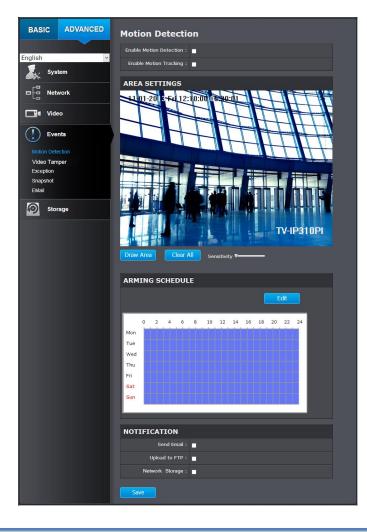

Enable Check this box to enable motion detection. Click **Save Motion** to save the choice.

Detection:

Enable Check this box to enable motion tracking. Motion

Motion tracking is a dynamic display that shows the current Tracking: status of motion detection. The motion tracking is displayed with grids in green. The grid area represents the camera motion is happening. Click Save to save the choices.



Draw Area: Click Draw Area button to start drawing. Click and drag on the area you want to set up the motion detection. You can draw up to 8 different areas. Click Stop Drawing to stop drawing motion detection areas.

The red grids represent the motion detection area.



Sensitivity:Move the slider to adjust detection sensitivity.Clear All:Click this button to clear all the set up areas.

Arming Schedule

Edit: Click Edit to edit the recording schedule. The Edit Schedule window will pop up.

Mon OAll E	Tue Wed Thu Fri Day Continuous	Sat Sun	
OCus	tomize		
Period	Start Time	End Time	Record Type
1	00: 00	00:00	Continuous
2	00:00	00:00	Continuous
3	00:00	00:00	Continuous
4	00: 00	00:00	Continuous
5	00:00	00:00	Continuous
6	00: 00	00:00	Continuous
7	00: 00	00:00	Continuous
8	00: 00	00:00	Continuous
Copy to	Week 🖂 Select All		


- 1. Select day of the week you want to edit.
- 2. Select **All Day** or **Customized** schedule of the day.
- 3. Set the time period and the event you want to trigger the video recording **continuous** (always recording) or **motion detection**.
- 4. Click **Select All** or the weekday you want to have the same schedule on different day.
- Click another day of the week by clicking on its tab to set the next schedule. Click OK when you have finished your settings.

Notification	
Send Email:	Check this box to send an e-mail notification when
	motion is detected.
Network	Check this box to record video to network storage
Storage:	when motion is detected.
Upload to FTP:	Check this box to send snapshots to an FTP server
	when motion is detected.

Click Save to save the changes

Video Tamper

This is to detect if the camera has been tampered with and surveillance is compromised. You can set up tamper proof notifications to alert the system manager to check the camera.

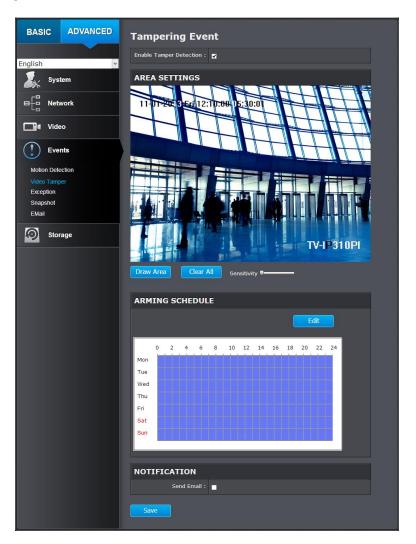

Enable	Check this box to enable tamper detection. Click Save
Tamper	to save the settings.
Detection:	

Draw Area: Click Draw Area button to start drawing. Click and drag on the area you want to set up the tamper detection. You can setup only one area for tamper detection. Click **Stop Drawing** to stop drawing motion detection areas. The gray block represents the detection area.



Sensitivity:	Move the slider to adjust detection sensitivity.
Clear All:	Click this button to clear all the set up areas.

Arming Schedule

Edit:			Edit to edit ule window v	the recordin vill pop up.	g schedule.	The Edit
	E	dit Sch	edule			
) IIA	Tue Wed Thu Fri Day Continuous	Sat Sun		
		Period	Start Time	End Time	Record Type	
		1	00: 00	00: 00	Continuous	¥
		2	00: 00	00:00	Continuous	~
		3	00:00	00:00	Continuous	~
		4	00:00	00:00	Continuous	~
		5	00:00	00:00	Continuous	~
		6	00:00	00:00	Continuous	~
		7	00:00	00:00	Continuous	~
		8	00:00	00:00	Continuous	~
			o Week Select All	🗌 Fri 🗌 Sat 🗌 Sun 🚦	Сору	

- 1. Select day of the week you want to edit.
- 2. Select **All Day** or **Customized** schedule of the day.

OK Cancel

- 3. Set the time period and the event you want to trigger the video recording **continuous** (always recording) or **motion detection**.
- 4. Click **Select All** or the weekday you want to have the same schedule on different day.
- Click another day of the week by clicking on its tab to set the next schedule. Click OK when you have finished your settings.

Notification

Send Email: Check this box to send an e-mail notification when motion is detected.

TRENDnet User's Guide

Exception

Provide notifications for other system events, set up your notifications here.

BASIC ADVANCED	System Notification
English	Exception Type: Storage Full
System	NOTIFICATION
⊟ Network	Send Email :
Video	Save
Events	
Motion Detection Video Tamper Exception	
Snapshot Email	
Storage	

Notification	
Exception Type:	First, choose the exception type, and then choose the corresponding action.
Send Email:	Check this box to send an e-mail notification when motion is detected.

<u>Snapshot</u>

You can set up your camera to continuously taking snapshots or taking snapshots only when events happening.

BASIC ADVANCED	Snapshot		
English	CONTINUOUS		
System	Enable :		
	Format :	JPEG	4
■ E Network	Resolution :	1920*1080	2
Video	Quality :	High	4
Events	Interval :	0	millisecon
Motion Detection	EVENT-TRIGGEREI	כ	
Video Tamper	Enable :		
Exception Snapshot	Format :	JPEG	·
Email	Resolution :	1920*1080	2
Storage	Quality :	High	
	Interval :	0	millisecon
	Capture Number :	6	
	Save		

Continuous					
Enable:	Check this box to take snapshots continuously.				
Format:	Save snapshots in JPEG format				
Resolution:	Uses the same resolution set in Video Format for the snapshot resolution.				
Quality:	Choose a compression quality for snapshots.				
Interval:	State the time interval between snapshots. The default interval is 10 seconds.				

Event triggered	
Enable:	Check this box to take snapshots when an event is occurred.
Format:	Save snapshots in JPEG format
Resolution:	Uses the same resolution set in Video Format for the snapshot resolution.
Quality:	Choose a compression quality for snapshot.
Interval:	State the time interval between this series of snapshots. The default interval is 1 second.
Capture Number:	State how many snapshots you want to take in a single triggered event. Default: 3 pictures.

TV-IP310PI

Email

Set up email accounts for notifications.

BASIC ADVANCED	Email Account	Settings				
English	SENDER					
English 🗸	Sender :					
	Sender's Address :					
	SMTP Server :					
Video	SMTP Port :	25				
Events	Enable SSL :					
Motion Detection	Interval :	25 🔽 Attach Image				
Video Tamper	Authentication :					
Exception Snapshot	User Name :					
Email	Password :					
Storage	Confirm :					
	RECEIVER					
	Receiver1 :					
	Receiver1's Address :					
	Receiver2 :					
	Receiver2's Address :					
	Receiver3 :					
	Receiver3's Address :					
	Save					

Sender

Enter the name to be appeared as the email sender. Sender: **Sender's** Enter sender's email address. Address: **SMTP Server:** Simple Mail Transportation Protocol Server address, the outgoing email server address. It may be has

	address as your incoming email server, maybe not.				
	Please ask your email service provider for detail.				
SMTP Port:	Service port number for outgoing email.*				
Enable SSL:	Check this box if your service provider requires a SSL				
	secured connection.				
Attach	Check Attach Image if you want to send a snapshot				
Image/Interval:	image with the email notification and select the				
	interval of snapshots in seconds.				
Authentication:	Check this box if your server requires a password in				
	order to send email. Most email servers require				
	authentication when sending an email.				
User name:	Enter the user name of outgoing email account				
Password:	Enter the password				
Confirm:	Enter the password again to confirm that the				
	password was entered correctly.				
Click Save t	o save the chanaes				

Click **Save** to save the changes

Receiver	
Receiver 1:	The first receiver's name.
Receiver 1's Address:	The first receiver's email address.
Receiver 2:	The second receiver's name.
Receiver 2's Address:	The second receiver's email address.
Receiver 3:	The third receiver's name.
Receiver 3's	The third receiver's email address.
Address:	

Click Save to save the changes

*Note: Many ISPs does not allow service port 25 going through their network. Other popular ports are 587 and 465. Please consult your email service provider and ISP for detail.

Network Storage

Network Storage

Network Storage must be setup before it can be managed. For storage management, please refer to the next section.

The TV-IP310PI supports two formats of network storage file systems: NFS and CIFS. NFS, Network File System, is natively supported by Linux computers and most NAS, Network Attached Storage. CIFS, Common Internet File System, is natively supported by Windows[®] systems and now is generally supported by Linux. (OS X[®] file sharing is not standard SMB and not compatible as a network storage disk here.)

You can add up to 8 network storages for your camera. The recordings will subsequently be stored in these spaces. Save video from the first storage and then the next when the first one is full. Click on the entry to change the settings and click Save to save the settings.

BASIC	ADVANCED	Network Storage					
English	, i i i i i i i i i i i i i i i i i i i	No.	Туре	Server Address	File Path	Capacity(GB)	
	System		NAS	10.10.10.3	/smb	10	
■ Netv		SME	B/CIF5 🗸	User Name User	Password ••••		
Bto Netv	vork		NAS				
Vide	0		NAS				
Ever	nts		NAS				
	\odot		NAS				
Stor	age	6	NAS				
Storage Ma			NAS				
Network Sto FTP Server		8	NAS				
		Sa	ve				

No:	The sequential number of the network storage.
Type:	The type of storage.
Server	Enter the IP address of your network storage.
Address:	
File Path:	Enter the shared folder as file path for network storage. You can create a folder under the shared folder and make it a network volume here. Just create the folder and enter the correct path name here.
Capacity:	Enter the size of the disk space you want to assign for this storage. The minimum disk space requirement is 8GB. If you do not want to limit the size and use the full physical disk space, put number 0 in this field.
File System:	Choose between NFS or CIFS for file system. If you assign the network storage on a Windows [®] computer, set it to CIFS.
User Name:	Enter the user name if the network storage requires user name and password. Enter any non-blank letters if no authentication is required.
Password:	Enter the password to access the network storage. Enter any non-blank letters if no authentication is required.

Click **Save** to save the changes. The camera may reboot to make the network storage available. Go to the next section to format and manage your network storage.



Tip: To create a network storage on your Windows[®] based system, create a shared folder and then test your set up with another computer. Enter the IP address of the computer here and enter the shared folder name with a leading forward slash. For example, if you have a shared folder named "SMB", enter "/SMB" in the **File Path**.

Storage Management

Network Storage must be setup before it can be managed. To setup storage, please refer to the previous section.

FTP Server



Enable Snapshot to FTP:	Check this box if you want to store snapshots on the FTP.
Server Address:	Enter the FTP server IP address.
Port:	Enter the service port number of the FTP server.
User	Check Anonymous if the FTP server does not require
Name/Anonymous	authentication. Enter the User Name if the FTP
:	server requires authentication.
Password:	Enter the password of the FTP account.
Confirm:	Enter the password again to make sure the password
	was entered correctly.
Directory	When saving snapshots on an FTP server, they can
Structure:	be saved in a single place or organized with
	meaningful directory names.
	• Save in root directory: You can choose to store
	all files in the same folder of FTP login.
	• Save in directory: Structure your folders with
	camera name or IP address.
Directory:	• Use Camera Name: Use the camera name to
	organize the saved files.
	• Use Camera IP: Use the camera IP address to
	organize the saved files.

Appendix

Direct video access - RTSP

To access the video directly through RTSP, just visit the camera IP address on port 554 by default. For example: 192.168.10.30:554 use the admin or user password the login.


Direct video access - HTTP

To access the video directly through http, just visit the camera IP address with "/Streaming/channels/2/httpPreview" as affix on port 80. For example: 192.168.10.30/Streaming/channels/2/httpPreview use the admin or user password the login.

Get better video stream on TRENDnet View Pro

The TRENDnet View Pro is installing the TV-IP310PI sub stream video by default for better connectivity. If your TRENDnet View Pro server is located on the same local network with your camera and you have good enough available bandwidth, you can change the setting on TRENDnet View Pro to get the main stream RTSP video with better picture quality. The default main stream video bitrate is 4,096Kbps.

To change the setting, browse to your camera, then right click on the camera name. Click **Camera Setup Wizard** ... to invoke the setup window.

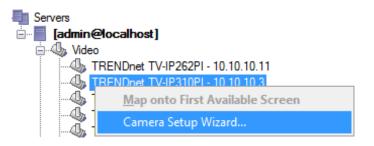

Click Next to setup the camera.

Camera Setup Wizard - [admin@localhost]				
	Camera Setup			
	This wizard will guide you through the process of setting up camera. You will be able to add, configure or remove camera on a server you are connected to.			
	Skip introduction page next time			
	To continue, press Next.			
	< Back Next > Cancel			

Select the camera and then click Next.

Camera Setup Wizard - [admi	in@localhost]
Camera choice Select one or more devices to setup	
Use the list below to select one or more devices, which you proceed with setup.	would like to set up. Press Next to
Title	Device Name
Add New Devices	
Network Devices (IP Camera, Video Server)	Media Source
Review or Modify Existing Devices	
4 TRENDnet TV-IP262PI - 10.10.10.11	Media Source\038
TRENDnet TV-IP310PI - 10.10.10.3	Media Source\037
UTRENDnet TV-IP320PI - 10.10.10.13	Media Source\030
United TRENDnet TV-IP321PI - 10.10.10.20	Media Source \031 🗸
Copy to Clipboard	
< Bac	k Next > Cancel

Click **Property** to setup the camera property.

Camera Setup Wizard - [admin@localhost]				
Camera device properties Set up camera device properties				
Please configure the device and set up video device options. Click Next to proceed then. Device title: TRENDnet TV-IP310PI - 10.10.10.3				
Properties This allows to tune device specific properties. Note that changes of the options have effect immediately. Delete The device is dynamic and can be deleted. Delete Device is disabled on server, no data grabbing happens				
Device is disabled on server, no data grabbing happens Device output is hidden, not listed as available < Back				

Select **Video Input** tab. And then choose **RTSP (RFC 2326)** mainstream video. Click **RTSP** tab if you want to check or change the default RTSP settings.

			Proper	ties		×
Frame Adj	ustments	RTSP	Model	External P	TZ Control	Dewarp
Access	Video Ir	nput	Video Cor	figuration	Audio	Events
		ection	for multich	annel device	es	
Defa	ault					\sim
Video	o source to	I R			Create	
M-JF Auto M-JF RTS		HTTP HTTP 26) lease re		ce manuar o levice capal		~

Click Next or make your changes through the wizard .

Camera Setup Wizard - [admin@localhost]	Camera Setup Wizard - [admin@localhost]
Motion analysis Set up motion information analysis for video stream	Data recording Set up data recording feature properties
Use controls below to set up motion analysis and detection for the video feed from capture devices. Click Next to proceed then.	Please set up recording properties and select data streams you would like to have recorded disk. Use Global Recording Properties button to review archive disk drives and space quota Click Next to proceed.
No Motion Detection	Use schedule recording
Camera Motion Detection	Stream Type Comment
The motion analysis will be fulfilled by a capable edge device (camera); the option is recommended for network, cameras and is subject to availability depending on device model. Please configure motion analysis device dependent option in camera properties.	Video Advancest properties
O Software Motion Detection	
The motion detection will take place in TREND net/TEW Pap server software; software analysis is sensitive to input mage guality and availability of CPU resources, the option is recommended for raw video frame grabber hardware.	٢
Properties	Global Recording Properties
Camera Setup Wizard - [admin@localhost]	Camera Setup Wizard - [admin@localhost]
Action summary Review selected action details	Wizard Completed
The wizard is ready to apply changes to server. The summary of the changes is shown below. Press Next button to apply the changes.	The ward has completed carriers configuration: 1
Action: Setup existing camera(s)	succeeded.
Cenesa TF980-bet Tv9310F1.010.01.019.013 [Mode Source-0.00] Enablet: Yes Mode Tv950 [Mode Source-0.00] Mode Tv950 [Mode Mode Source-0.00] Record Wate: No Record Wate: No Reco	
Enabled Yes Valit: Vergression: None Motion-Angine: Databled Record Video: No Record Video: No	Contrue with reting up suffer carees
Enabled: Yee Value: Yee Mittor: Analysis: DataBelled Record Wattor Information: No Record Mattor Information: No Record Adult: No	Continue with retirg up another camers To dose wized, press Frain.

Regulations

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

RoHS

This product is RoHS compliant.



Europe – EU Declaration of Conformity

This device complies with the essential requirements of the Directive 2004/108/EC and 2006/95/EC. The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the Directive 2004/108/EC and 2006/95/EC:

CE

- EN 60950-1:2006+A11:2009+A1:2010+A12:2011
- IEC 60950-1:2005 (2nd Edition) Am 1:2009 Safety of Information Technology Equipment
- EN 55022: 2010 Class A
- EN 61000-3-2: 2006 + A1: 2009 + A2: 2009
- EN 61000-3-3: 2008
- EN 50130-4: 2011

Česky [Czech]	TRENDnet tímto prohlašuje, že tento TV-IP310PI je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2004/108/ES a 2006/95/ES.
Dansk [Danish]	Undertegnede TRENDnet erklærer herved, at følgende udstyr TV- IP310PI overholder de væsentlige krav og øvrige relevante krav i direktiv 2004/108/EF og 2006/95/EF.
Deutsch [German]	Hiermit erklärt TRENDnet, dass sich das Gerät TV-IP310PI in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2004/108/EG und 2006/95/EG befindet.
Eesti [Estonian]	Käesolevaga kinnitab TRENDnet seadme TV-IP310PI vastavust direktiivi 2004/108/EÜ ja 2006/95/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
English	Hereby, TRENDnet, declares that this TV-IP310PI is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC and 2006/95/EC.
Español [Spanish]	Por medio de la presente TRENDnet declara que el TV-IP310PI cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2004/108/CE y 2006/95/CE.
Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑΤRENDnet ΔΗΛΩΝΕΙ ΟΤΙ ΤV-ΙΡ310ΡΙ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ

	ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2004/108/ΕΚ, 2006/95/ΕΚ και.
Français [French]	Par la présente TRENDnet déclare que l'appareil TV-IP310PI est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2004/108/CE, 2006/95/CE et.
Italiano[Italian]	Con la presente TRENDnet dichiara che questo TV-IP310PI è conforme ai requisiti essenziali ed alle altre disposizioni pertinent stabilite dalla direttiva 2004/108/CE e 2006/95/CE.
Latviski [Latvian]	AršoTRENDnetdeklarē, ka TV-IP310PI atbilstDirektīvas 2004/108/EK un 2006/95/EK būtiskajāmprasībām un citiemar to saistītajiemnoteikumiem.
Lietuvių [Lithuanian]	Šiuo TRENDnet deklaruoja, kad šis TV-IP310PI atitinka esminius reikalavimus ir kitas 2004/108/EB ir 2006/95/EB Direktyvos nuostatas.
Nederlands [Dutch]	Hierbij verklaart TRENDnet dat het toestel TV-IP310PI in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2004/108/EG en 2006/95/EG.
Malti [Maltese]	Hawnhekk, TRENDnet, jiddikjara li dan TV-IP310PI jikkonforma mal-ħtiģijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 2004/108/KE u 2006/95/KE.
Magyar [Hungarian]	Alulírott, TRENDnet nyilatkozom, hogy a TV-IP310PI megfelel a vonatkozó alapvető követelményeknek és az 2004/108/EK és a 2006/95/EK irányelv egyéb előírásainak.
Polski [Polish]	Niniejszym TRENDnet oświadcza, że TV-IP310PI jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 2004/108/WE i 2006/95/.
Português [Portuguese]	TRENDnet declara que este TV-IP310PI está conforme com os requisitos essenciais e outras disposições da Directiva2004/108/CE e 2006/95/CE.
Slovensko [Slovenian]	TRENDnet izjavlja, da je ta TV-IP310PI v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive2004/108/ES in 2006/95/ES.
Slovensky [Slovak]	TRENDnettýmtovyhlasuje, že TV-IP310PI spĺňazákladnépožiadavky a všetkypríslušnéustanoveniaSmernice 2004/108/ES a 2006/95/ES.
Suomi [Finnish]	TRENDnet vakuuttaa täten että TV-IP310PI tyyppinen laite on direktiivin2004/108/EY ja 2006/95/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska [Swedish]	Härmed intygar TRENDnet att denna TV-IP310PI står I överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2004/108/EG och 2006/95/EG.

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

• TV-IP310PI – 3 Years Warranty

If a product does not operate as warranted during the applicable warranty period, TRENDnet shall reserve the right, at its expense, to repair or replace the defective product or part and deliver an equivalent product or part to the customer. The repair/replacement unit's warranty continues from the original date of purchase. All products that are replaced become the property of TRENDnet. Replacement products may be new or reconditioned. TRENDnet does not issue refunds or credit. Please contact the point-of purchase for their return policies.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet within the applicable warranty period and providing a copy of the dated proof of the purchase. Upon proper submission of required documentation a Return Material Authorization (RMA) number will be issued. An RMA number is required in order to initiate warranty service support for all TRENDnet products. Products that are sent to TRENDnet for RMA service must have the RMA number marked on the outside of return packages and sent to TRENDnet prepaid, insured and packaged appropriately for safe shipment. Customers shipping from outside of the USA and Canada are responsible for return shipping fees. Customers shipping from outside of the USA are responsible for custom charges, including but not limited to, duty, tax, and other fees.

WARRANTIES EXCLUSIVE: IF THE TRENDNET PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDNET'S OPTION, REPAIR OR REPLACE. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

TRENDNET NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDNET'S PRODUCTS.

TRENDNET SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLECT, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDNET ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATE, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDNET'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

Some TRENDnet products include software code written by third party developers. These codes are subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL").

Go to http://www.trendnet.com/gpl or http://www.trendnet.com Download section and look for the desired TRENDnet product to access to the GPL Code or LGPL Code. These codes are distributed WITHOUT WARRANTY and are subject to the copyrights of the developers. TRENDnet does not provide technical support for these codes. Please go to http://www.gnu.org/licenses/gpl.txt or http://www.gnu.org/licenses/

lgpl.txt for specific terms of each license.

July 7, 2014

TV-IP310PI User's Guide V1.4

TRENDNET®

Product Warranty Registration

Please take a moment to register your product online. Go to TRENDnet's website at http://www.trendnet.com/register

> TRENDnet 20675 Manhattan Place Torrance, CA 90501. USA

Copyright ©2014. All Rights Reserved. TRENDnet.